


CHEVROLET & GMC VAN APPLICATIONS

Grip Step™ Running Boards

- Fleet-approved, expanded metal treads for maximum traction and safety
- Powder-coated aluminum construction to be strong, lightweight and rust-free

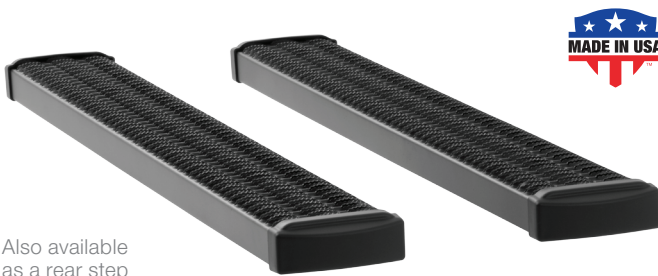

Also available
as a rear step

MegaStep® Running Boards

- Nerf bar styling with the convenience of a full-length running board step
- Extruded aluminum core to be strong, lightweight and rust-free



Also available
as a rear step

O-Mega II™ Oval Steps

- Powder-coated aluminum construction with aggressive, modern style
- Aluminum step pads with circular treads for a long-lasting, non-skid step



Also available
as a rear step



Grip Step™ 7" Running Boards

Make / Model	Body Style	Years	Cab Length	Fuel Type	Product Notes	Kits (Boards and Brackets)	Boards Only	Brackets Only	Mount Type	Foot Notes
						Black#	Black#	Bracket#		
Chevrolet										
Express 1500	Regular	03 - 14	--	--	36" cab only	415036-400340	415036	400340	Body	--
		03 - 14	135" WB	--	36" & 98" steps	415100-400344	415100	400344	Body	--
		03 - 14	135" WB	--	98" steps	415098-401345	415098	401345	Body	--
Express 2500	Regular	03 - 18	--	--	36" cab only	415036-400340	415036	400340	Body	--
		03 - 18	135" WB	--	36" & 98" steps	415100-400344	415100	400344	Body	--
		03 - 18	135" WB	--	98" steps	415098-401345	415098	401345	Body	--
		03 - 18	155" WB	--	114" steps	415114-401346	415114	401346	Body	--
		03 - 18	155" WB	--	36" & 114" steps	415110-401347	415110	401347	Body	--
Express 3500	Cutaway	03 - 18	--	--	36" cab only	415036-400341	415036	400341	Body	--
	Regular	03 - 18	--	--	36" cab only	415036-400340	415036	400340	Body	--
		03 - 18	135" WB	--	36" & 98" steps	415100-400344	415100	400344	Body	--
		03 - 18	135" WB	--	98" steps	415098-401345	415098	401345	Body	--
		03 - 18	155" WB	--	114" steps	415114-401346	415114	401346	Body	--
03 - 18	155" WB	--	36" & 114" steps	415110-401347	415110	401347	Body	--		
Express 4500	Cutaway	09 - 18	--	--	36" cab only	415036-400341	415036	400341	Body	--
GMC										
Savana 1500	Regular	03 - 14	--	--	36" cab only	415036-400340	415036	400340	Body	--
		03 - 14	135" WB	--	36" & 98" steps	415100-400344	415100	400344	Body	--
		03 - 14	135" WB	--	98" steps	415098-401345	415098	401345	Body	--
Savana 2500	Regular	03 - 18	--	--	36" cab only	415036-400340	415036	400340	Body	--
		03 - 18	135" WB	--	36" & 98" steps	415100-400344	415100	400344	Body	--
		03 - 18	135" WB	--	98" steps	415098-401345	415098	401345	Body	--
		03 - 18	155" WB	--	114" steps	415114-401346	415114	401346	Body	--
		03 - 18	155" WB	--	36" & 114" steps	415110-401347	415110	401347	Body	--
Savana 3500	Cutaway	03 - 18	--	--	36" cab only	415036-400341	415036	400341	Body	--
	Regular	03 - 18	--	--	36" cab only	415036-400340	415036	400340	Body	--
		03 - 18	135" WB	--	36" & 98" steps	415100-400344	415100	400344	Body	--
		03 - 18	135" WB	--	98" steps	415098-401345	415098	401345	Body	--
		03 - 18	155" WB	--	114" steps	415114-401346	415114	401346	Body	--
03 - 18	155" WB	--	36" & 114" steps	415110-401347	415110	401347	Body	--		
Savana 4500	Cutaway	09 - 18	--	--	36" cab only	415036-400341	415036	400341	Body	--



MegaStep® 6 1/2" Running Boards

Make / Model	Body Style	Years	Cab Length	Fuel Type	Product Notes	Kit (Boards and Brackets)	Boards Only	Brackets Only	Mount Type	Foot Notes
						Polished#	Polished#	Bracket#		
Chevrolet										
Express 1500	Regular	03 - 14	--	--	36" cab only	575036-570340	575036	570340	Body	--
		03 - 14	135" WB	--	36" & 98" steps	575100-570344	575100	570344	Body	--
		03 - 14	135" WB	--	98" steps	575098-571345	575098	571345	Body	--
Express 2500	Regular	03 - 18	--	--	36" cab only	575036-570340	575036	570340	Body	--
		03 - 18	135" WB	--	36" & 98" steps	575100-570344	575100	570344	Body	--
		03 - 18	135" WB	--	98" steps	575098-571345	575098	571345	Body	--
		03 - 18	155" WB	--	114" steps	575114-571346	575114	571346	Body	--
Express 3500	Cutaway	03 - 18	--	--	Cab only	575036-570341	575036	570341	Body	--
	Regular	03 - 18	--	--	36" cab only	575036-570340	575036	570340	Body	--
		03 - 18	135" WB	--	36" & 98" steps	575100-570344	575100	570344	Body	--
		03 - 18	135" WB	--	98" steps	575098-571345	575098	571345	Body	--
		03 - 18	155" WB	--	114" steps	575114-571346	575114	571346	Body	--
Express 4500	Cutaway	09 - 18	--	--	Cab only	575036-570341	575036	570341	Body	--
GMC										
Savana 1500	Regular	03 - 14	--	--	36" cab only	575036-570340	575036	570340	Body	--
		03 - 14	135" WB	--	36" & 98" steps	575100-570344	575100	570344	Body	--
		03 - 14	135" WB	--	98" steps	575098-571345	575098	571345	Body	--
Savana 2500	Regular	03 - 18	--	--	36" cab only	575036-570340	575036	570340	Body	--
		03 - 18	135" WB	--	36" & 98" steps	575100-570344	575100	570344	Body	--
		03 - 18	135" WB	--	98" steps	575098-571345	575098	571345	Body	--
		03 - 18	155" WB	--	114" steps	575114-571346	575114	571346	Body	--
Savana 3500	Cutaway	03 - 18	--	--	Cab only	575036-570341	575036	570341	Body	--
	Regular	03 - 18	--	--	36" cab only	575036-570340	575036	570340	Body	--
		03 - 18	135" WB	--	36" & 98" steps	575100-570344	575100	570344	Body	--
		03 - 18	135" WB	--	98" steps	575098-571345	575098	571345	Body	--
		03 - 18	155" WB	--	114" steps	575114-571346	575114	571346	Body	--
Savana 4500	Cutaway	09 - 18	--	--	Cab only	575036-570341	575036	570341	Body	--



O-Mega II™ 6" Oval Steps

Make / Model	Body Style	Years	Cab Length	Fuel Type	Product Notes	Kits (Steps and Brackets)		Steps Only		Brkts Only	Mount Type	Foot Note
						Silver#	Black#	Silver#	Black#	Brkt#		
Chevrolet												
Express 1500	Regular	03 - 14	--	--	36" cab only	583036-570340	584036-570340	583036	584036	570340	Body	--
		03 - 14	135" WB	--	36" & 98" steps	583100-570344	584100-570344	583100	584100	570344	Body	--
		03 - 14	135" WB	--	98" steps	583098-571345	584098-571345	583098	584098	571345	Body	--
Express 2500	Regular	03 - 18	--	--	36" cab only	583036-570340	584036-570340	583036	584036	570340	Body	--
		03 - 18	135" WB	--	36" & 98" steps	583100-570344	584100-570344	583100	584100	570344	Body	--
		03 - 18	135" WB	--	98" steps	583098-571345	584098-571345	583098	584098	571345	Body	--
		03 - 18	155" WB	--	114" steps	583114-571346	584114-571346	583114	584114	571346	Body	--
Express 3500	Cutaway	03 - 18	--	--	--	583036-570341	584036-570341	583036	584036	570341	Body	--
	Regular	03 - 18	--	--	36" cab only	583036-570340	584036-570340	583036	584036	570340	Body	--
		03 - 18	135" WB	--	36" & 98" steps	583100-570344	584100-570344	583100	584100	570344	Body	--
		03 - 18	135" WB	--	98" steps	583098-571345	584098-571345	583098	584098	571345	Body	--
		03 - 18	155" WB	--	114" steps	583114-571346	584114-571346	583114	584114	571346	Body	--
Express 4500	Cutaway	09 - 18	--	--	--	583036-570341	584036-570341	583036	584036	570341	Body	--
GMC												
Savana 1500	Regular	03 - 14	--	--	36" cab only	583036-570340	584036-570340	583036	584036	570340	Body	--
		03 - 14	135" WB	--	36" & 98" steps	583100-570344	584100-570344	583100	584100	570344	Body	--
		03 - 14	135" WB	--	98" steps	583098-571345	584098-571345	583098	584098	571345	Body	--
Savana 2500	Regular	03 - 18	--	--	36" cab only	583036-570340	584036-570340	583036	584036	570340	Body	--
		03 - 18	135" WB	--	36" & 98" steps	583100-570344	584100-570344	583100	584100	570344	Body	--
		03 - 18	135" WB	--	98" steps	583098-571345	584098-571345	583098	584098	571345	Body	--
		03 - 18	155" WB	--	114" steps	583114-571346	584114-571346	583114	584114	571346	Body	--
Savana 3500	Cutaway	03 - 18	--	--	--	583036-570341	584036-570341	583036	584036	570341	Body	--
	Regular	03 - 18	--	--	36" cab only	583036-570340	584036-570340	583036	584036	570340	Body	--
		03 - 18	135" WB	--	36" & 98" steps	583100-570344	584100-570344	583100	584100	570344	Body	--
		03 - 18	135" WB	--	98" steps	583098-571345	584098-571345	583098	584098	571345	Body	--
		03 - 18	155" WB	--	114" steps	583114-571346	584114-571346	583114	584114	571346	Body	--
Savana 4500	Cutaway	09 - 18	--	--	--	583036-570341	584036-570341	583036	584036	570341	Body	--