


FREIGHTLINER VAN APPLICATIONS

Grip Step™ Running Boards

- Fleet-approved, expanded metal treads for maximum traction and safety
- Powder-coated aluminum construction to be strong, lightweight and rust-free

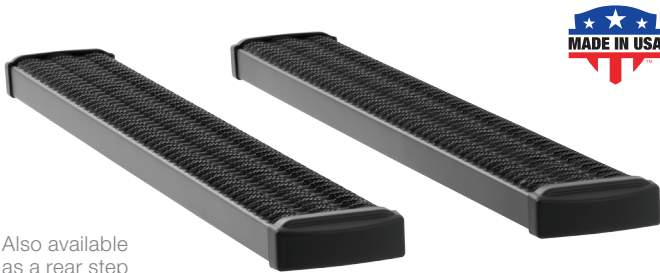

Also available
as a rear step

MegaStep® Running Boards

- Nerf bar styling with the convenience of a full-length running board step
- Extruded aluminum core to be strong, lightweight and rust-free



Also available
as a rear step

O-Mega II™ Oval Steps

- Powder-coated aluminum construction with aggressive, modern style
- Aluminum step pads with circular treads for a long-lasting, non-skid step



Also available
as a rear step

Tuff Guard® Bumper Guards

- Powder-coated stainless steel construction for maximum corrosion resistance
- 3" diameter, 14-gauge stainless steel tube design for added vehicle protection





Grip Step™ 7" Running Boards

Make / Model	Body Style	Years	Cab Length	Fuel Type	Product Notes	Kits (Boards and Brackets)	Boards Only	Brackets Only	Mount Type	Foot Notes
						Black#	Black#	Bracket#		
Freightliner										
Sprinter 2500	--	07 - 17	--	--	Rear step	415254-570748	415254	570748	Body	1
		07 - 17	--	--	36" & 98" steps	415100-400744	415100	400744	Rocker	--
		07 - 17	--	--	36" cab only	415036-400741	415036	400741	Rocker	--
		07 - 17	--	--	98" steps	415098-400745	415098	400745	Rocker	--
		07 - 17	--	--	54" passenger sliding door only	415254-400743	415254	400743	Rocker	--
Sprinter 3500	--	07 - 17	--	--	Rear step	415254-570748	415254	570748	Body	1
		07 - 17	--	--	36" & 98" steps	415100-400744	415100	400744	Rocker	--
		07 - 17	--	--	36" cab only	415036-400741	415036	400741	Rocker	--
		07 - 17	--	--	98" steps	415098-400745	415098	400745	Rocker	--
		07 - 17	--	--	54" passenger sliding door only	415254-400743	415254	400743	Rocker	--

1. Excludes 14+ with factory receiver hitch

MegaStep® 6 1/2" Running Boards

Make / Model	Body Style	Years	Cab Length	Fuel Type	Product Notes	Kit (Boards and Brackets)	Boards Only	Brackets Only	Mount Type	Foot Notes
						Polished#	Polished#	Bracket#		
Freightliner										
Sprinter 2500	--	07 - 17	--	--	Rear step	575254-570748	575254	570748	Body	1
		07 - 17	--	--	36" & 98" steps	575100-570744	575100	570744	Rocker	--
		07 - 17	--	--	36" cab only	575036-570741	575036	570741	Rocker	--
		07 - 17	--	--	98" steps	575098-570745	575098	570745	Rocker	--
Sprinter 3500	--	07 - 17	--	--	Rear step	575254-570748	575254	570748	Body	1
		07 - 17	--	--	36" & 98" steps	575100-570744	575100	570744	Rocker	--
		07 - 17	--	--	36" cab only	575036-570741	575036	570741	Rocker	--
		07 - 17	--	--	98" steps	575098-570745	575098	570745	Rocker	--

1. Excl. 14+ with factory trailer hitch

O-Mega II™ 6" Oval Steps

Make / Model	Body Style	Years	Cab Length	Fuel Type	Product Notes	Kits (Steps and Brackets)		Steps Only		Brkts Only	Mount Type	Foot Note
						Silver#	Black#	Silver#	Black#	Brkt#		
Freightliner												
Sprinter 2500	--	07 - 17	--	--	36" & 98" steps	583100-570744	584100-570744	583100	584100	570744	Rocker	--
		07 - 17	--	--	36" cab only	583036-570741	584036-570741	583036	584036	570741	Rocker	--
		07 - 17	--	--	98" steps	583098-570745	584098-570745	583098	584098	570745	Rocker	--
		07 - 17	--	--	Rear step	583254-570748	584254-570748	583254	584254	570748	Body	1
Sprinter 3500	--	07 - 17	--	--	36" & 98" steps	583100-570744	584100-570744	583100	584100	570744	Rocker	--
		07 - 17	--	--	36" cab only	583036-570741	584036-570741	583036	584036	570741	Rocker	--
		07 - 17	--	--	98" steps	583098-570745	584098-570745	583098	584098	570745	Rocker	--
		07 - 17	--	--	Rear step	583254-570748	584254-570748	583254	584254	570748	Body	1

1. Excludes 14+ with factory trailer hitch



Rear Steps

Make / Model	Years	Board Style	Kits (Step and Brackets)			Boards Only			Brkts Only	Foot Notes
			Polished#	Silver#	Black#	Polished#	Silver#	Black#	Brkt#	
Freightliner										
Sprinter 2500	07 - 17	Grip Step™	--	--	415254-570748	--	--	415254	570748	1
	07 - 17	MegaStep®	575254-570748	--	--	575254	--	--	570748	1
	07 - 17	O-Mega II™	--	583254-570748	584254-570748	--	583254	584254	570748	1
Sprinter 3500	07 - 17	Grip Step™	--	--	415254-570748	--	--	415254	570748	1
	07 - 17	MegaStep®	575254-570748	--	--	575254	--	--	570748	1
	07 - 17	O-Mega II™	--	583254-570748	584254-570748	--	583254	584254	570748	1

1. Excludes 14+ with factory receiver hitch

Tuff Guard® 3" Grille Guards

Make / Model	Style	Foot Notes	Years	Kits (Guard and Brackets)	Guard#	Bracket#
Freightliner						
Sprinter 2500 / 3500	Base	--	07 - 13	205530-205860	205530	205860
	Base	1	14 - 17	205530-205930	205530	205930
ProMaster 1500 / 2500 / 3500	Base	--	14 - 18	205530-205910	205530	205910

1. Will interfere with parking sensors