



Telephone Handset Cords

Instruction Leaflet

RS stock no.

182-4526

182-4532

182-4548

182-4560

182-4576

182-4582

Product

2.5 White

2.5m Oatmeal

2.5m Grey

5m White

5m Oatmeal

5m Grey

General

These handset cords give you much more freedom to move around while you are talking, without having to stretch or abandon the phone, and are ideal for wall mounted units.

Instructions

Before you start, check that the end of your handset has a socket as shown in figure 1, where the cord goes in. There will be a similar socket on the phone base.

1. Disconnect your telephone apparatus from the phone socket.
2. The connectors at each end of the existing handset cord will have a spring catch as shown in figure 2. Using the special catch-release tool, disconnect the handset cord from the phone base by pushing back the spring catch (figure 3) and gently pulling the cord free. Disconnect the other end of the cord from the handset in the same way.
3. Connect the new cord simply by pushing the connectors into the sockets on the phone base and the handset. First connect the short tail end into the handset, followed by the long end into the phone base.
4. Reconnect your telephone apparatus to the phone socket.

Figure 1

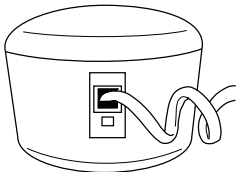


Figure 2


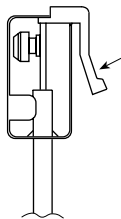


Figure 3



RS Components shall not be liable for any liability or loss of any nature (howsoever caused and whether or not due to RS Components' negligence) which may result from the use of any information provided in RS technical literature.

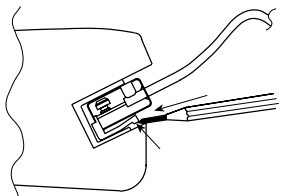