



**Instruction Leaflet  
Bedienungsanleitung**


UHF Clamp Jack **GB**

UHF-Klemmbuchse **D**

**Figures / Abbildung**

**D** **RS Best-Nr.**

546-2598

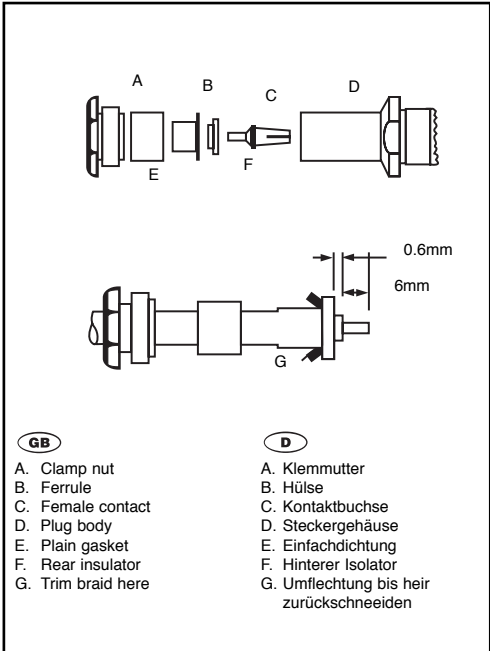

**Montageanweisungen**

Klemmutter und Einfachdichtung über das Kabel schieben. Kabelmantel um 8,7 mm zurückschneiden. Umflechtung auskämmen, und Hülse einsetzen. Dielektrikum auf das angegebene Maß zurückschneiden, und Mittelleiter verzinnen. Hinteren Isolator montieren, und Kontaktbuchse an das Kabel löten. Klemmutter und Einfachdichtung bis zur Hülse schieben. Vorderen Isolator auf die Kontaktbuchse schieben. Fertig montierten Einsatz in das Steckergehäuse drücken. Anschließend das Steckergehäuse festziehen.

RS Components haftet nicht für Verbindlichkeiten oder Schäden jedweder Art (ob auf Fahrlässigkeit von RS Components zurückzuführen oder nicht), die sich aus der Nutzung irgendwelcher der in den technischen Veröffentlichungen von RS enthaltenen Informationen ergeben.

**GB** **RS Stock No.**

546-2598

**Assembly instructions**

Place clamp nut and gasket over cable and cut back sheath 8.7mm. comb braid and insert ferrule. Trim dielectric to dimensions indicated and tin centre conductor. Mount rear insulator and solder contact to cable. Slide clamp nut and gasket up to ferrule. Fit front insulator onto contact. Engage in plug body and tighten.

RS Components shall not be liable for any liability or loss of any nature (howsoever caused and whether or not due to RS Components' negligence) which may result from the use of any information provided in RS technical literature.