

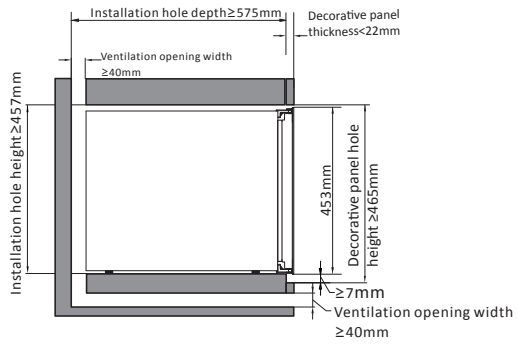
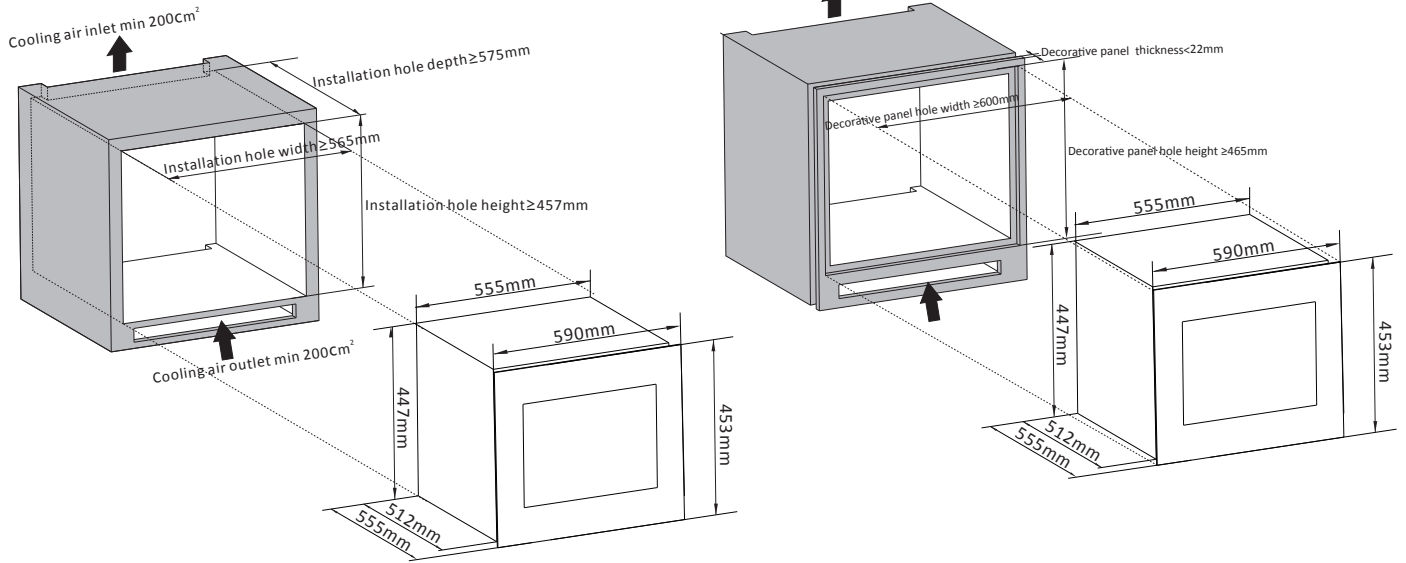




VI24

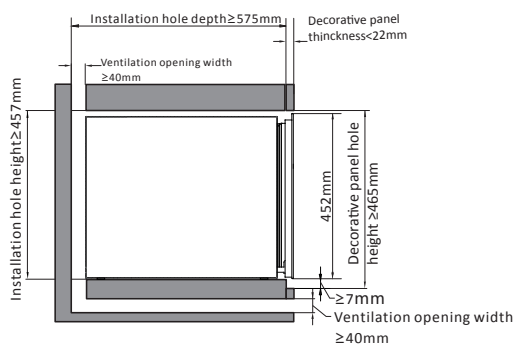



VI24SK

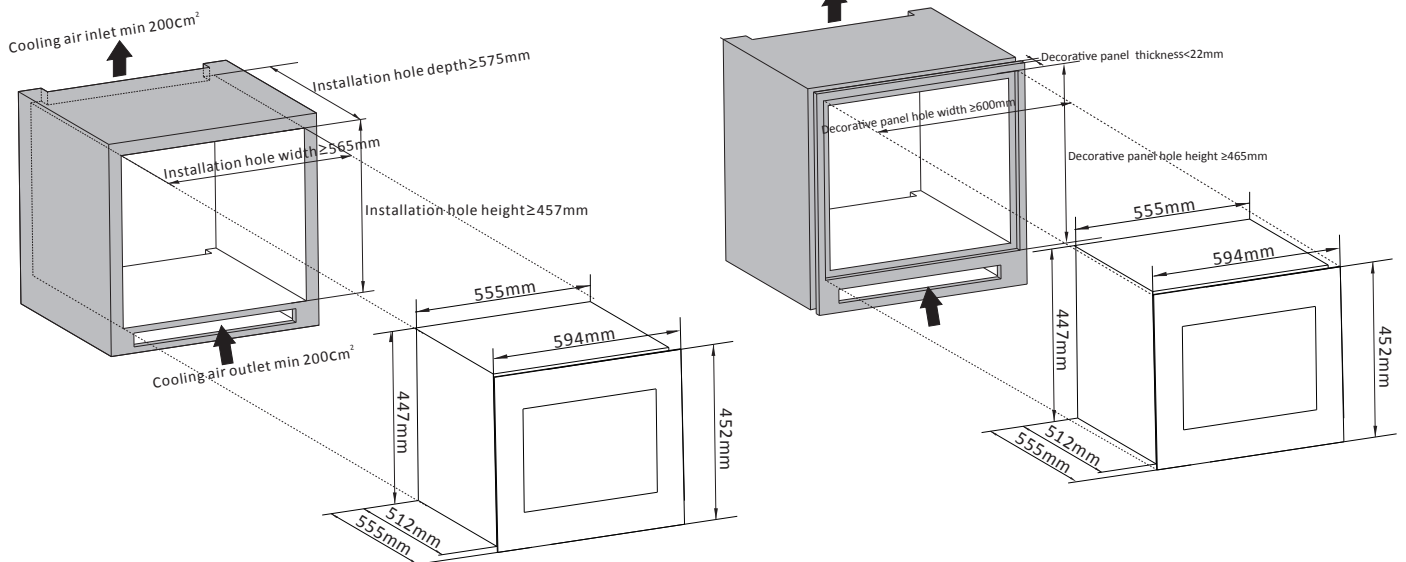


VI30

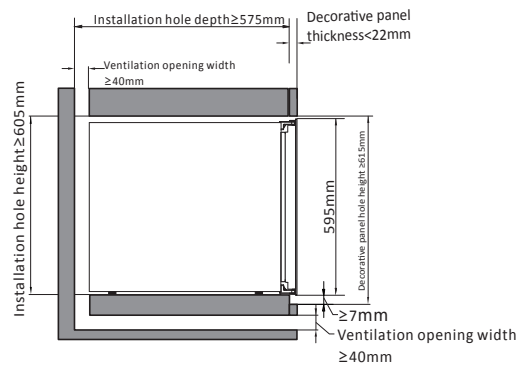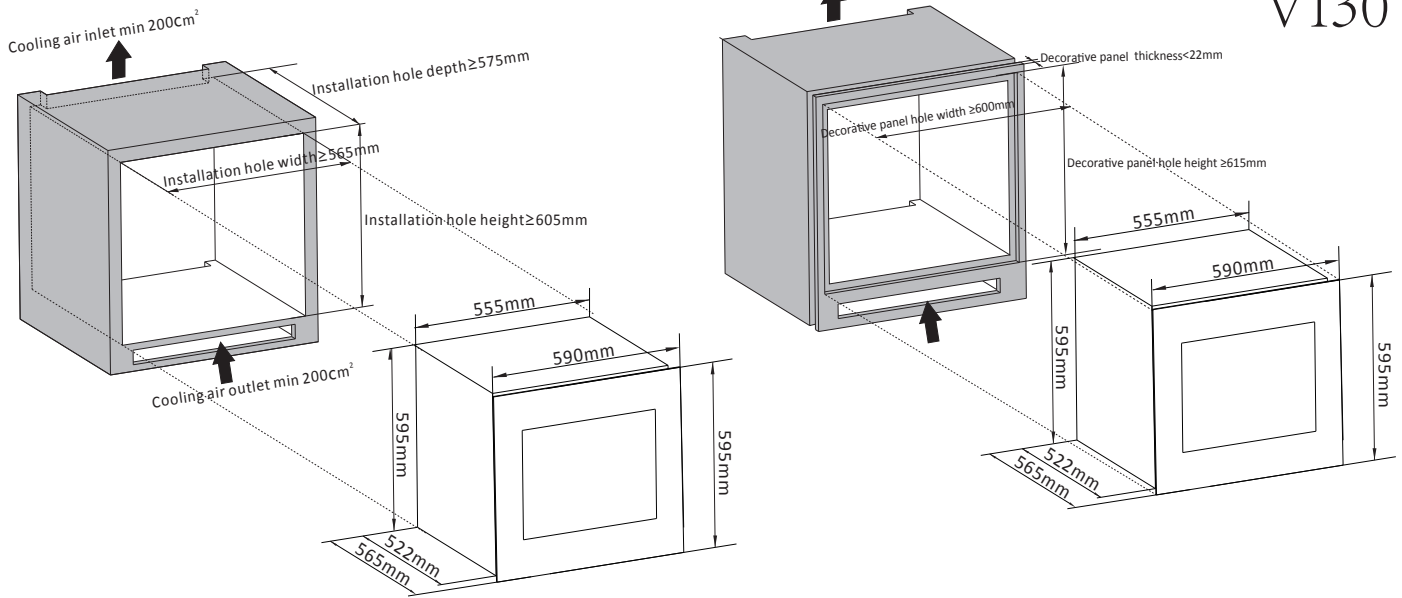




VI30SK

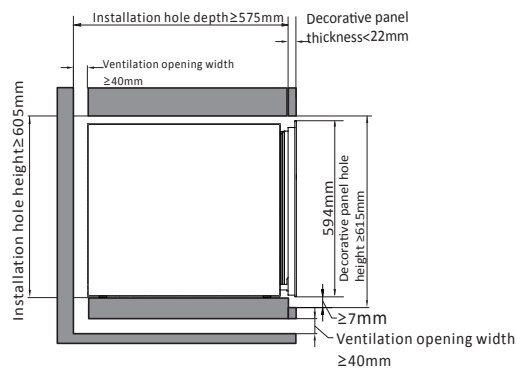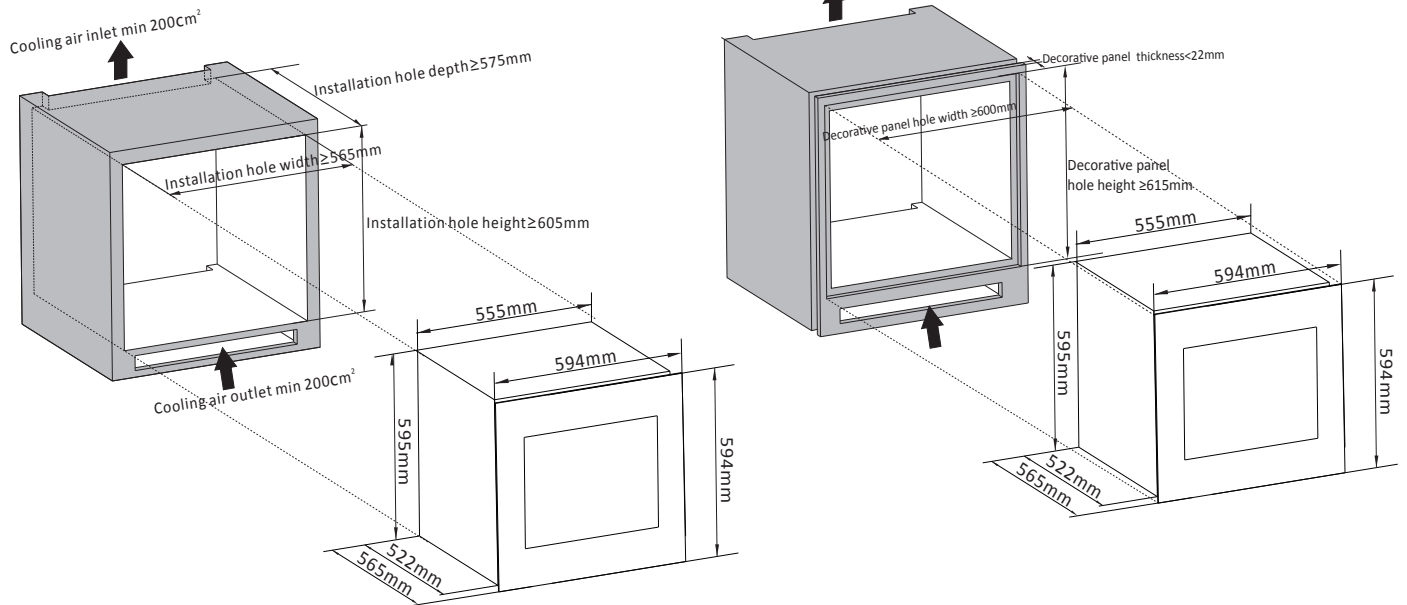



VI48

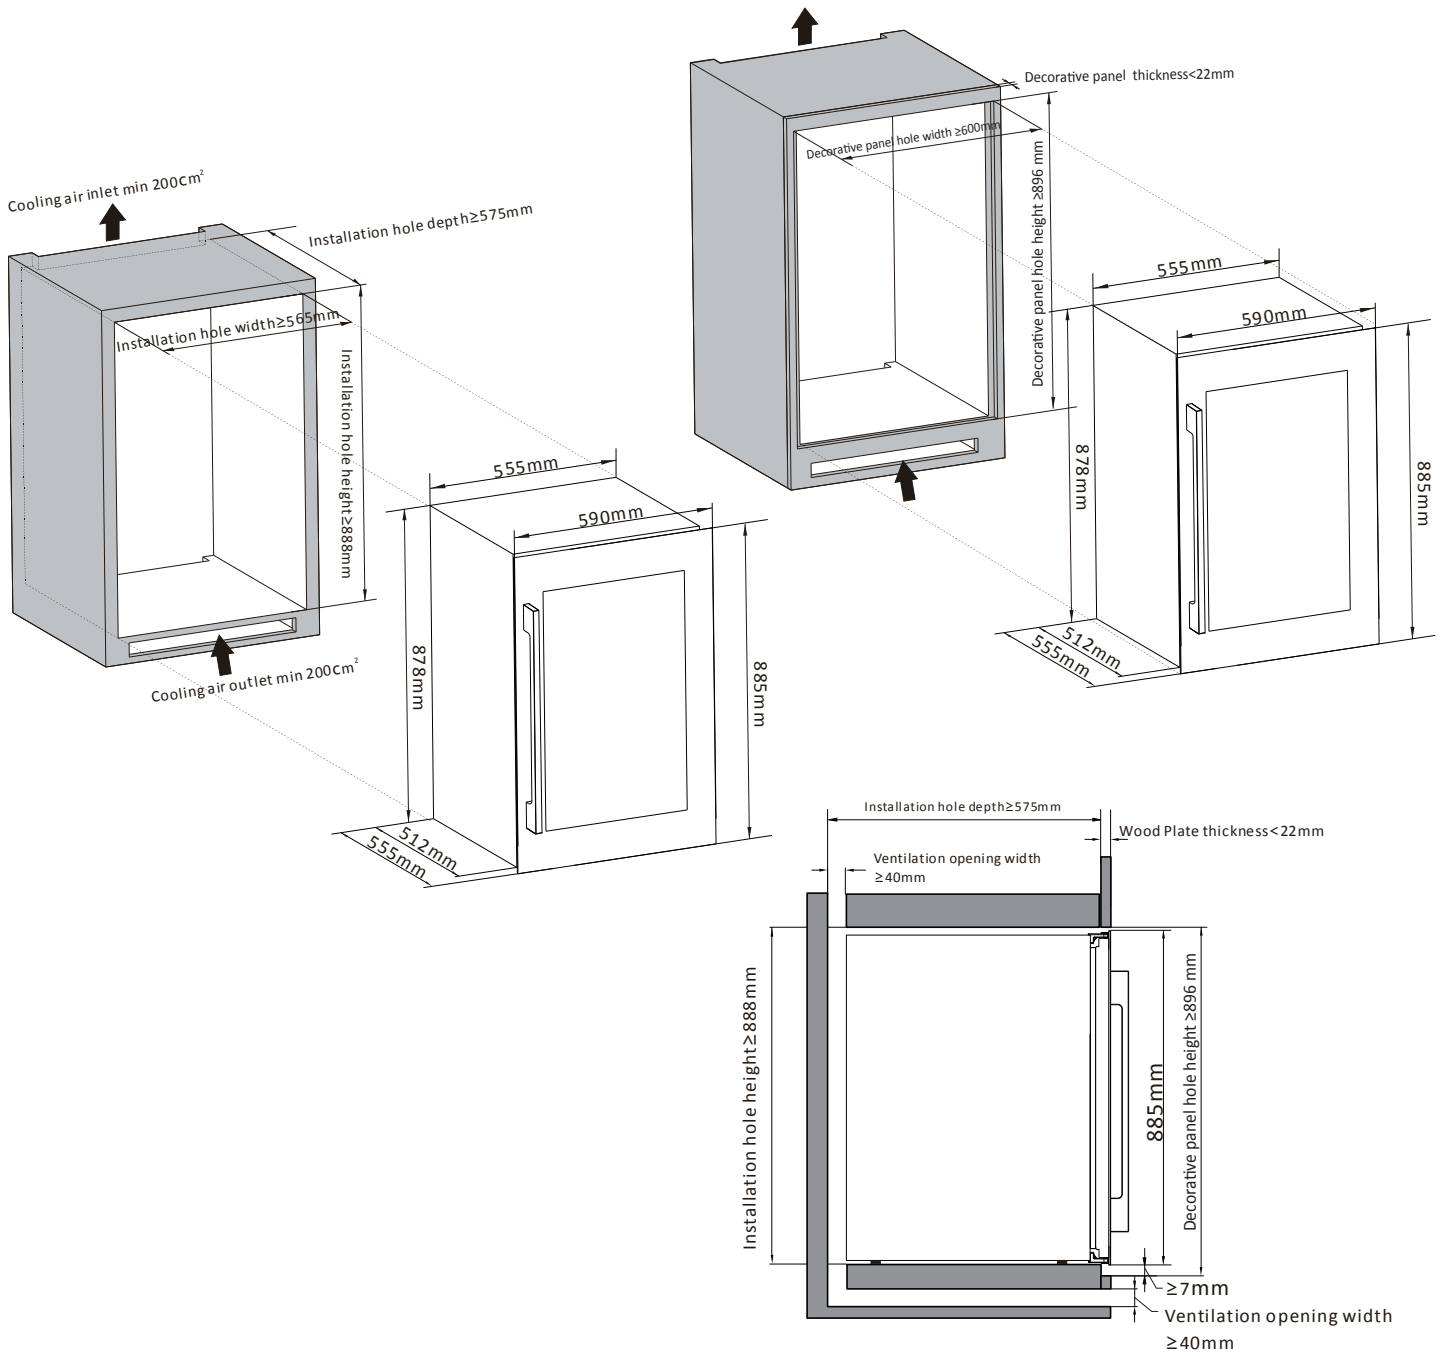



VI106

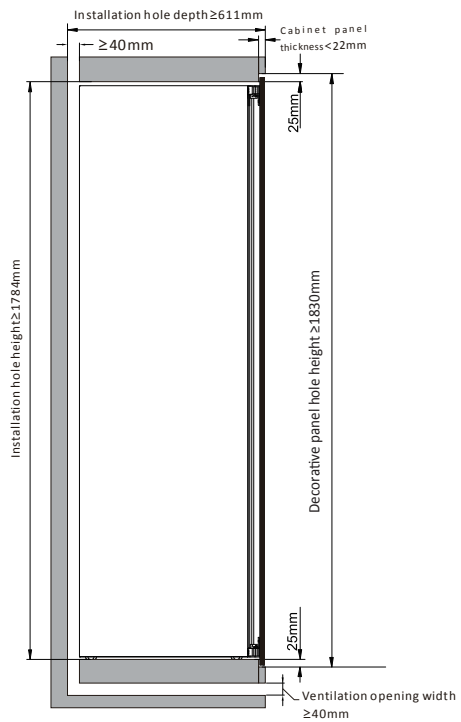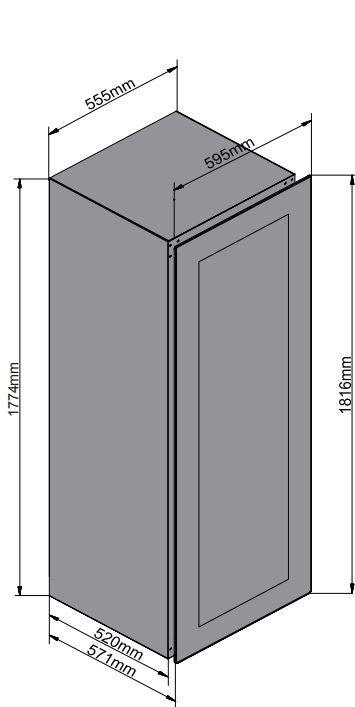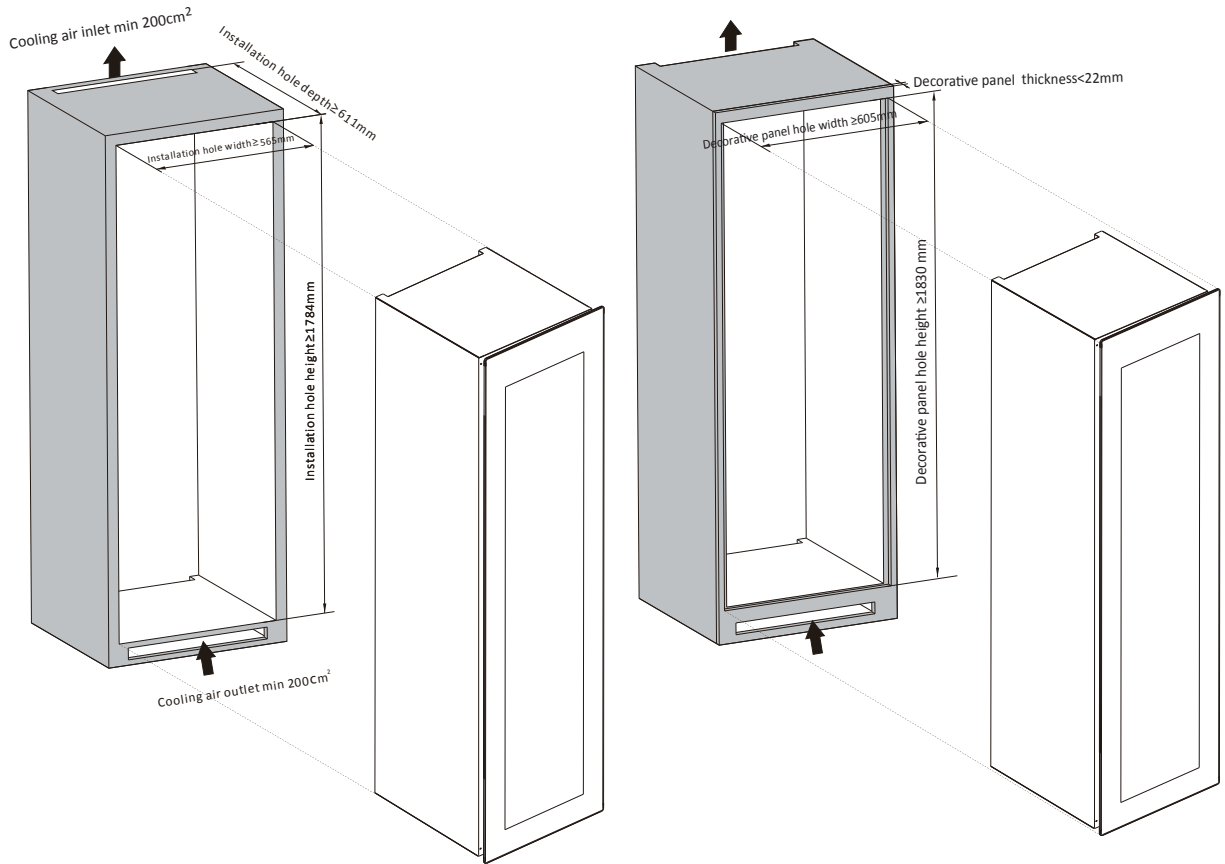



VI106 Integrated door panel

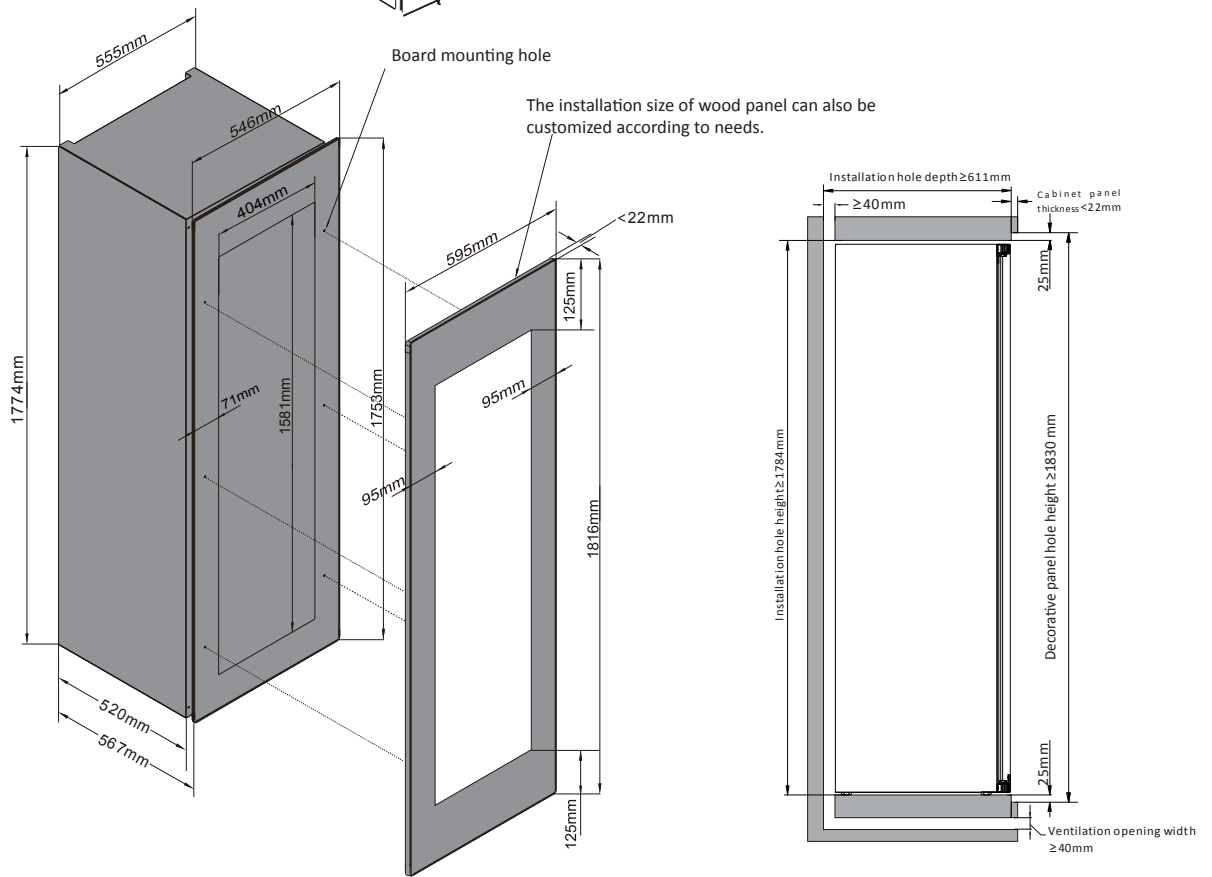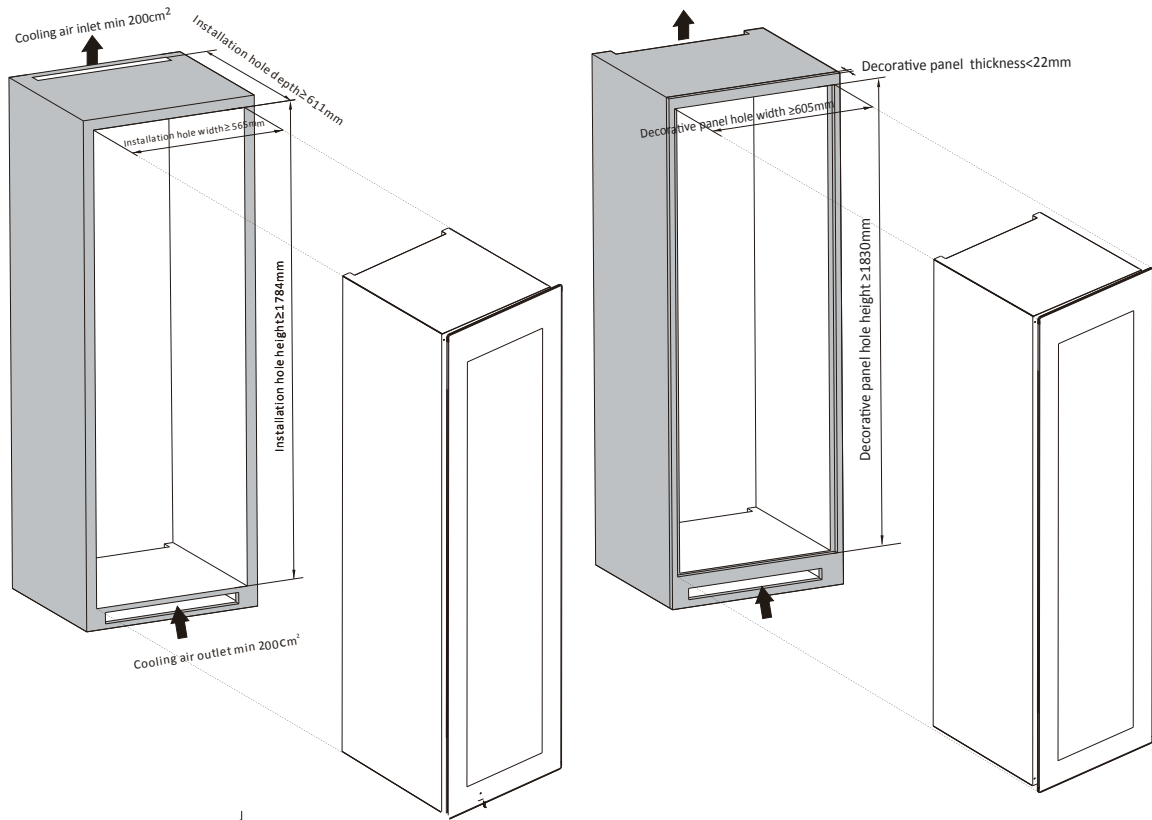



VI68

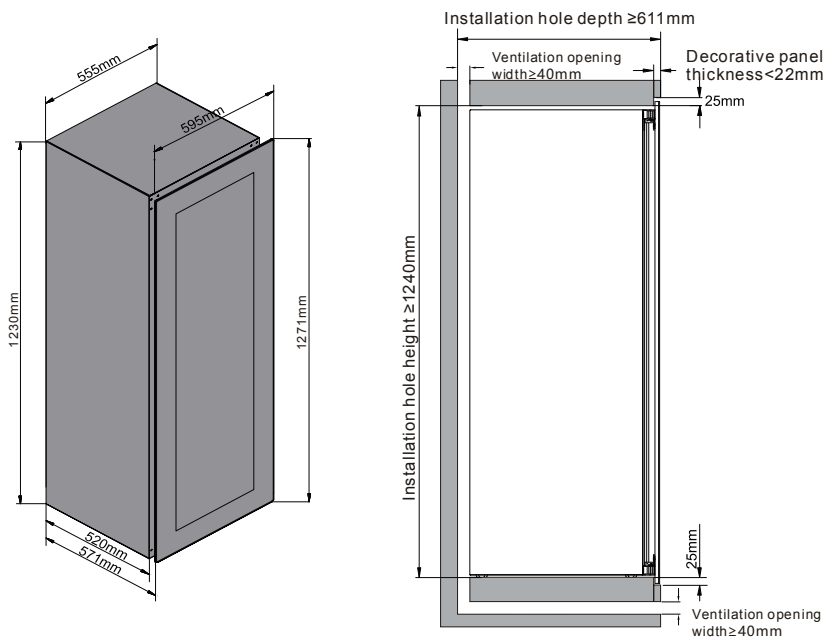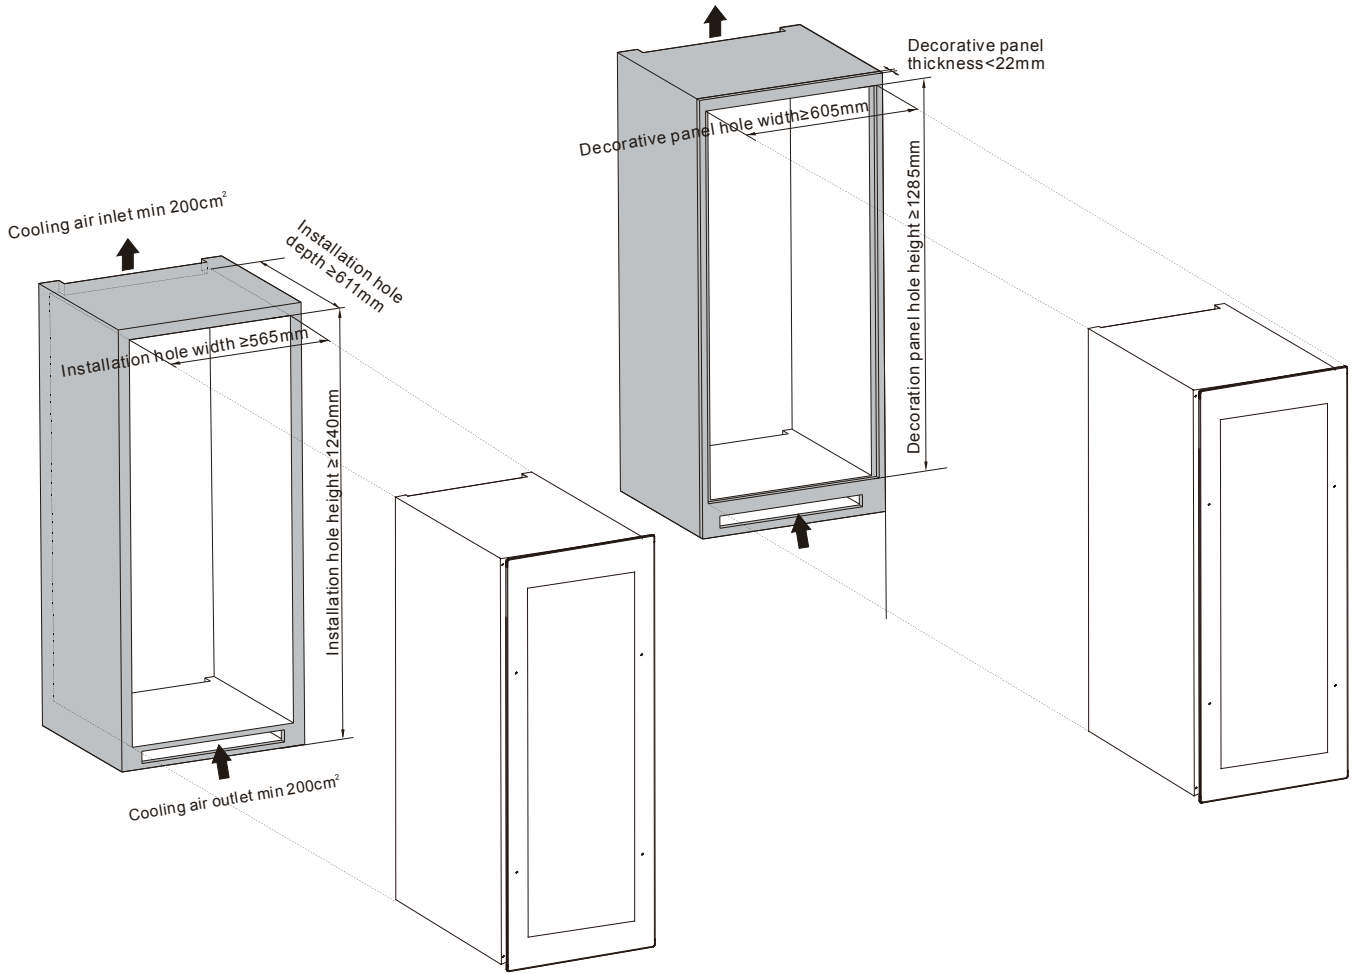

VI68 Integrated door panel

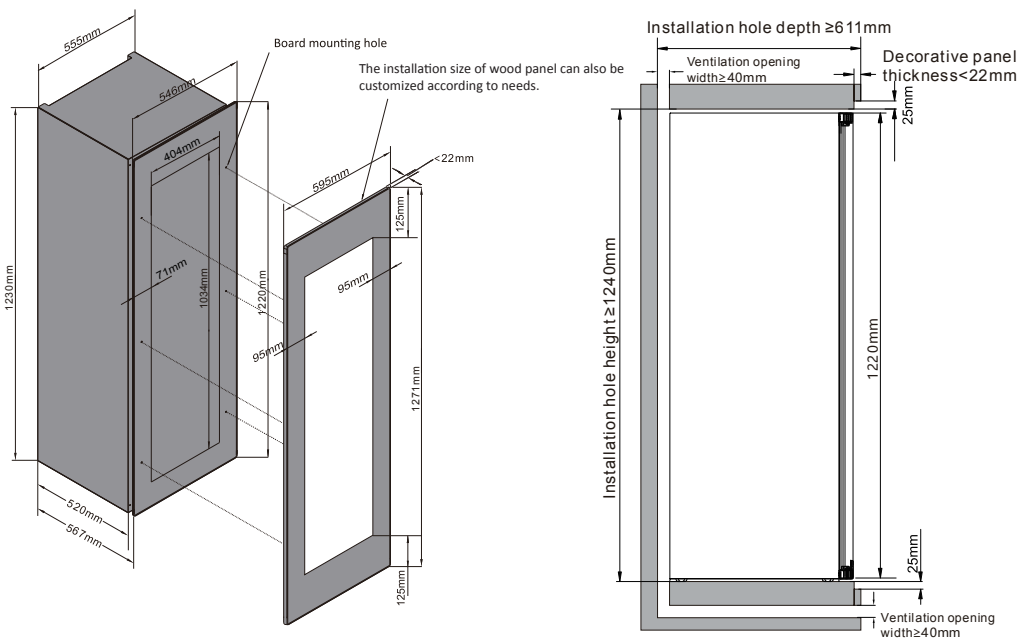
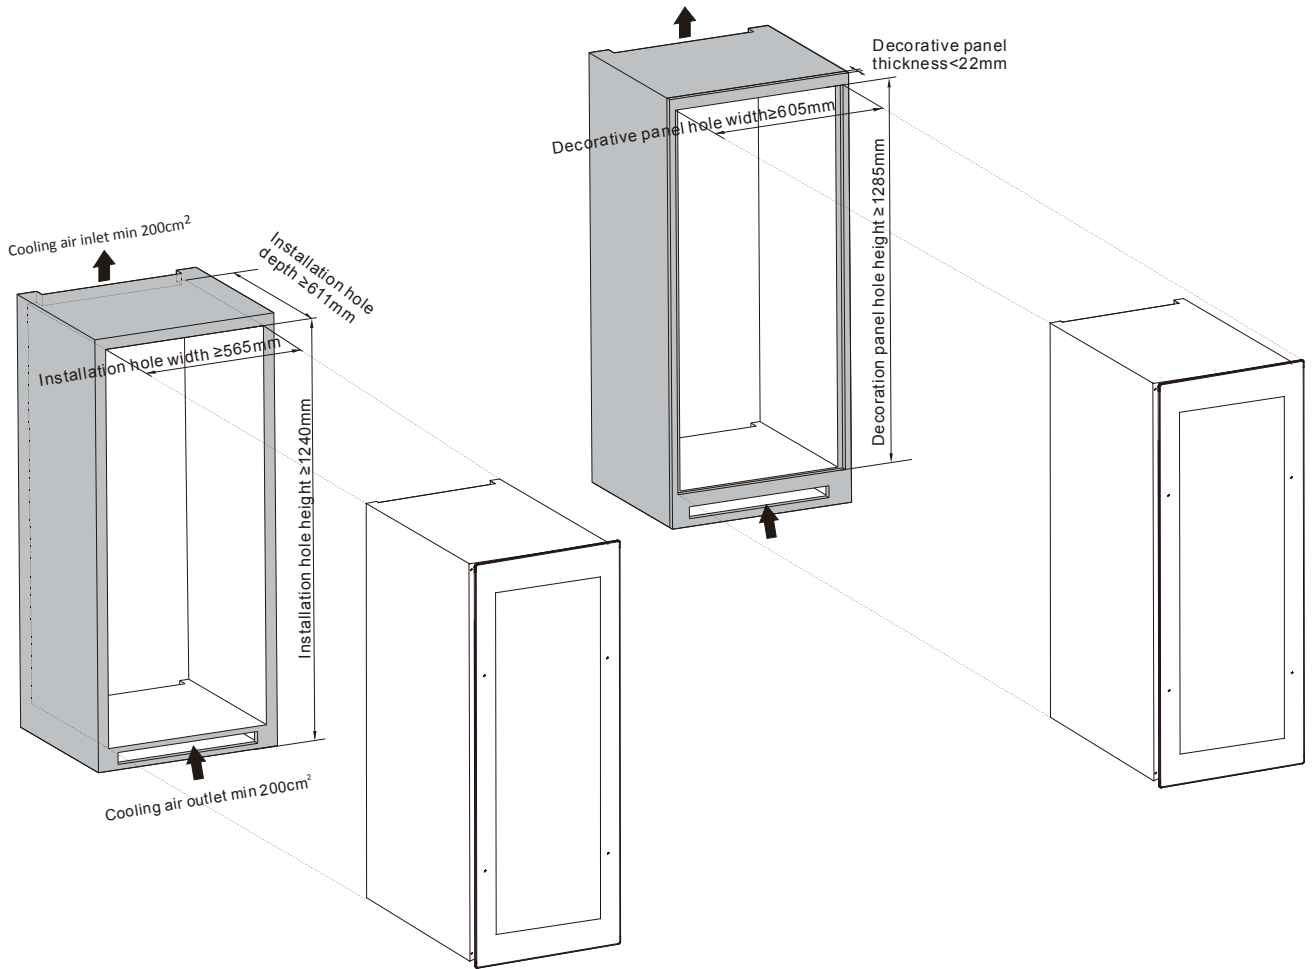


VI24 Integrated door panel

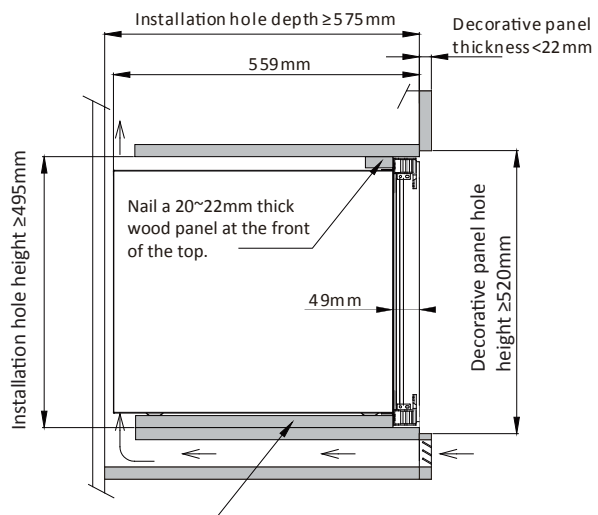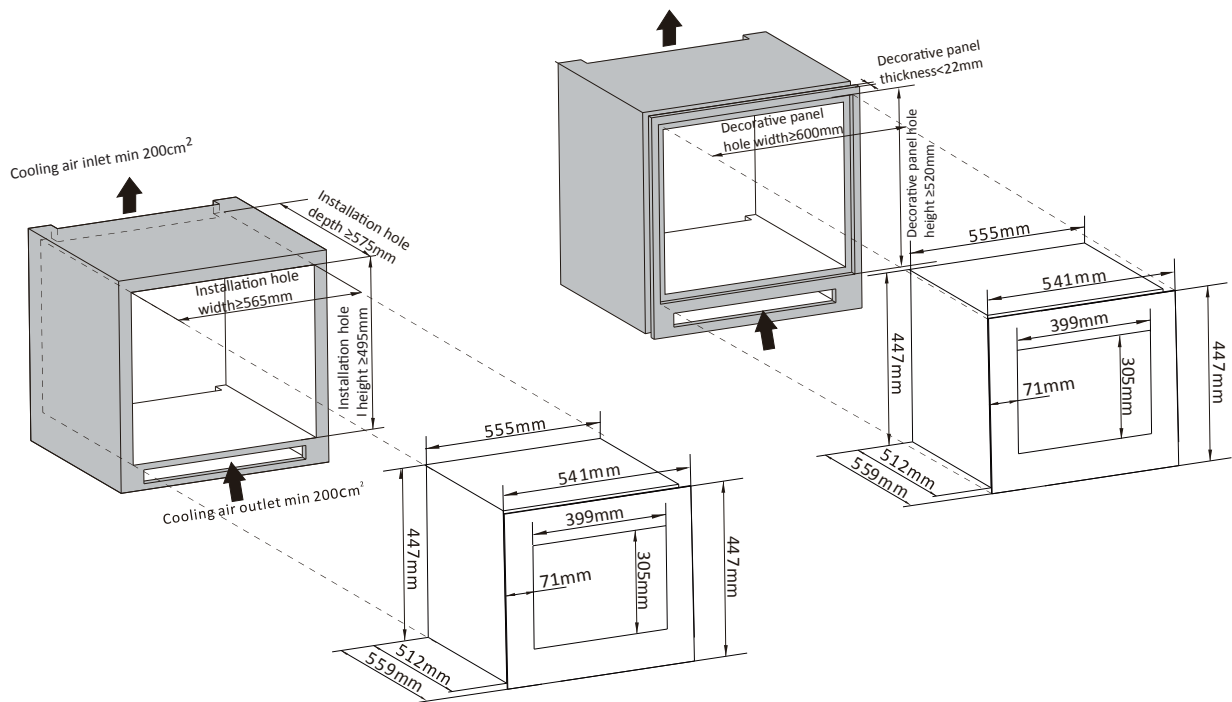



A 20~22mm thick wood panel shall be placed at the bottom.

VI30 Integrated door panel

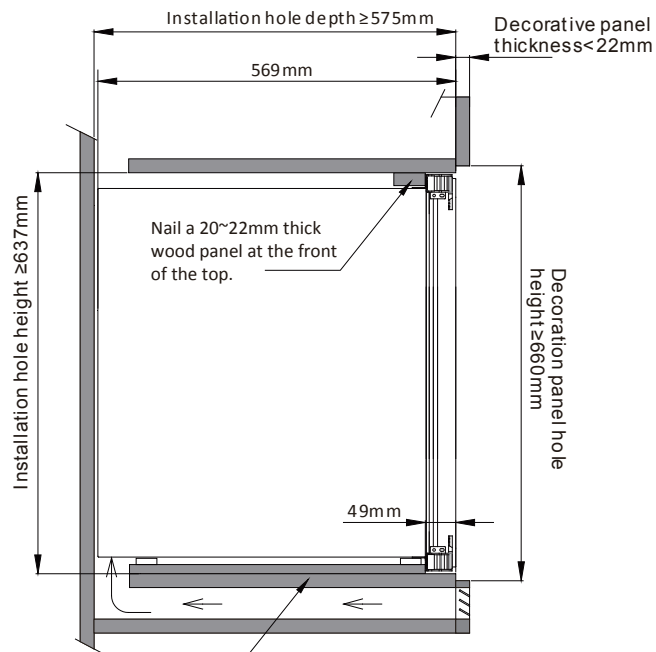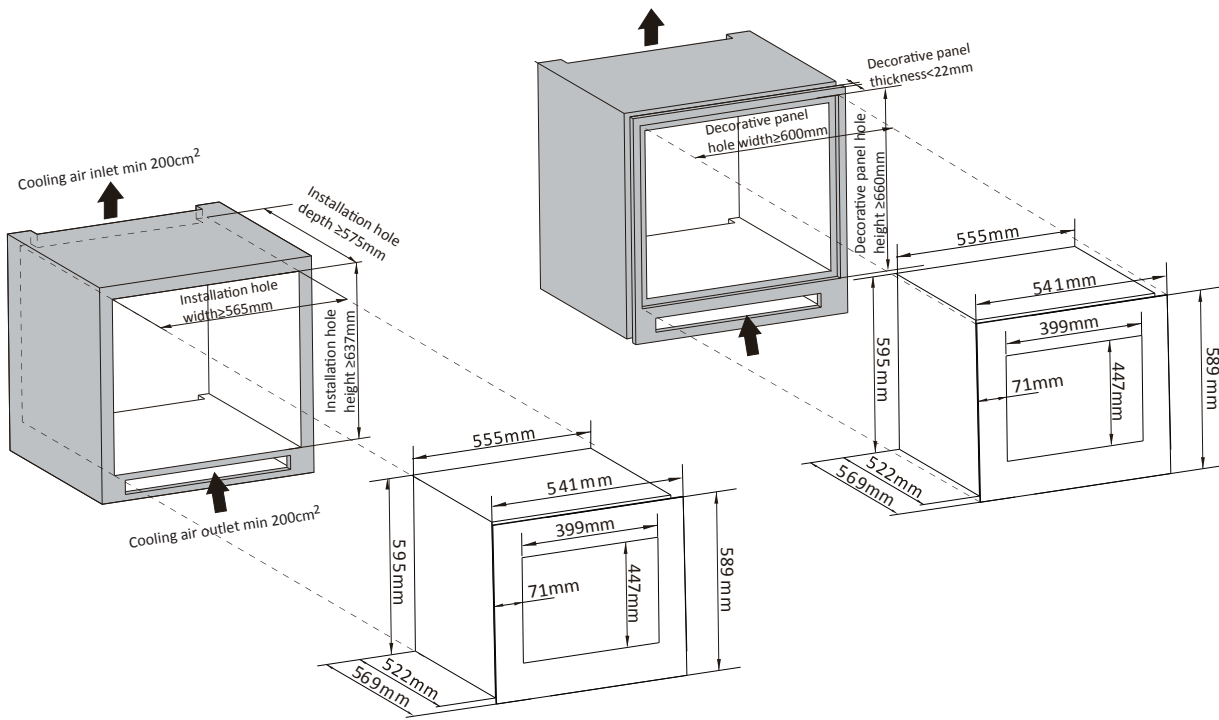

A 12~15mm thick wood panel shall be placed at the bottom.

VI48 Integrated door panel

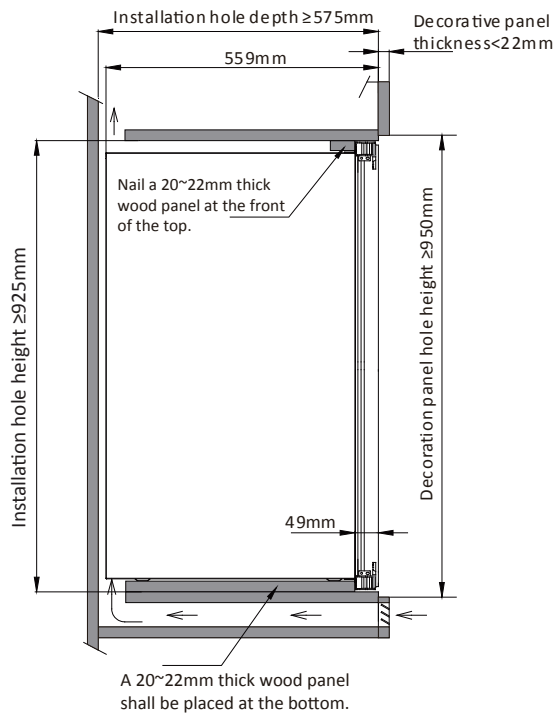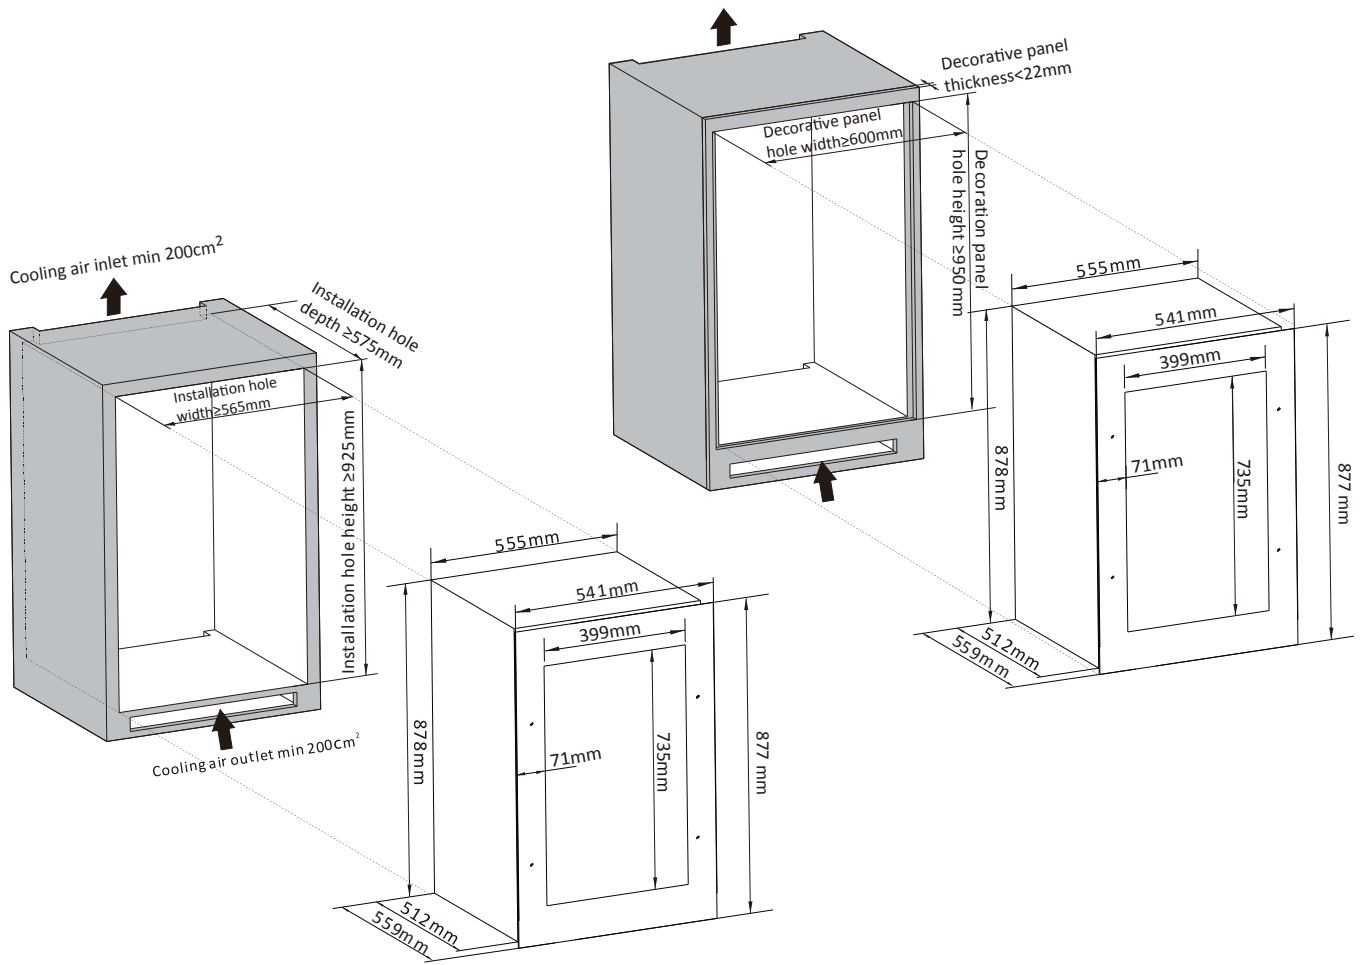

VI46 Integrated door panel

