


# HRN-RZ04S4 (Ford EDI TUG Harness) Installation Guide


**Figure 1:** The harness and wiring table.

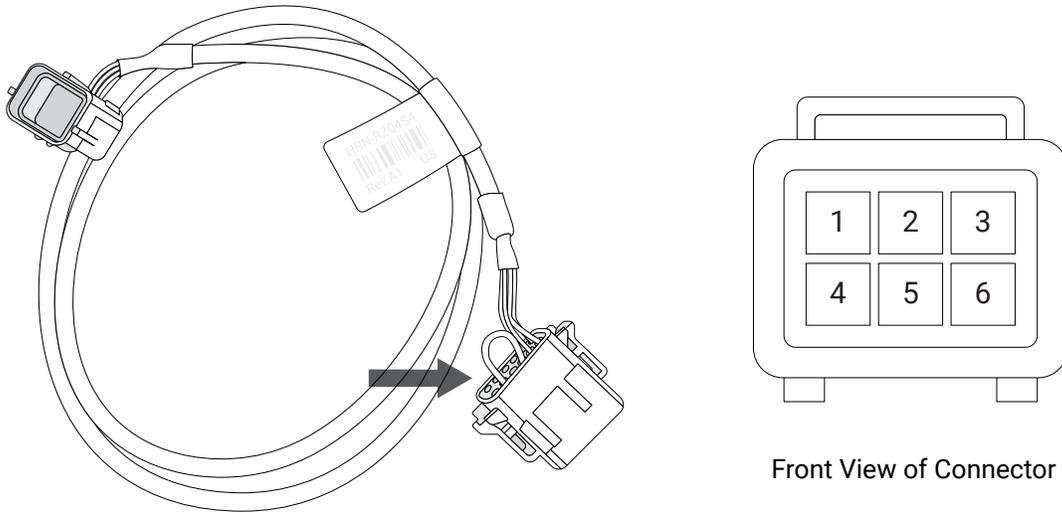


Pin number	Pin color	Pin definition
6	Red	Battery
4	BK/WH	Ground
2	DG/VT	CAN +
5	OG/LG	CAN -

**Step 1:** This is a plug-and-play harness (**Figure 1**). The plug for this harness is in the engine compartment, approximately on top of the middle of the valve cover. See **Figure 2** below for an example.

**Figure 2:**

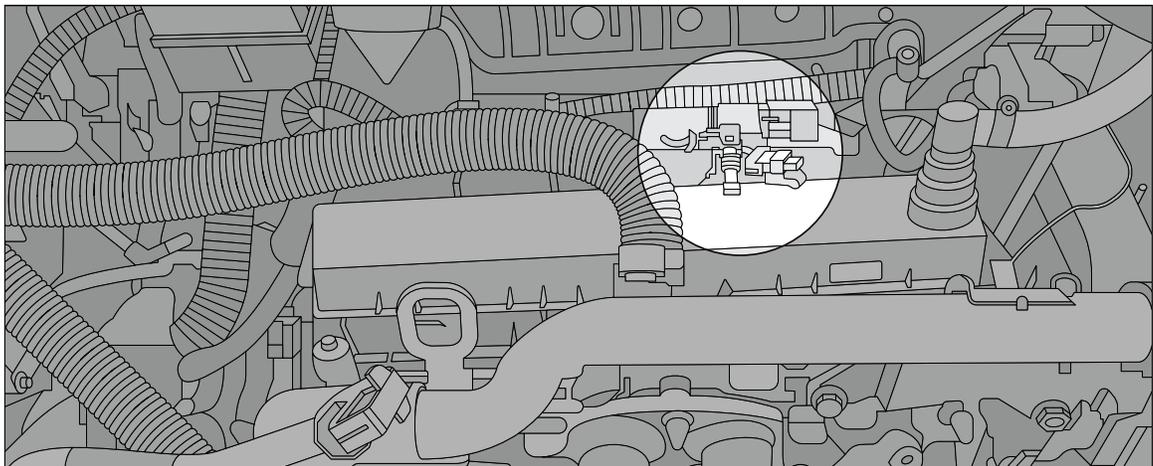


**Figure 3:**

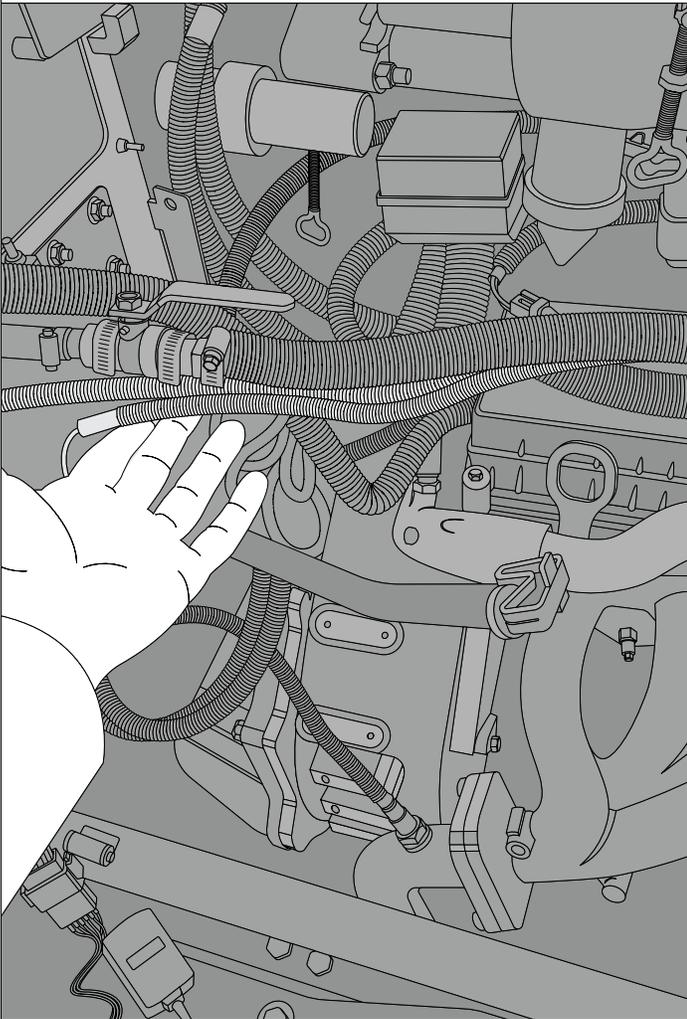

**Step 2:**

Locate the harness connector, expose the connector, and then connect the harness. Place the wiring harness alongside the existing factory harness and away from any hazards. See **Figure 3** above for an example.

**Figure 4:**

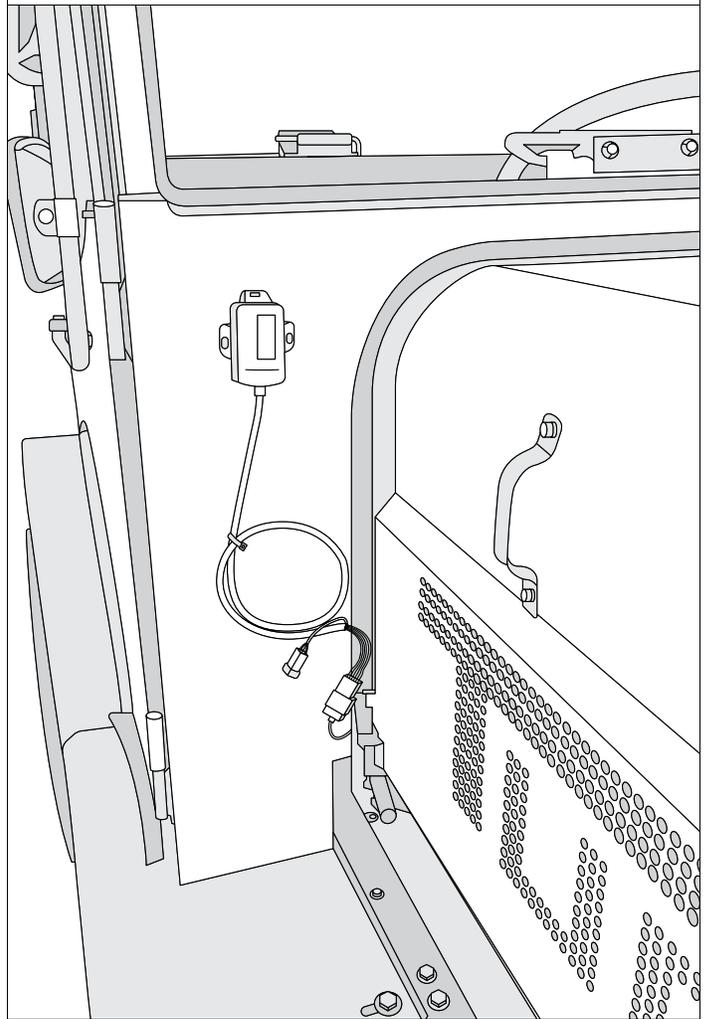

**Step 3:**

Mount the device on the location designated by the customer. Secure the harness to the engine compartment, and then connect the harness to the ECM cable. See **Figure 4** above for an example.