



Geotab GORUGGED – De-Pin and Re-Pin Instructions

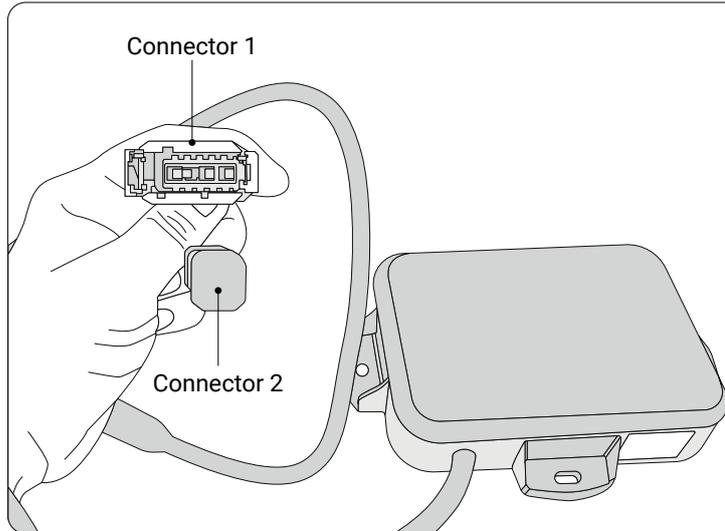

The steps outlined in this document are to assist with de-pinning and re-pinning the Geotab GORUGGED.




To learn how to de-pin and re-pin the Connector, follow the steps below.

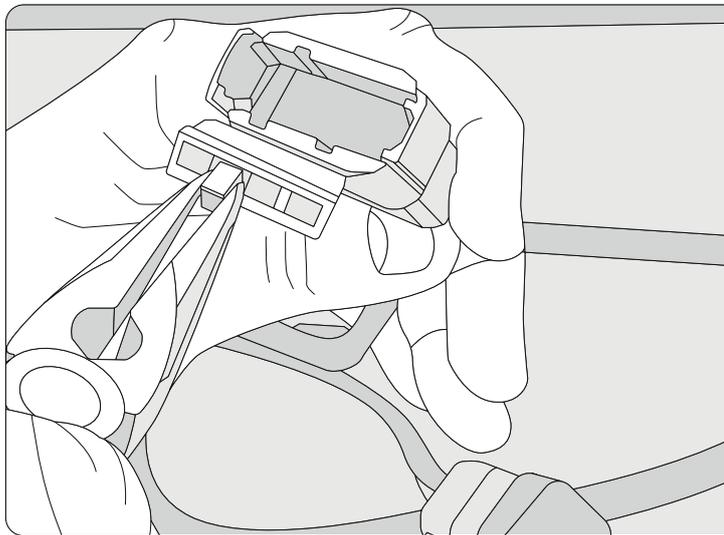


1) Take Connector 1 and remove the wedge lock.

NOTE: To do this, use needle nose pliers.

2) With the screwdriver provided, push down on each tab inside the Connector. This allows for the pin to unlock and slide out. Repeat this step for all the pins to completely de-pin the Connector.

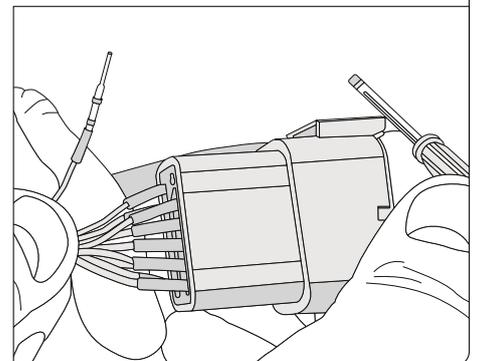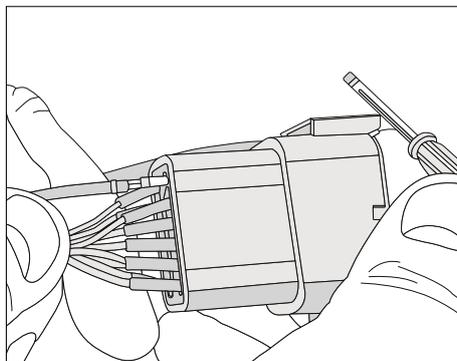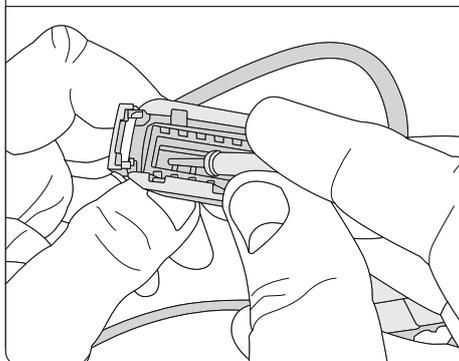



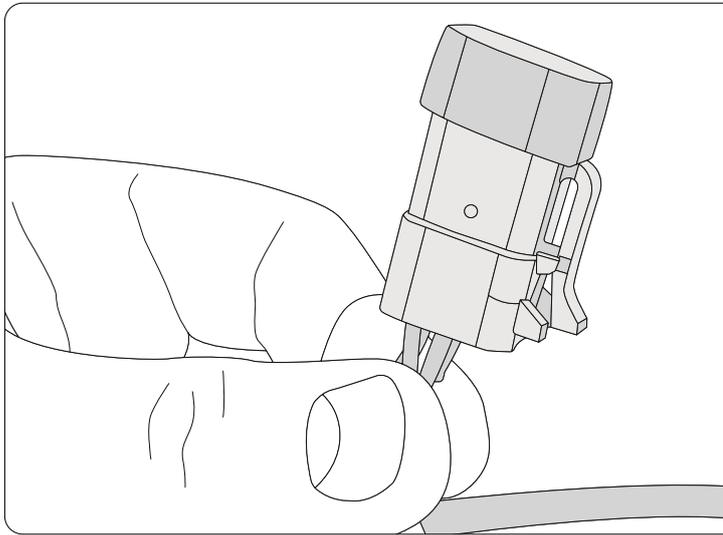


3) Repeat steps 1 and 2 for Connector 2 on the GORUGGED Harness.

4) To re-pin, slide the pins back into their correct slots for both Connectors. Lightly tug on them to confirm they lock back in place.

NOTE: Use the Wiring Legend for help.

Then, take the locking wedge and push it back into place after all wires have been inserted and locked.

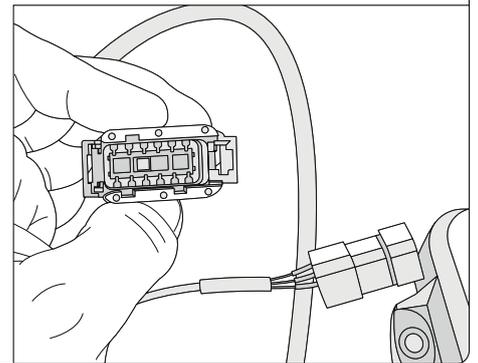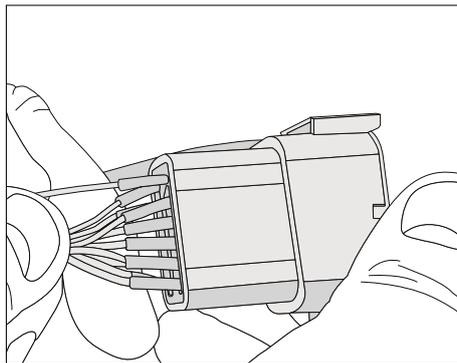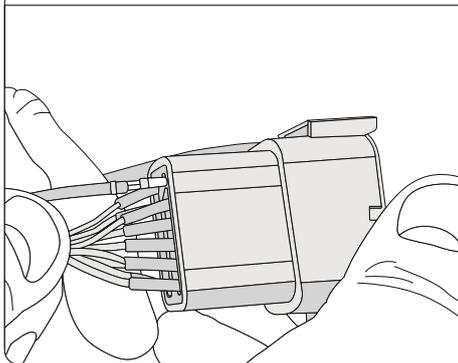

Connector 1	Connector 2	Wire Color
1		Orange
2		Green/White
3		Blue/White
4		Brown/White
5		Purple/White
6		Grey
7		Brown
8		Pink
9		Black
10		Green
11		Yellow
12		Orange/White
	2	Blue
	3	Black/White
	4	White
	5	Purple

NOTE: The pin numbers are labelled on the Connectors.