
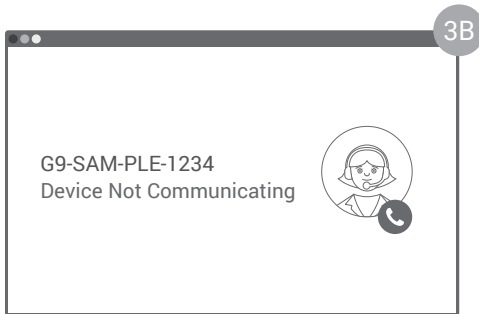
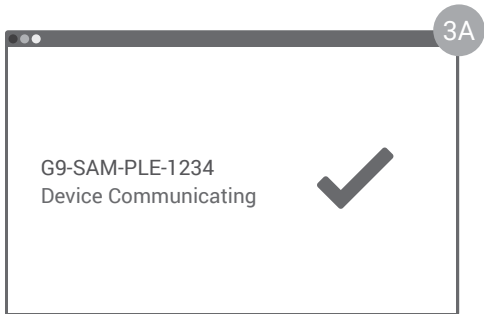
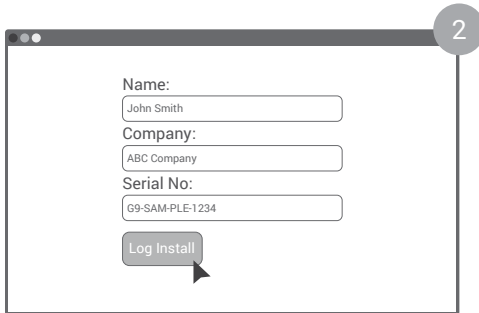


# Verify Install:



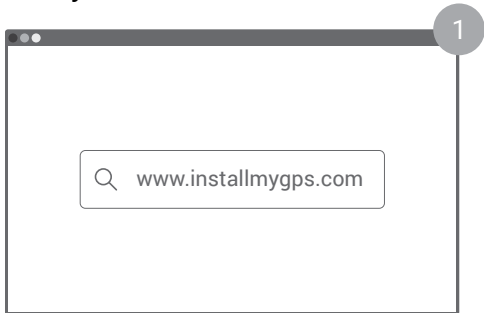


**Note:** Heavy-duty trucks often use a different Diagnostic Link Connector (DLC). Contact your Authorized Reseller to learn about DLC applications for heavy-duty trucks, or how to use a vehicle-specific harness if available.




Rev. A1 - 10/2020 - PAC-INSUNI10

## Telematics Device Quick Start

Read before installing: [goo.gl/zuLoK2](http://goo.gl/zuLoK2)

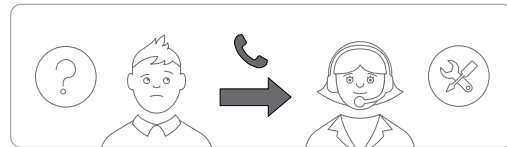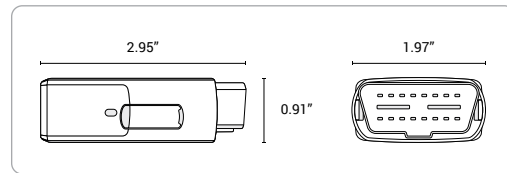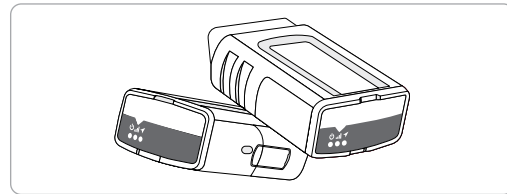

## In the box:

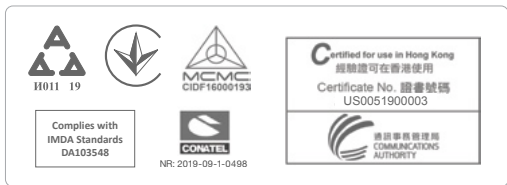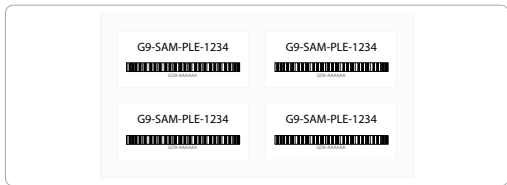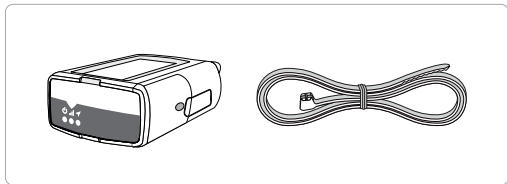

## Installation:

