

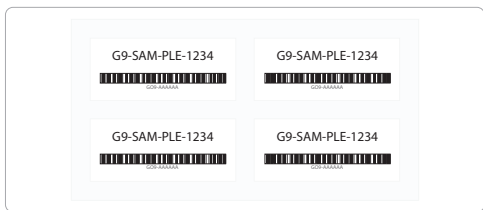
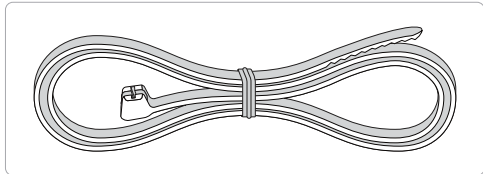
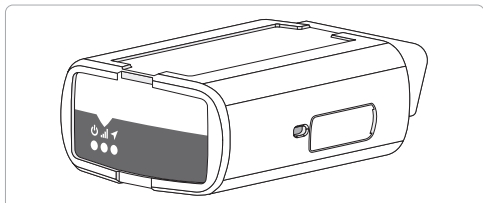
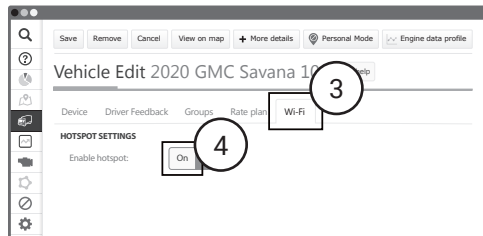


In the box:



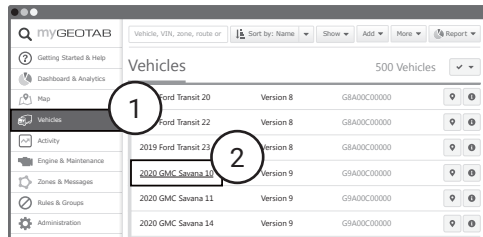


6

Wi-Fi Hotspot Setup

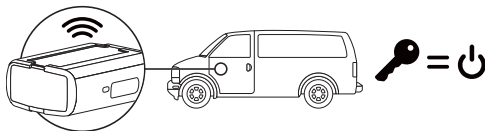

7

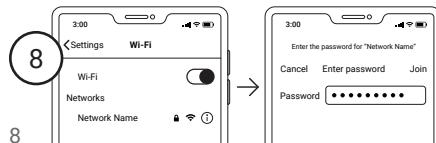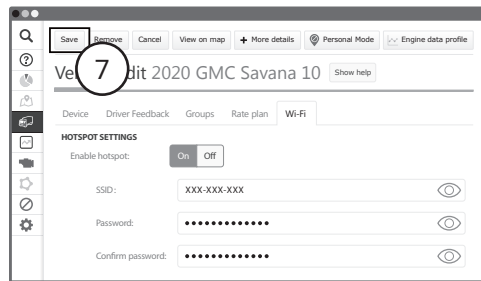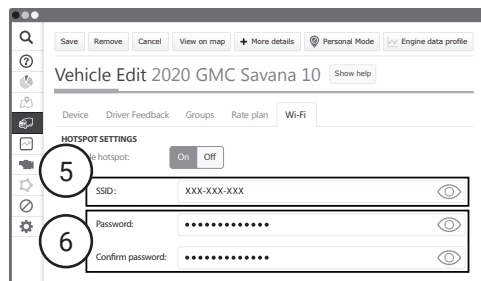



8

Note: Heavy-duty trucks often use a different Diagnostic Link Connector (DLC). Contact your Authorized Reseller to learn about DLC applications for heavy-duty trucks, or how to use a vehicle-specific harness if available.

Rev. A3 - 10/2020 - PAC-INSUNI205



Telematics Device Quick Start

Read before installing: gtb.page.link/yXpm

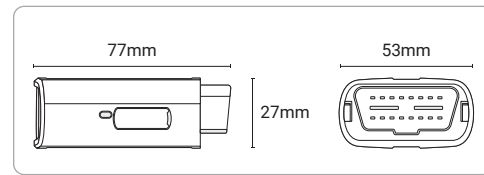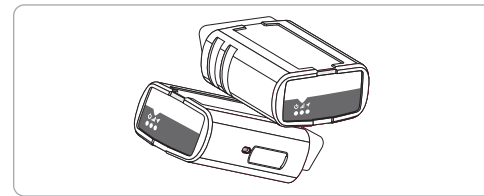


1


Installation:

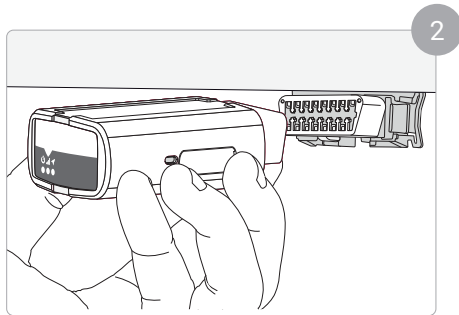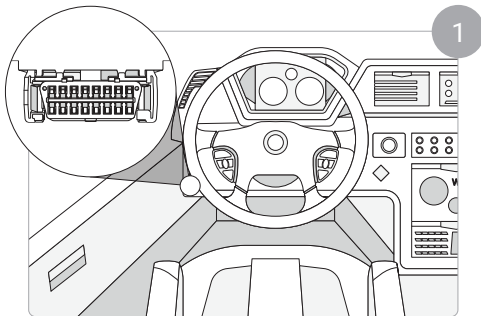



2

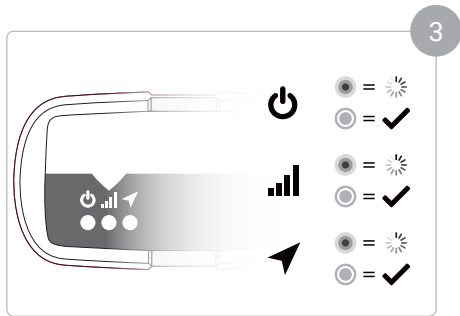



3

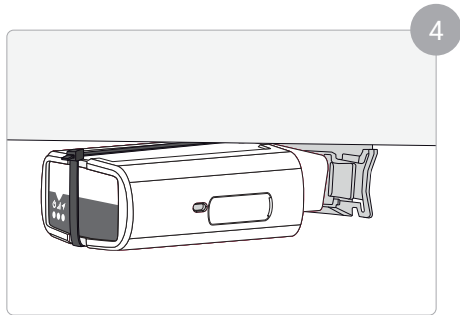

Verify Install:

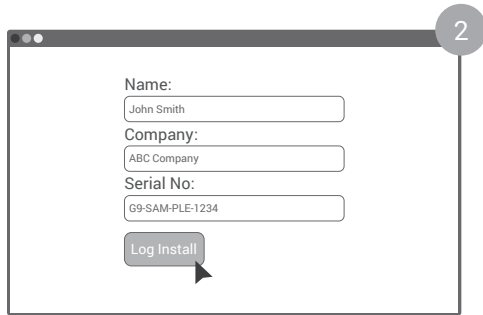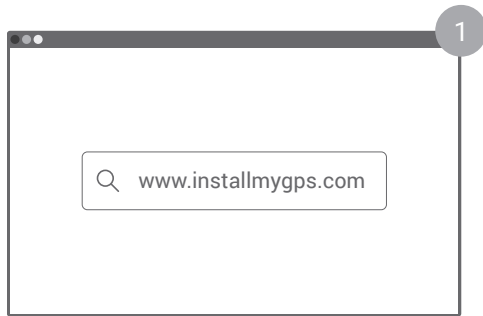

4

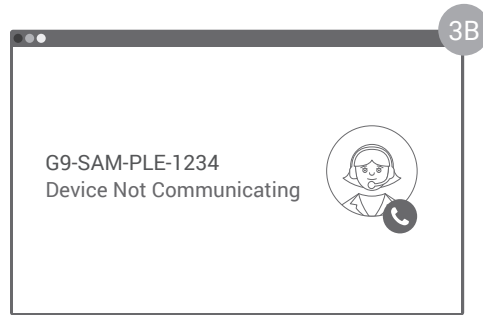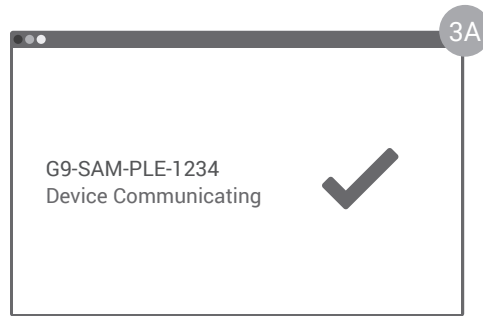

5