



Adapter 7 Installation (Step 2)

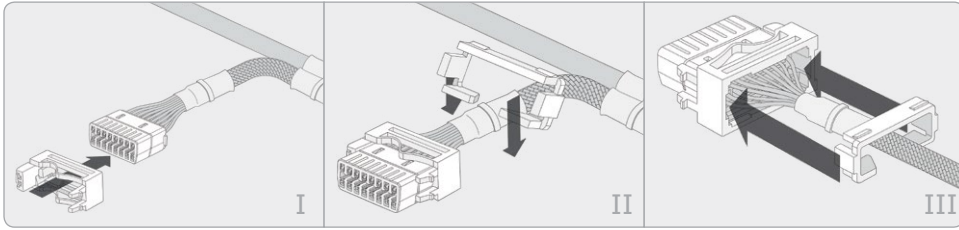

Adapter 10 Installation (Step 2)

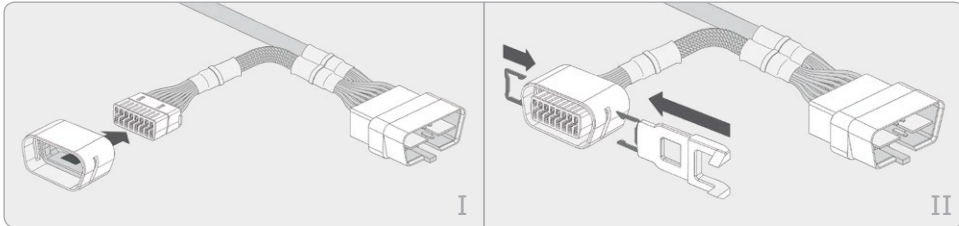


More information: goo.gl/tNoQh4.

Universal Harness Kit – HRN-GS16K2

For the most up-to-date version, please visit: goo.gl/1Vninm

1		Ford, GM, Chrysler	7		Fiat, Citroën, Peugeot
2		Ford	8		Volkswagen, Audi
3		Chrysler	9		BMW
4		Ford, GM	10		Ford
5		Mercedes, BMW	11		Iveco
6		Toyota, Hyundai, Kia, Ford	12		Volvo

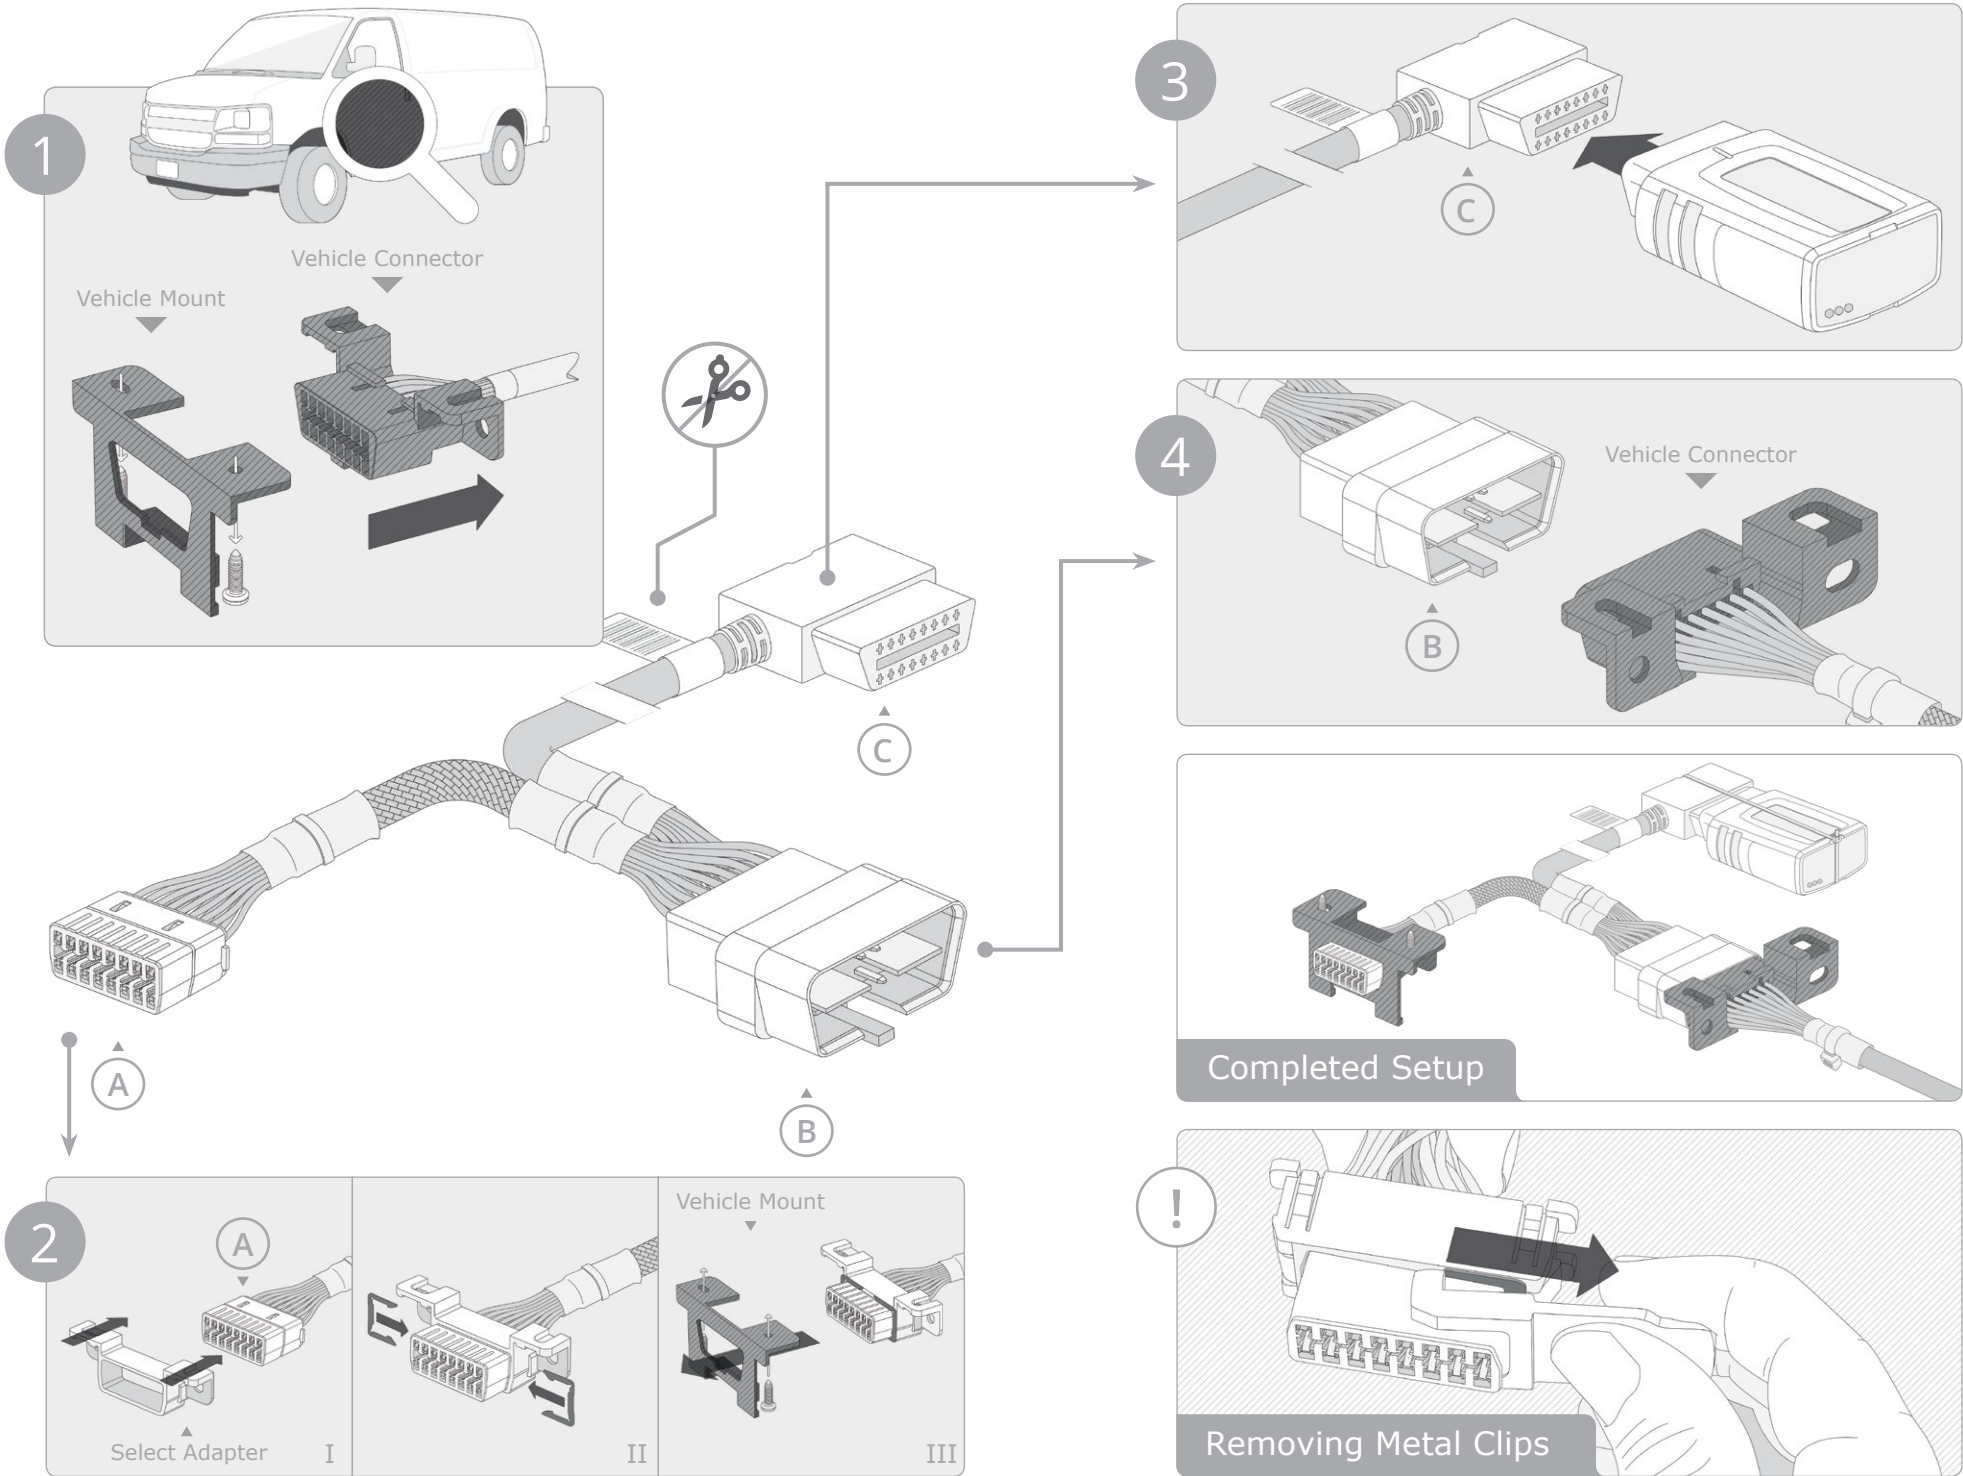

Note: See last page for Adapter 7 and Adapter 10 installation.