



Retro Camper Trailer Desktop Organizer



Want to print this design? Get it here!

<https://shop.glowforge.com/products/retro-camper-trailer-desktop-organizer>

Duration:
~65m

Assembling:
~30m


Lasering:
35m

Things You'll Need:

- Glue
- Paint: Optional


- No tools required

Before you begin

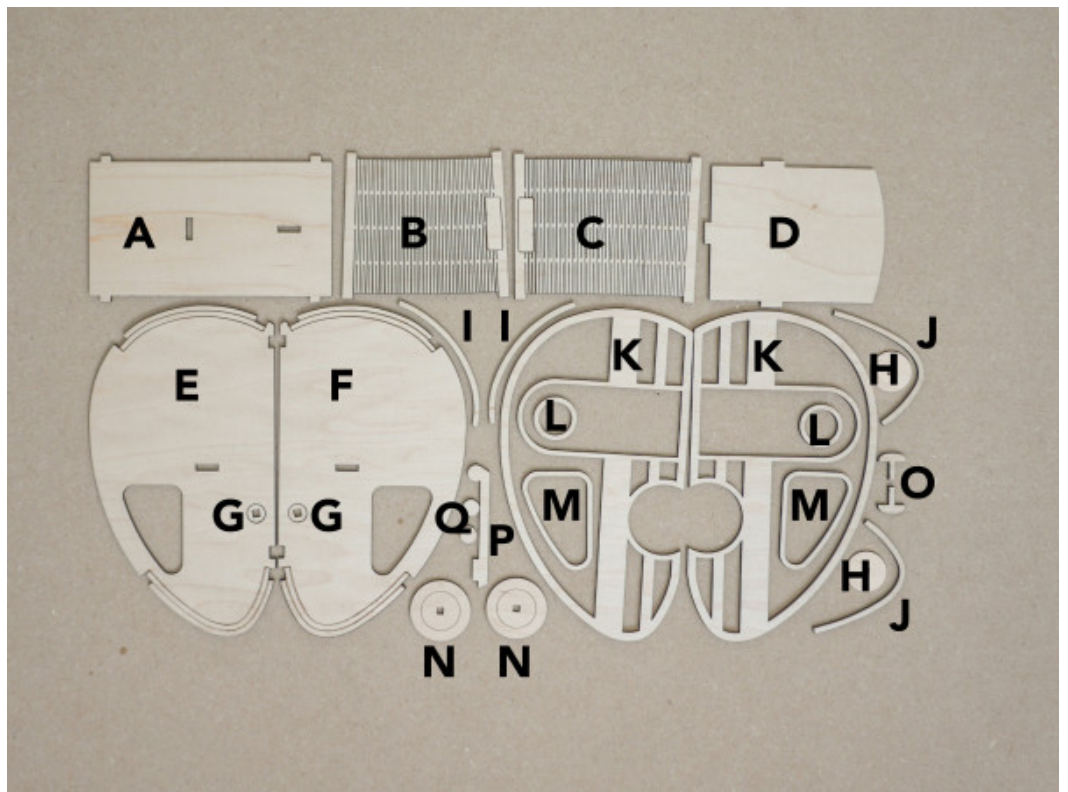


Gather and identify your parts. If desired, paint parts K, L, M, and N before beginning the assembly.

1 Step 1

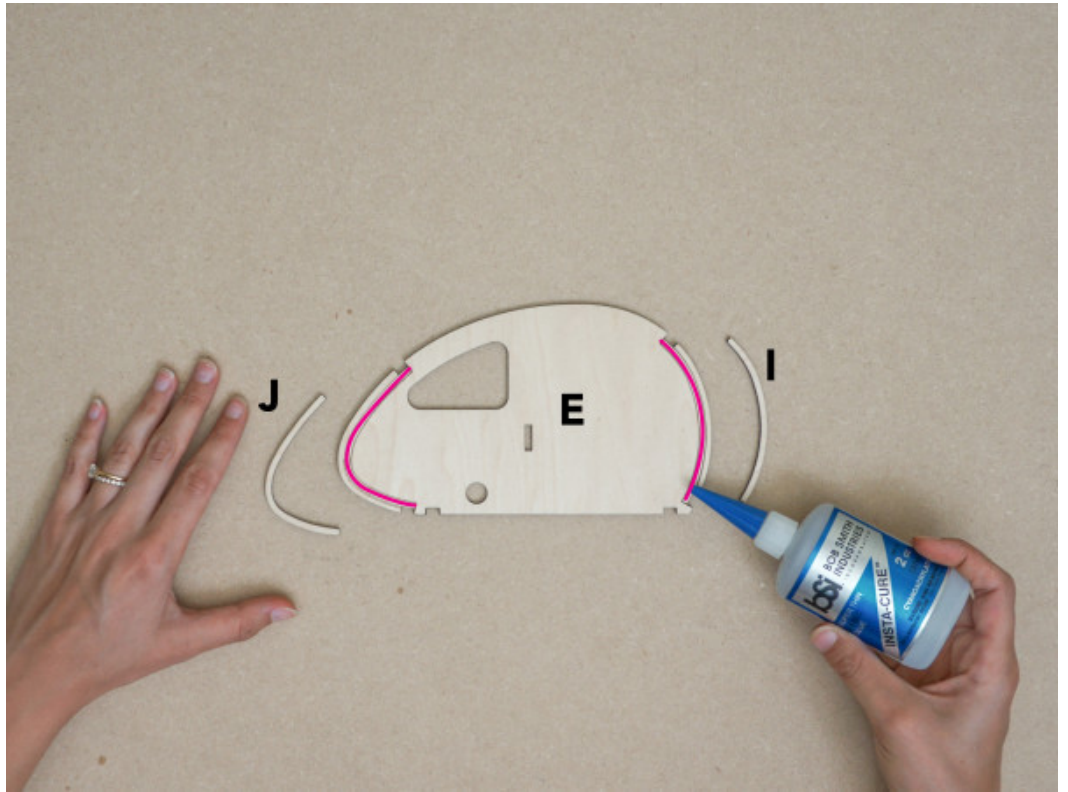


Begin with part E in front of you and the scored lines facing upward. This is the interior side of the trailer. Apply glue to the score marks.

2 Step 2

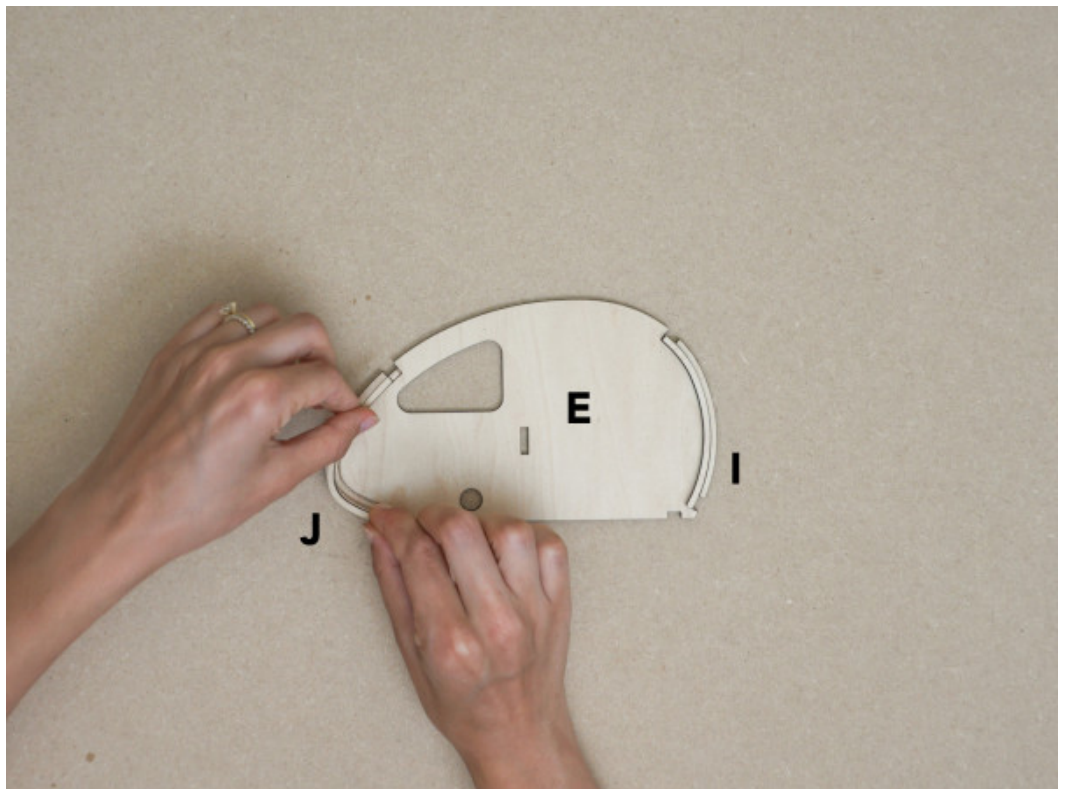


Align one I part to the right side of part E. Align one J part to the left side of part E. Set aside and allow to dry.

3 Step 3

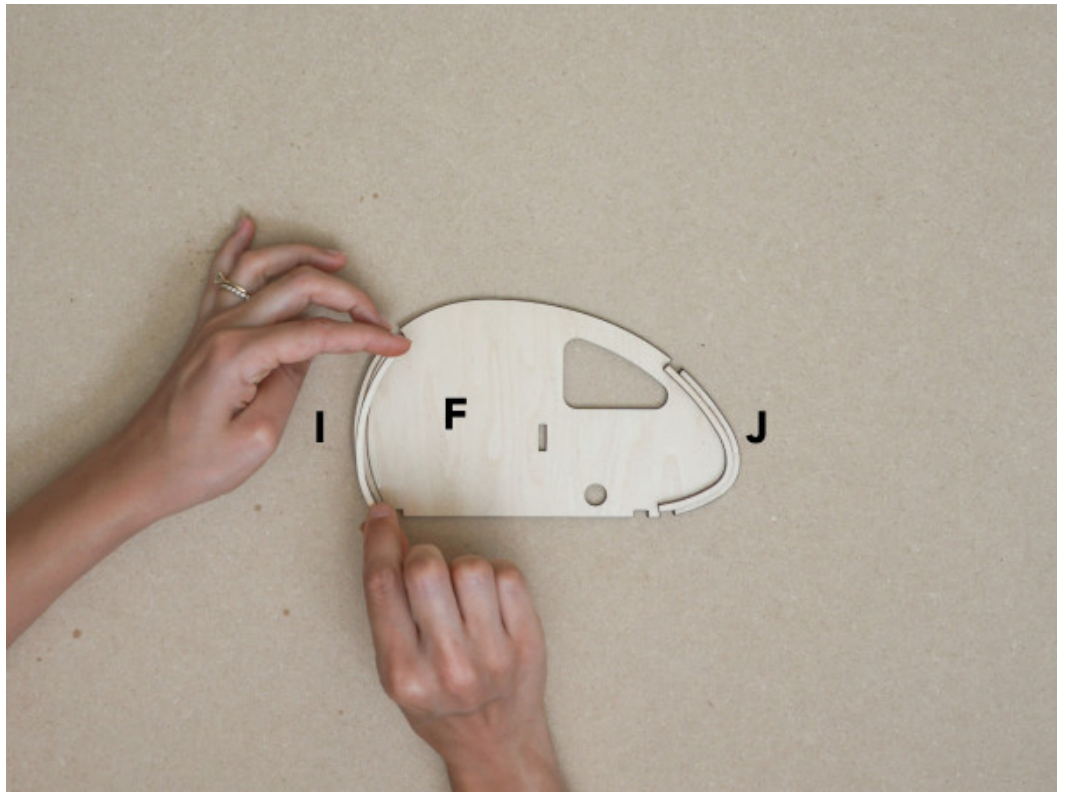


Repeat with parts F, I, and J.

4 Step 4

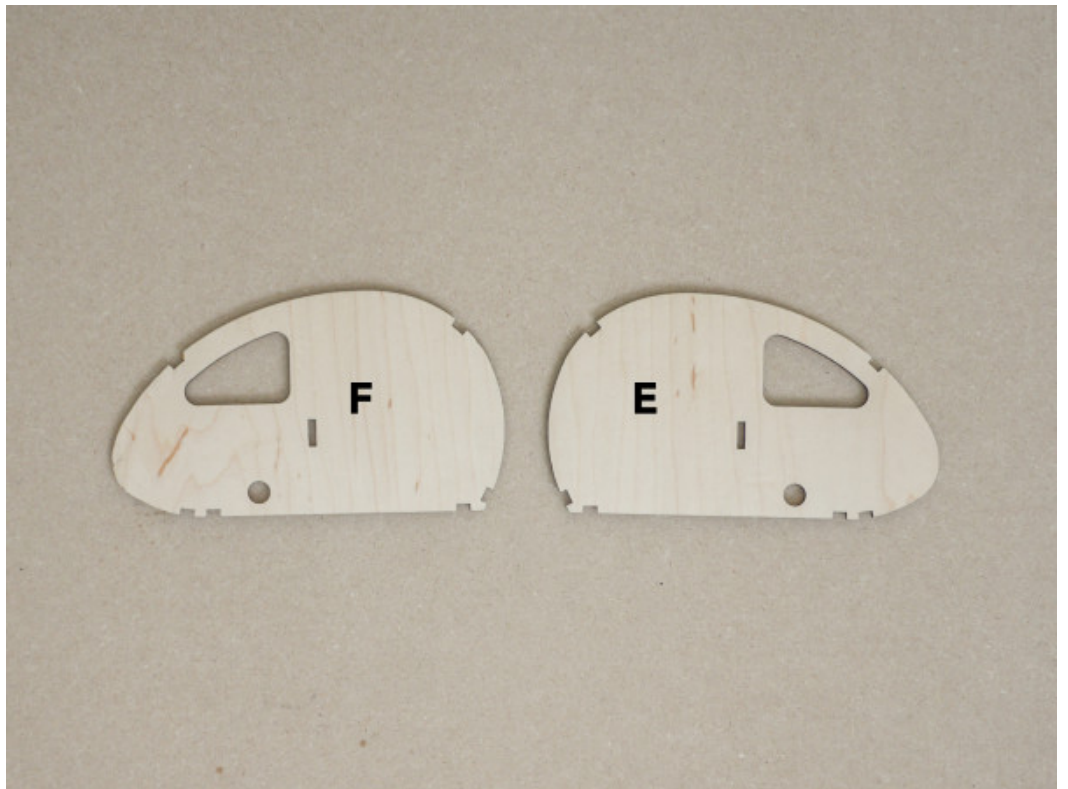


Flip the E and F assemblies over.

5 Step 5

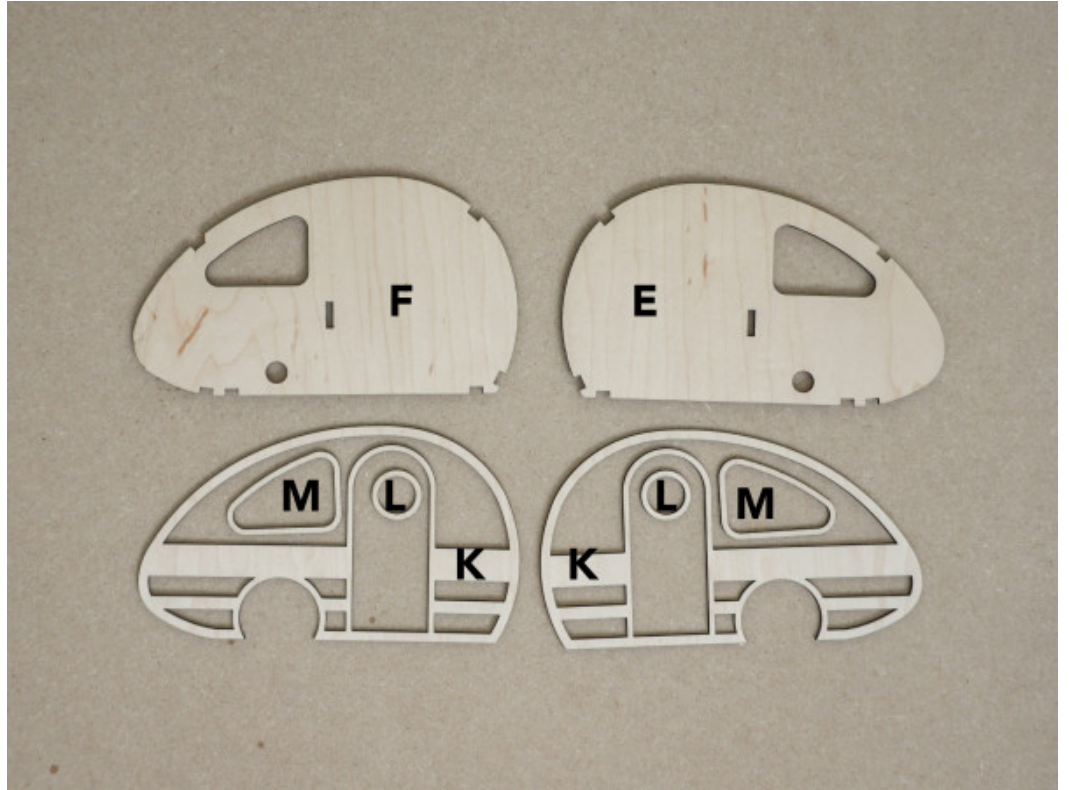


Gather parts K, L, and M.

6 Step 6

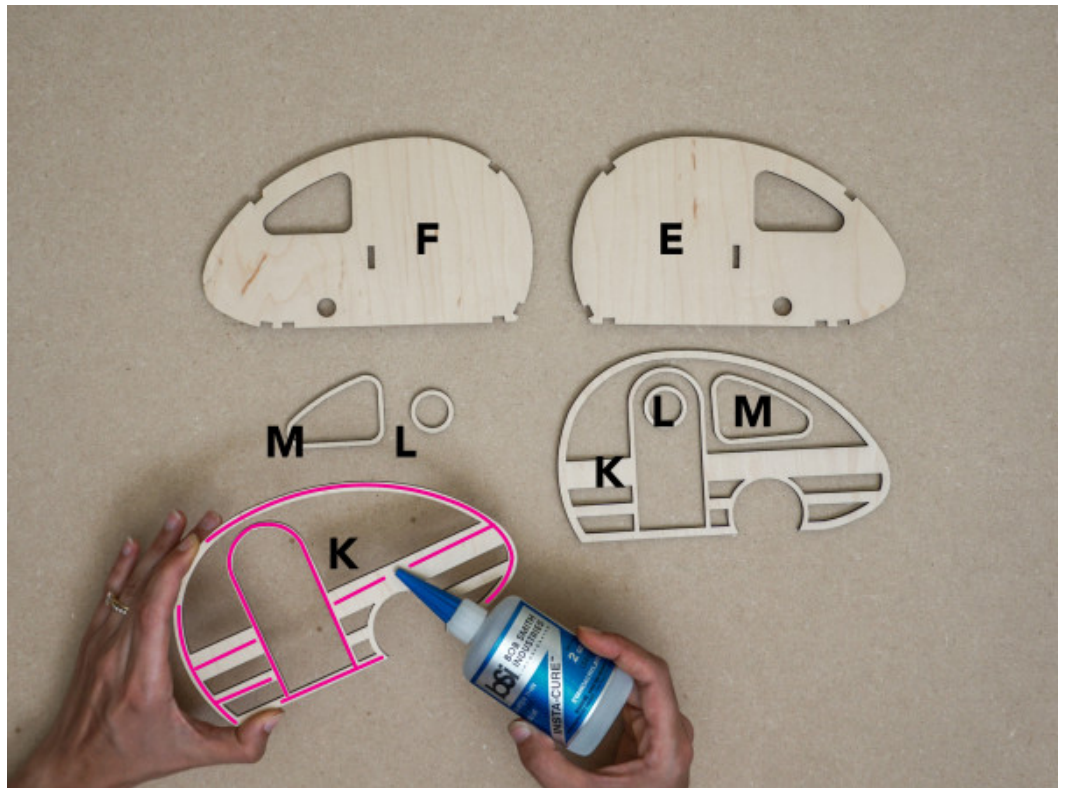


Apply glue to the backside of one set of parts K, L, and M, and apply to the F assembly.

7 Step 7

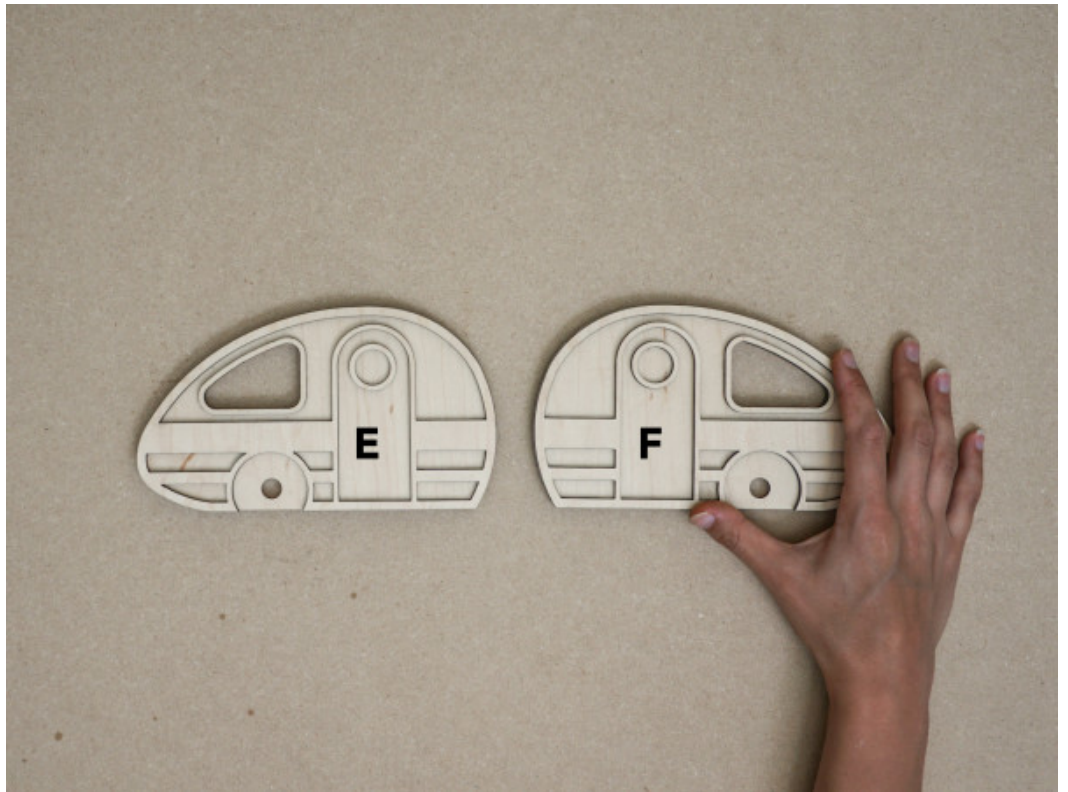


Repeat with part F. Allow both assemblies to dry.


8 Step 8: Assemble the Wheels

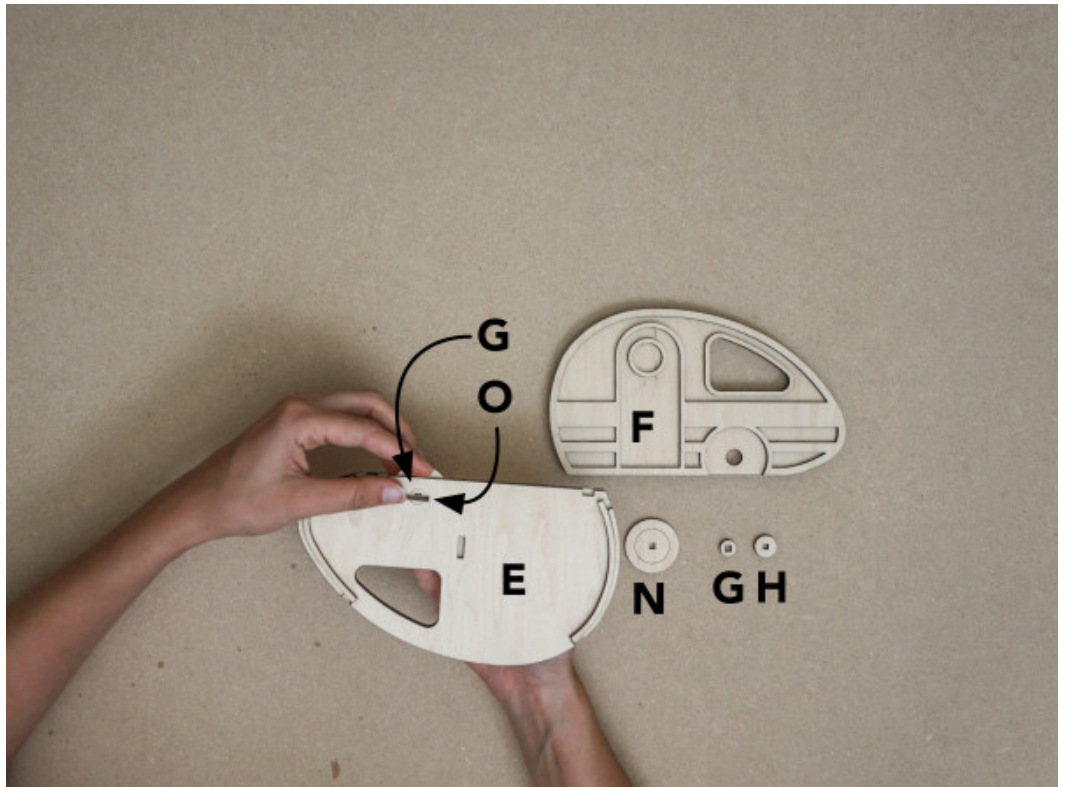


Thread part G onto part O and insert it through the hole in part E. Make sure the head of the pin is on the inside of the trailer wall.

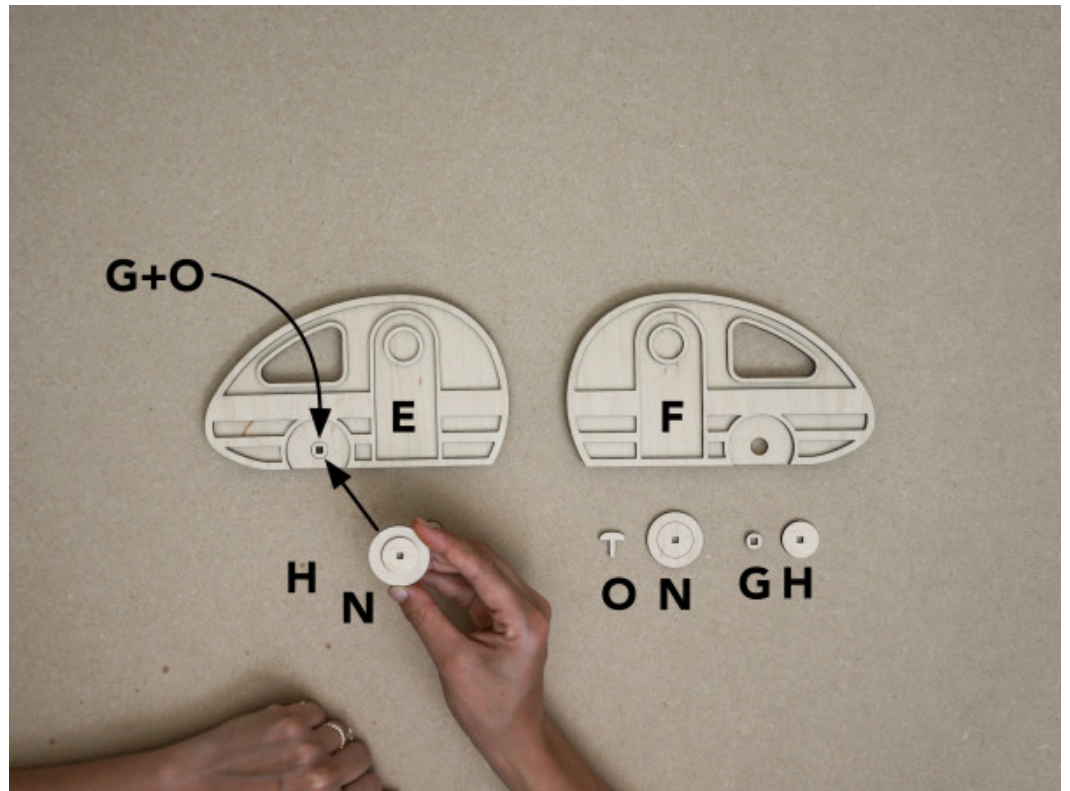

On the opposite side of part E, attach parts N and H to the exposed tab of part O.
2

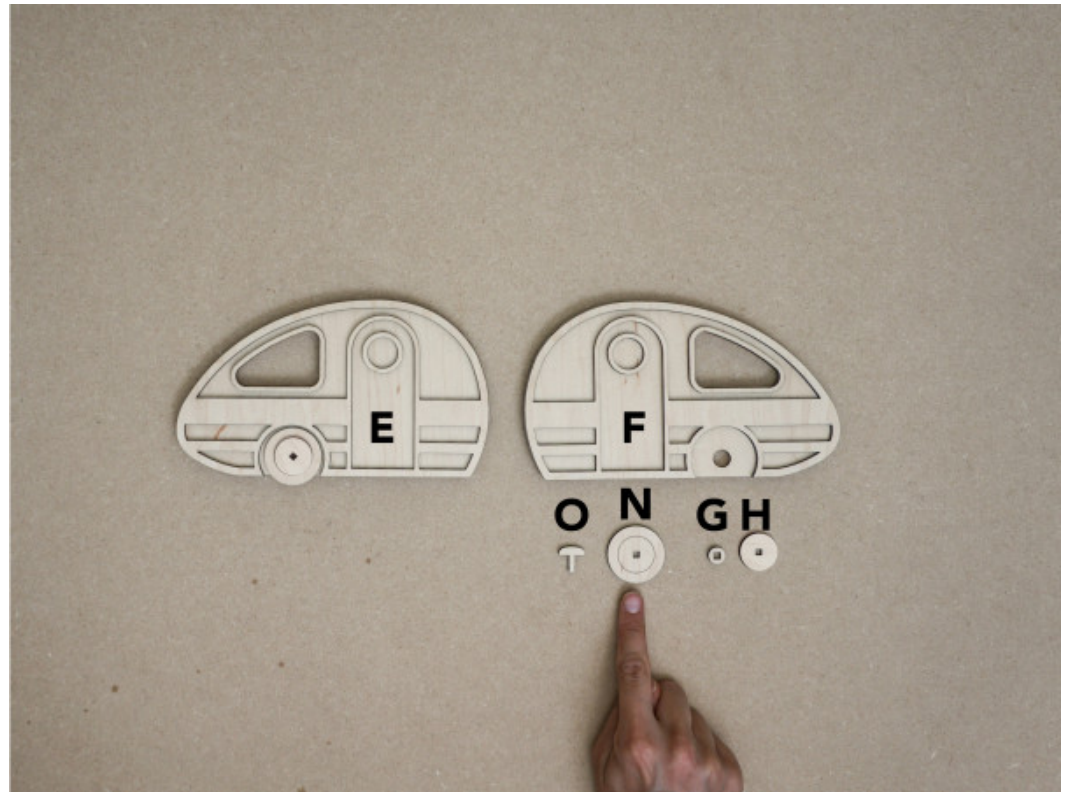

Repeat for the second wheels.
3

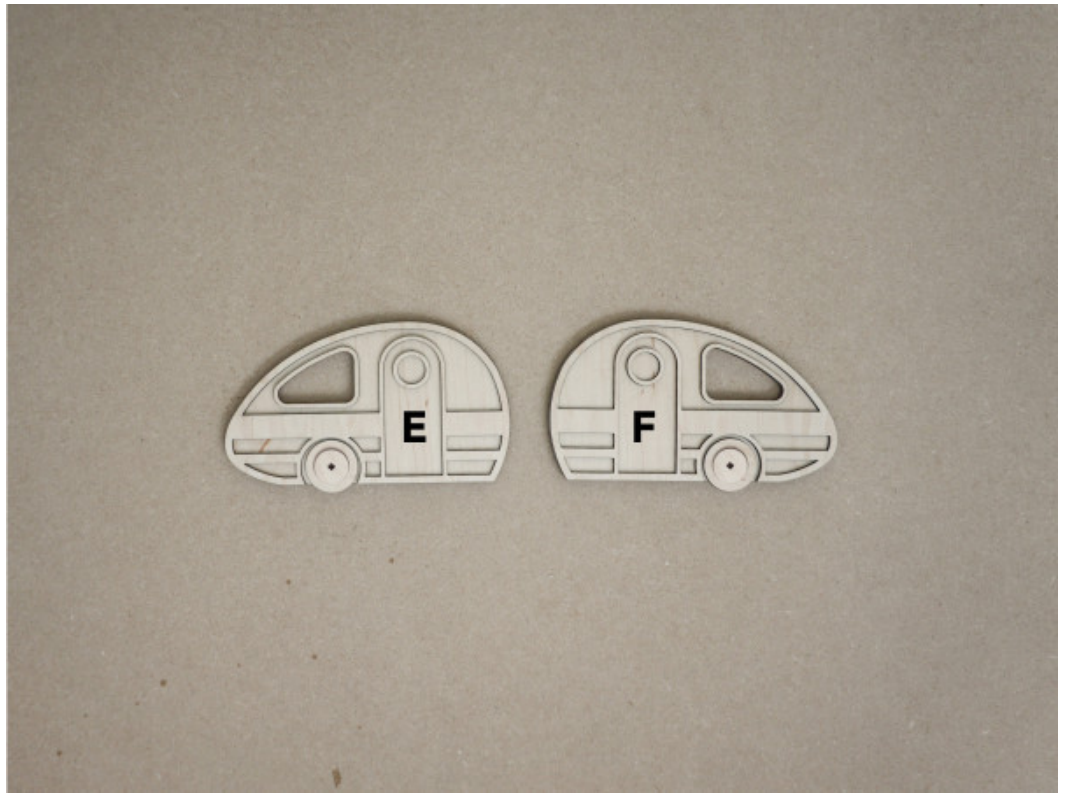


Set aside.

9 Step 9




Insert the lower tab on part D into part A as shown.

10 Step 10

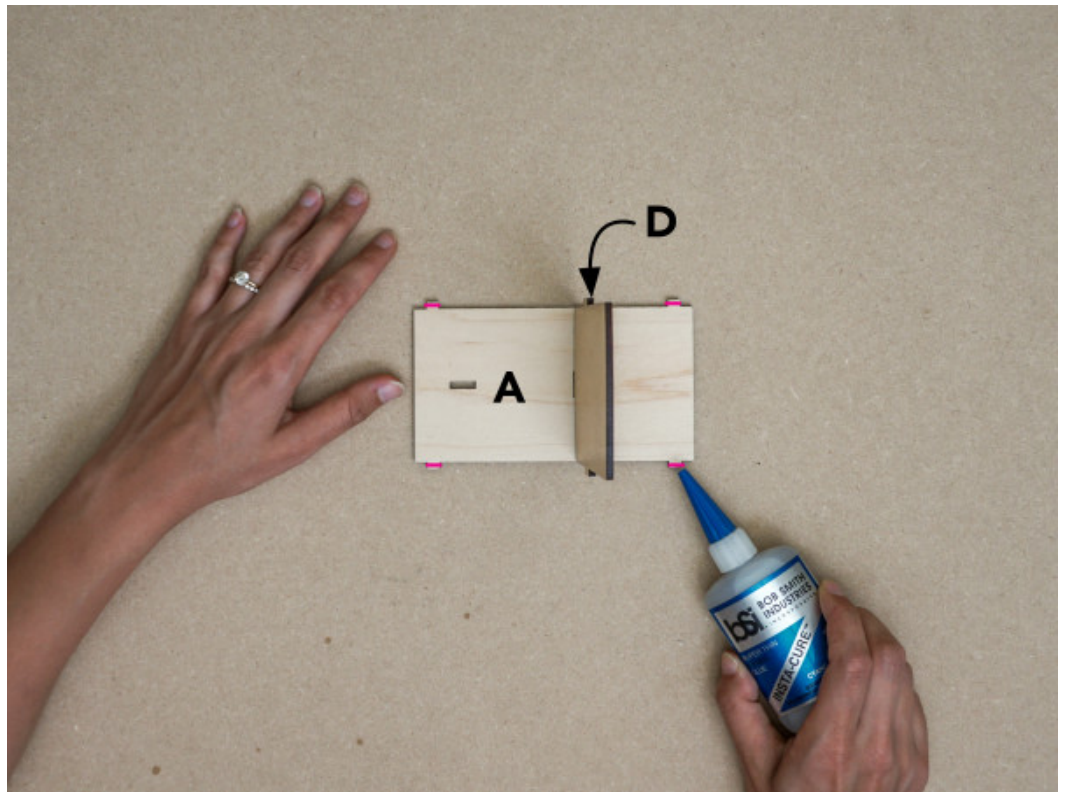


Apply glue to the tabs on part A.

11 Step 11

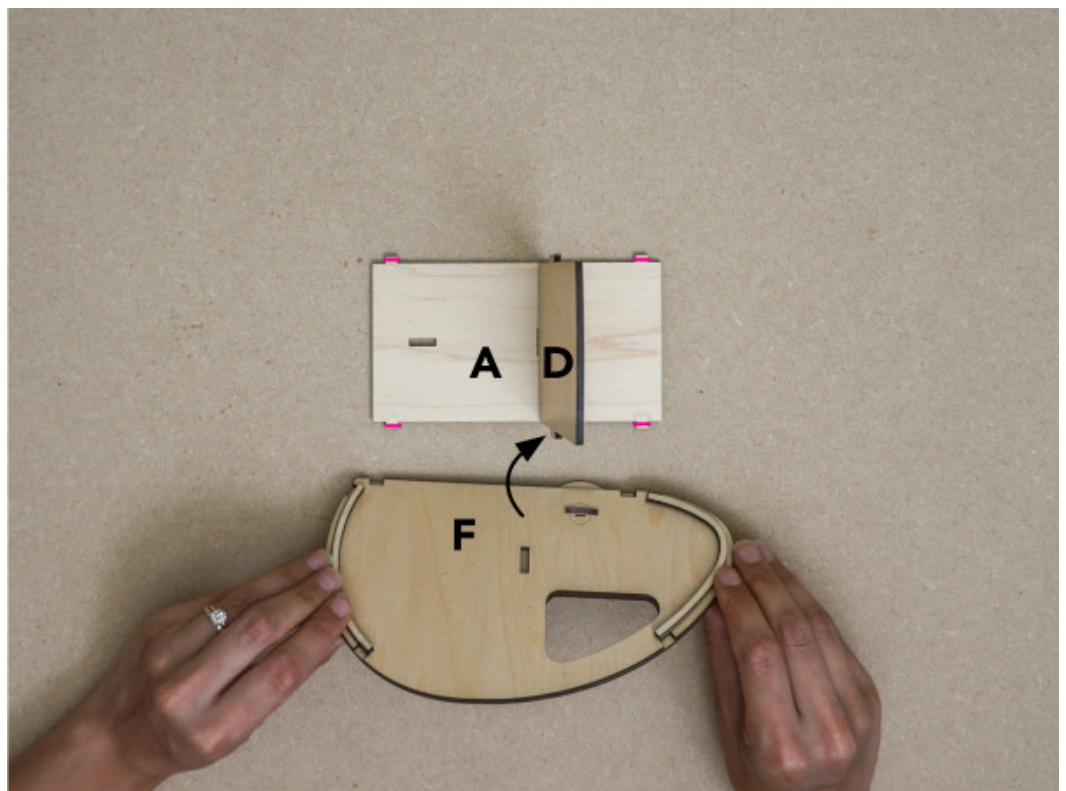


Align the F assembly to the left side of part A as shown.

12 Step 12

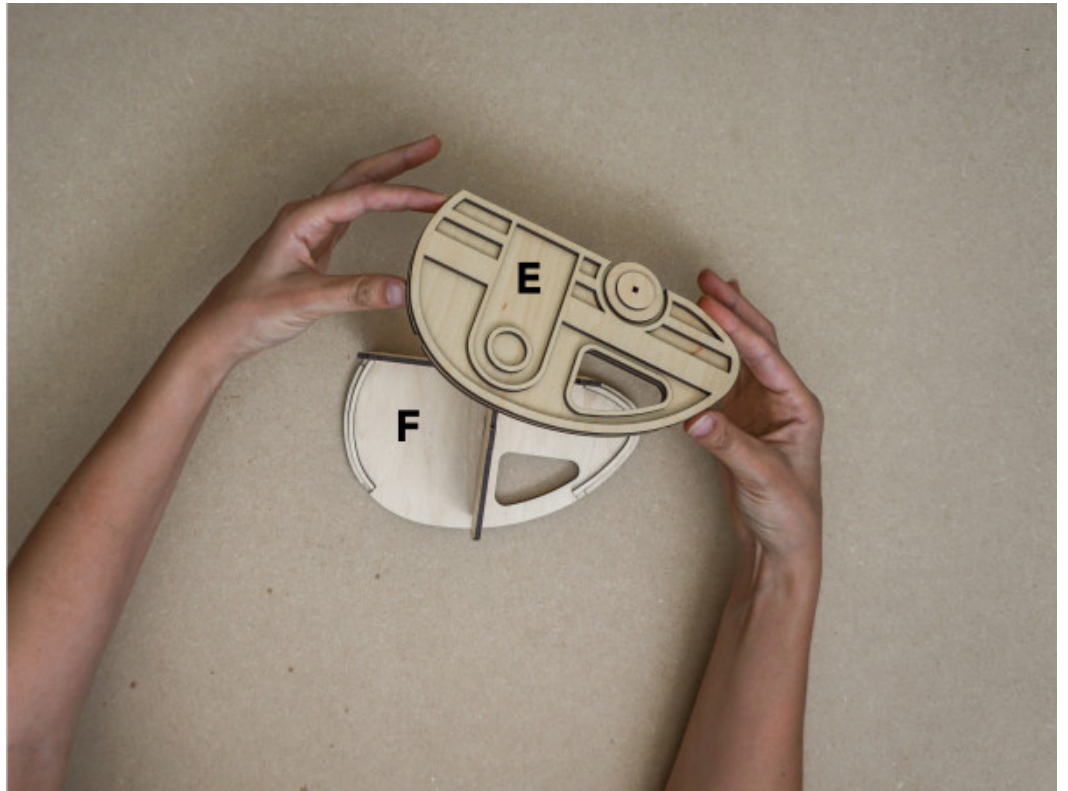


Align the E assembly to the right side of part A.

13 Step 13

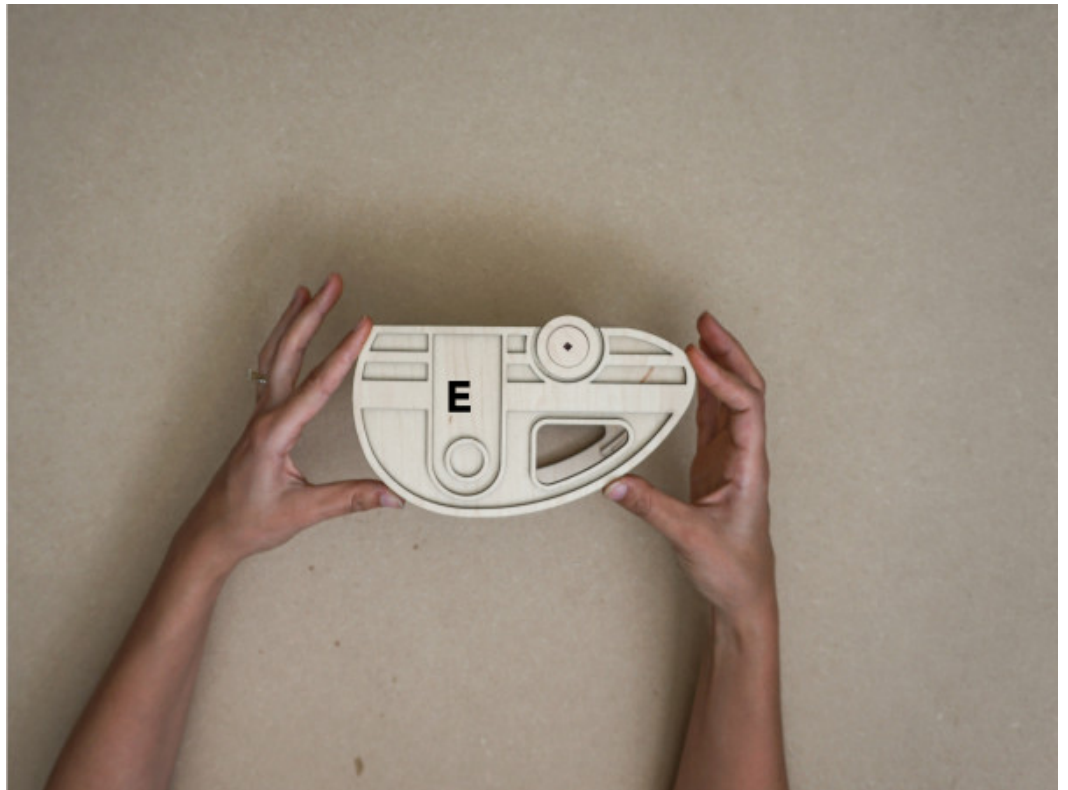

Allow to dry.

14 Step 14

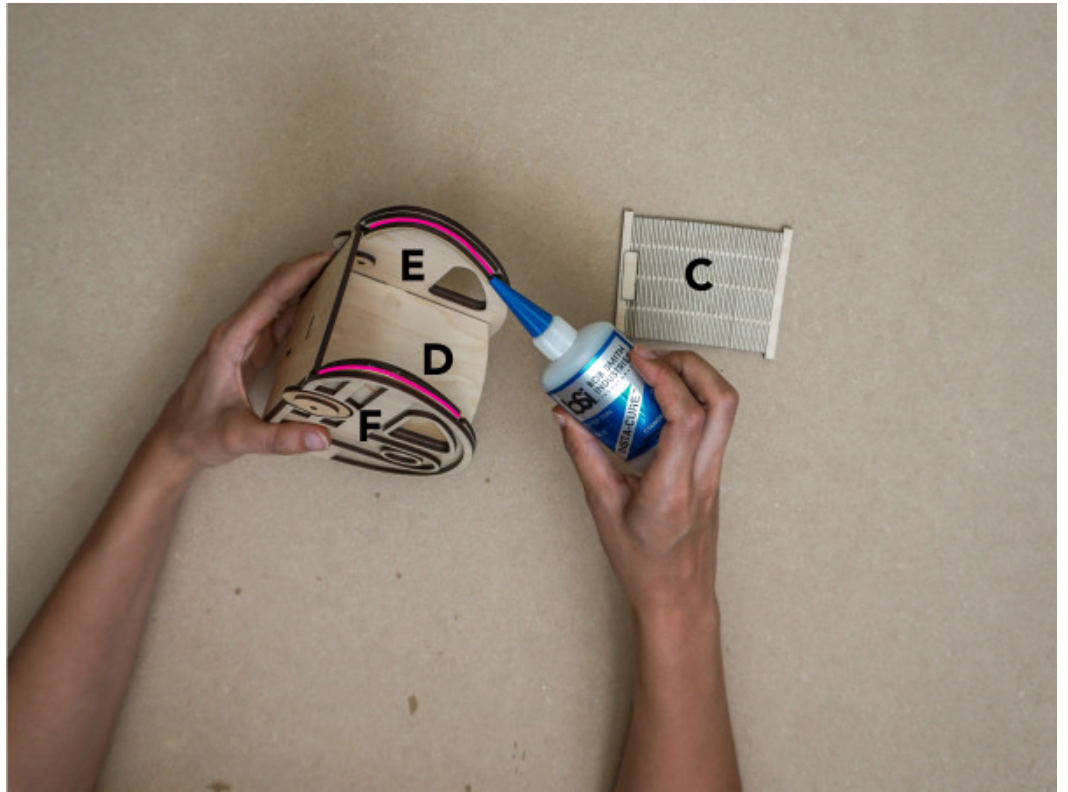


Then apply glue along both J parts

15 Step 15




With the license plate at the bottom, adhere part C to the trailer assembly.

17 Step 16

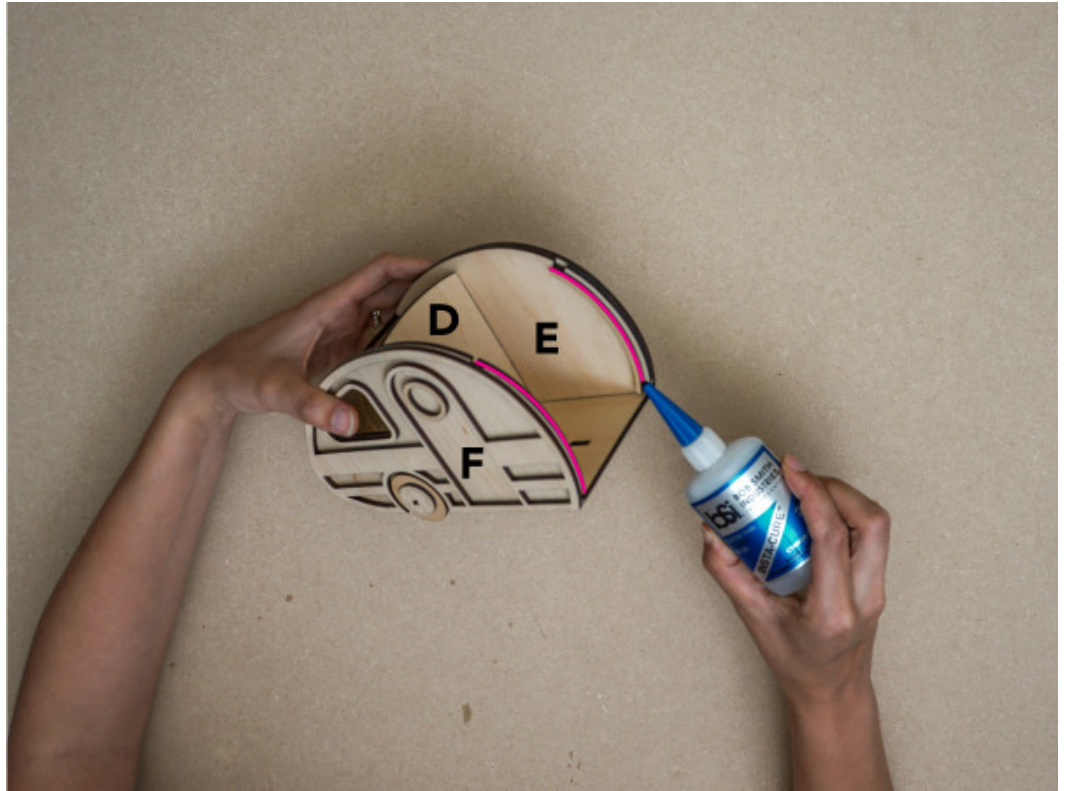


Apply glue along both I parts.

17 Step 17

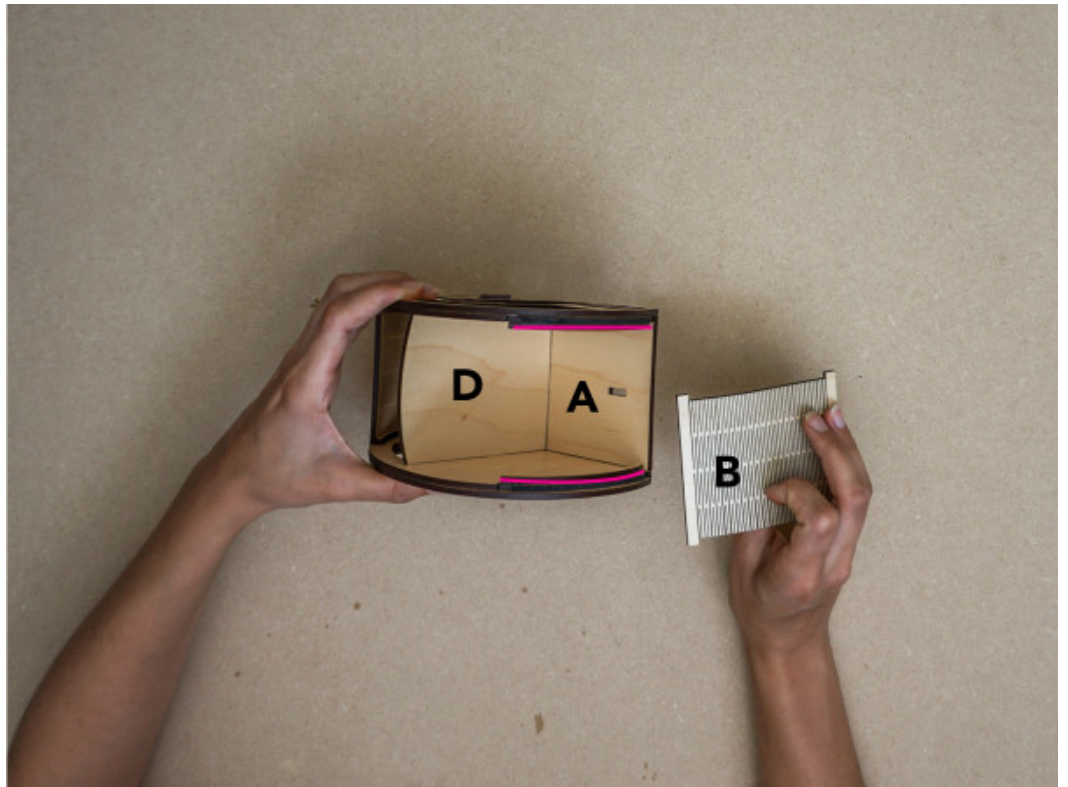


With the license plate at the bottom, adhere part B to the trailer assembly.

18 Step 18

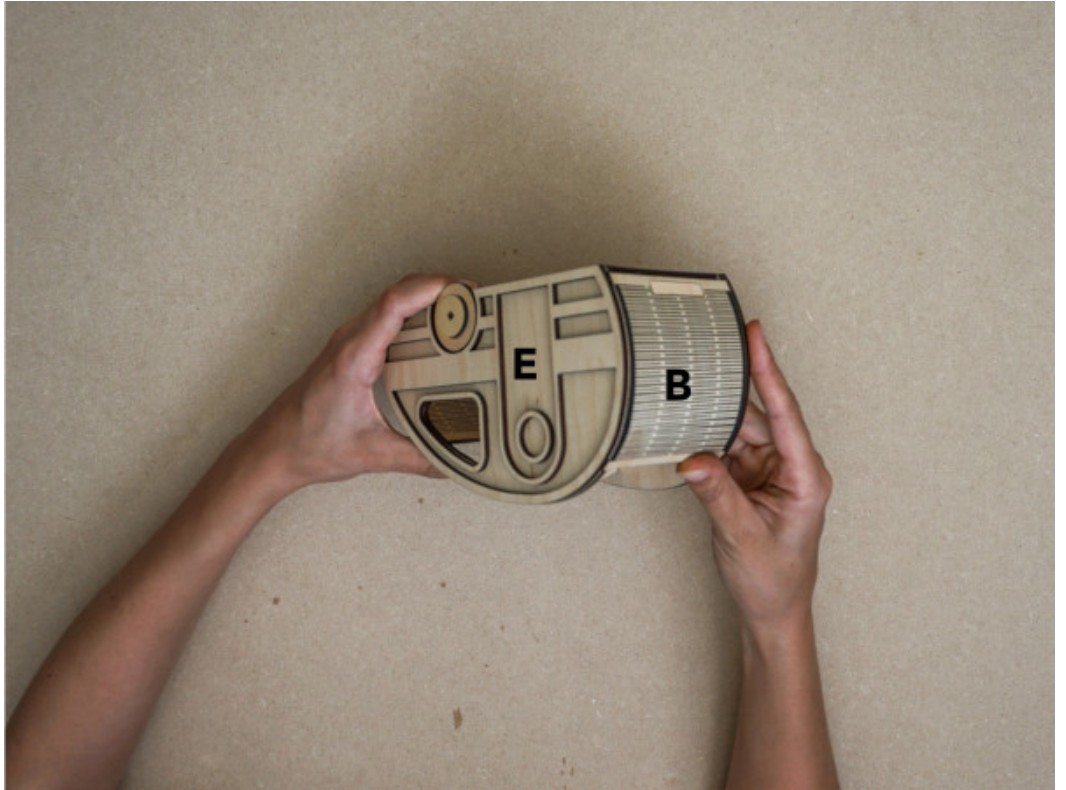

Hold until steady.

19 Step 19

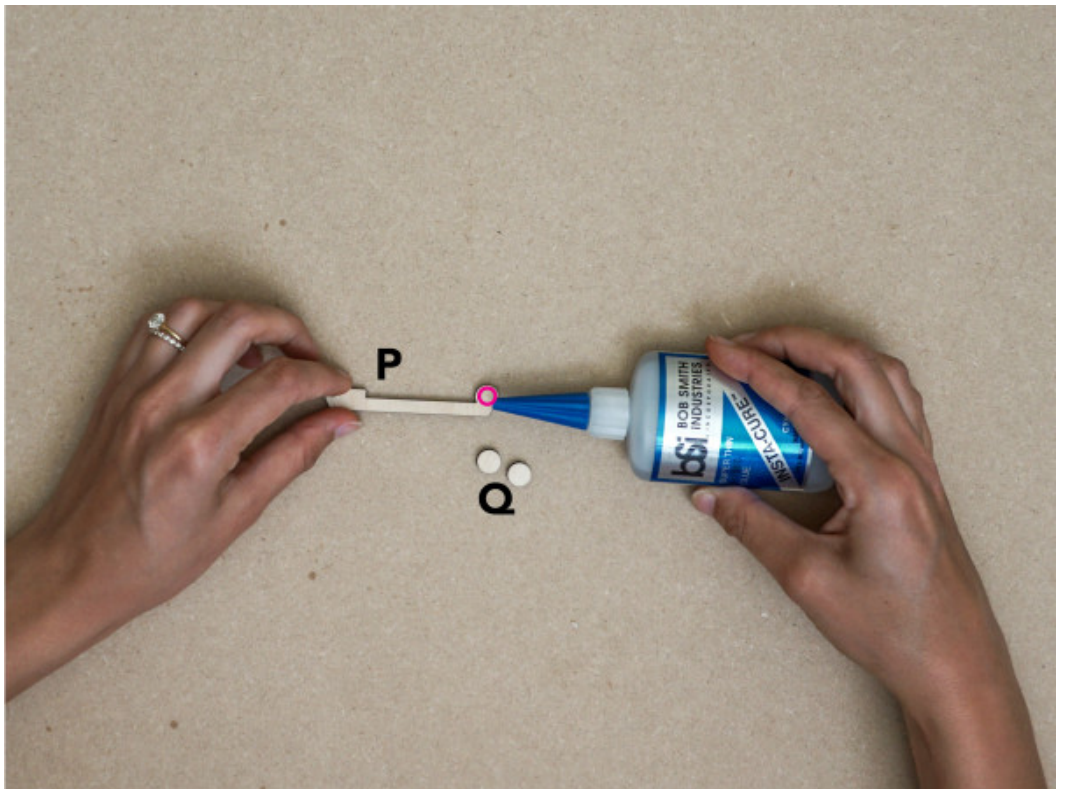

Apply glue to the rounded side of part P.

20 Step 20




Attach the Q parts to both sides.

21 Step 21



Apply glue to the tab of part P

22 Step 22

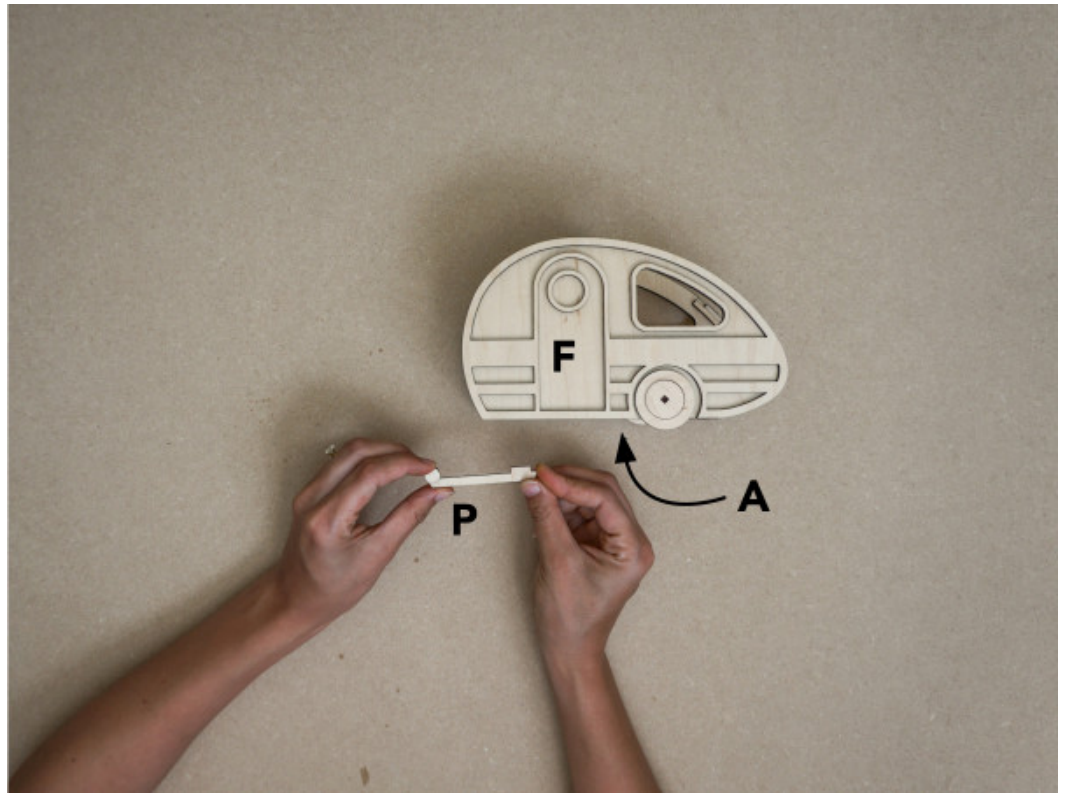

Insert the tab into the underside of the trailer, through the slot in part A.

23 Step 23



Enjoy!