




- ES SET DE TORNILLOS DE SEGURIDAD
- FR JEU DE VIS DE SECURITÉ
- DE SCHRAUBE RIEGEL SATZ
- IT SET VITE DI SICUREZZA
- PT KIT DE PARAFUSO DA SEGURIDADE
- EN WHEEL SCREW LOCK SOCKET
- RO SET PREZDANE ANTIFURT PENTRU

17mm

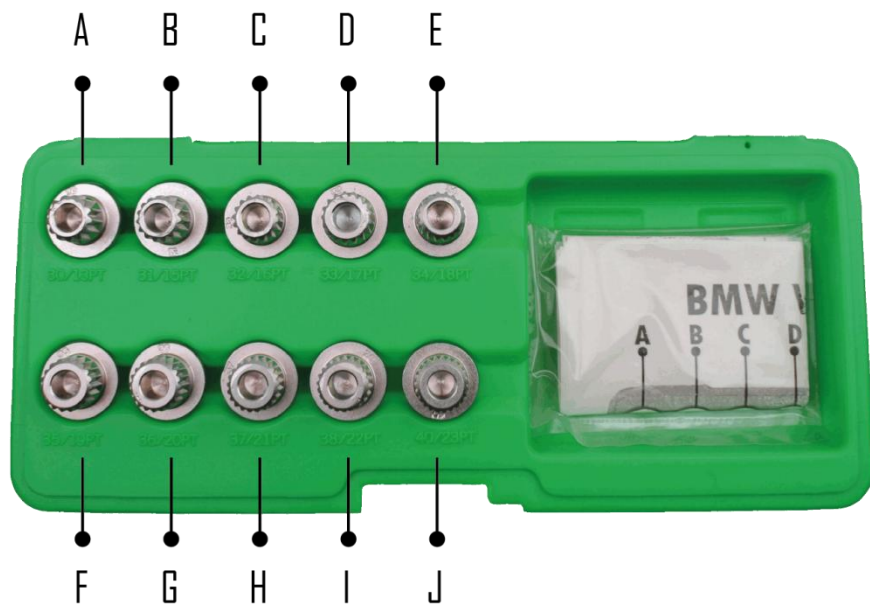

- A:#30 (13PT) F:#35 (19PT)
- B:#31 (15PT) G:#36 (20PT)
- C:#32 (16PT) H:#37 (21PT)
- D:#33 (17PT) I:#38 (22PT)
- E:#34 (18PT) J:#40 (23PT)