



Setting Dock Lines and Securing your Boat to Side Dock Cleats

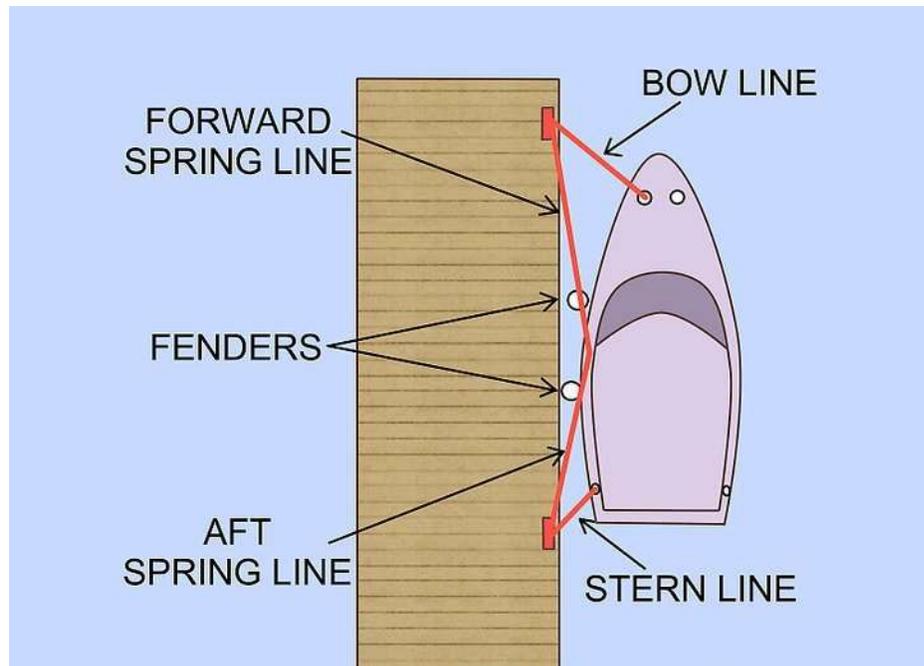

Cleat Hitch Knot

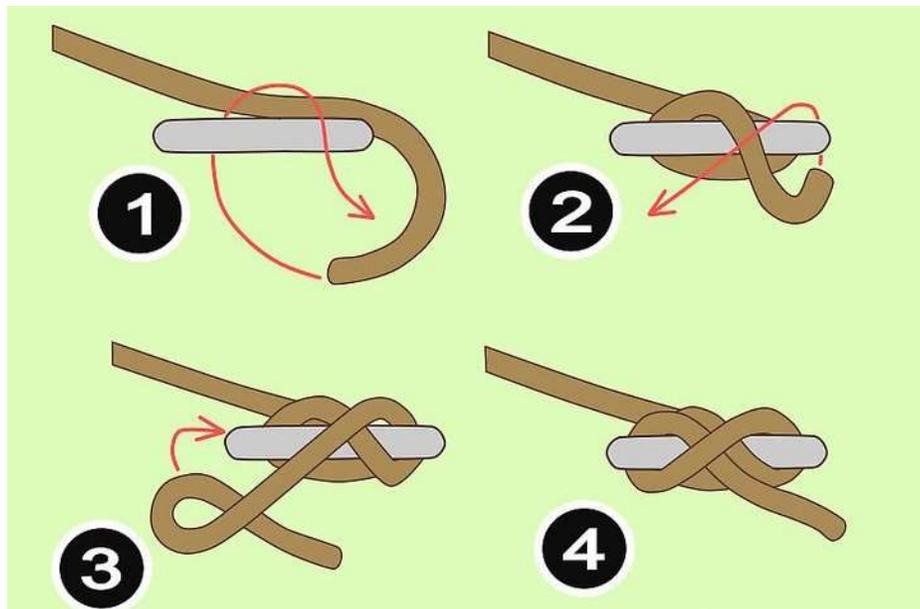

- Keep bow and stern line taut so that boat cannot move forward and cause damage to the front of Poly Dock when waves or wind occur
- No mooring lines or cleats should be attached to the bow or gray dock bumpers in front of boat (walkway) of the Poly Dock
- Boats should not be touching the bumpers or dock in the bow of the slip
- 2 Boat bumpers/fenders should be on the side of your boat in between poly dock and boat

Additional cleats can be purchased if needed for additional boat mooring
Suggested dock line should be braided nylon