


Tool Needed: 5mm Hex Key

kuat[®]

1. Using the 5mm Hex Key, remove 6mm bolt, split washer and washer.
2. Pull down to slide mount out.
3. Remove plastic spacer from mount.
4. Repeat all steps in reverse to install new mount.

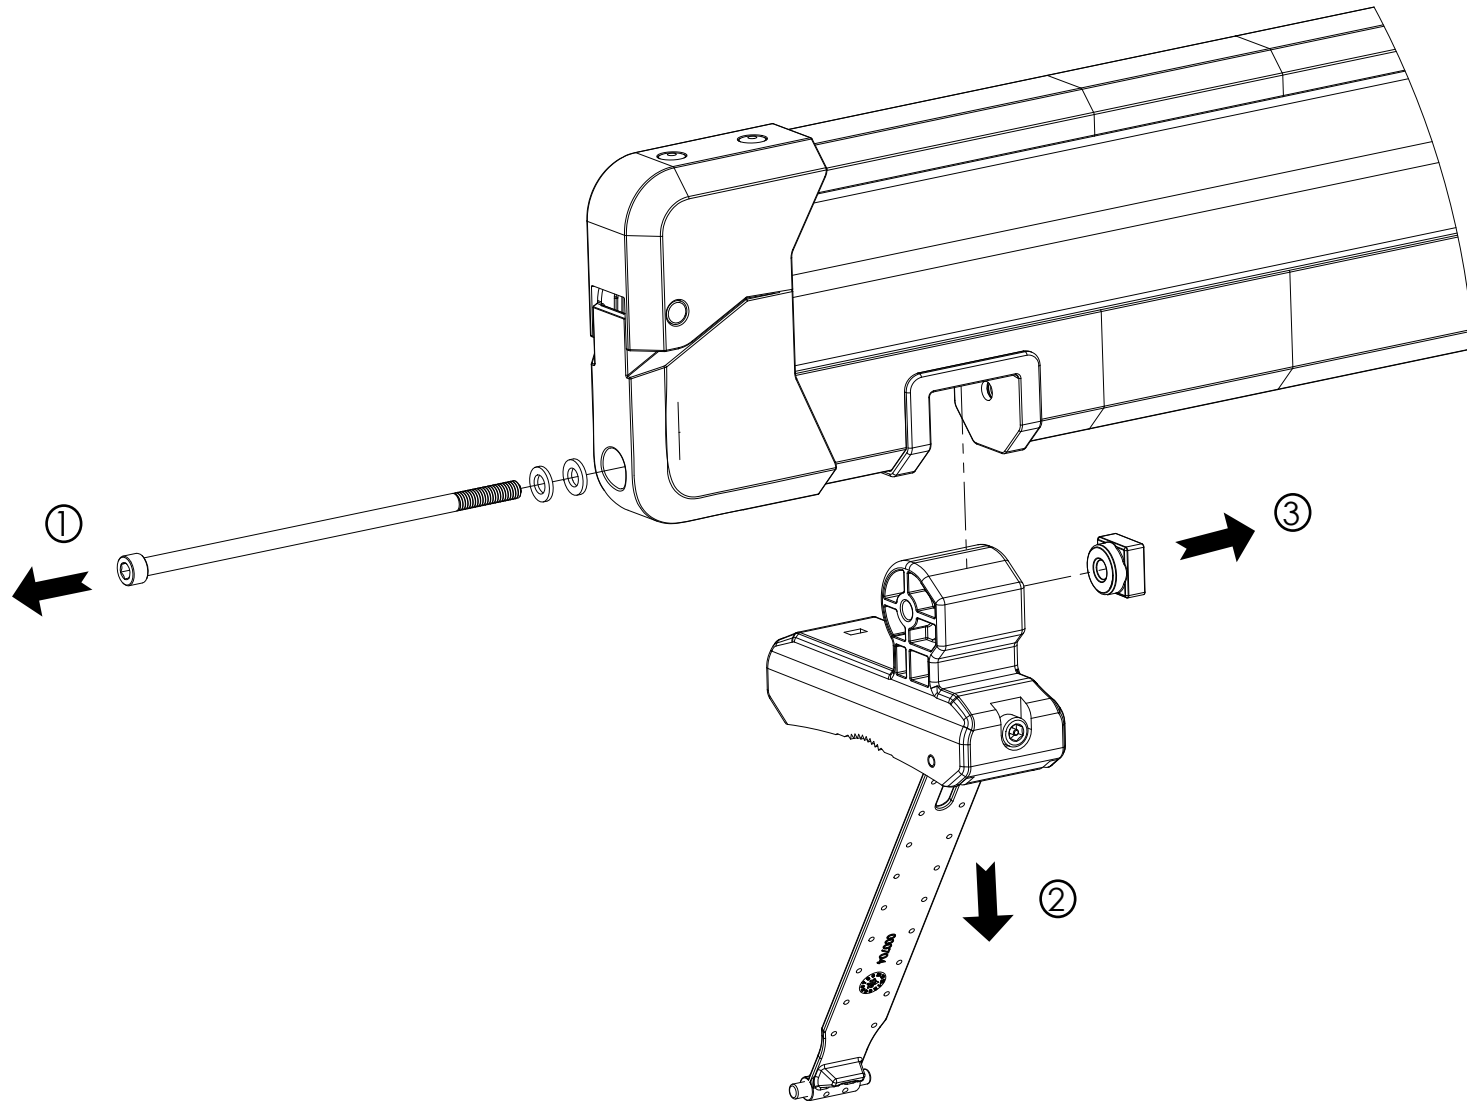

IN-0056

1-877-822-5828
info@kuatracks.com