


Tool Needed: 5mm Hex Key

kuat[®]

1. With the 5mm Hex Key, remove the two bolts.
2. Slide the piston assembly, caps, and washers off the tray assembly.
3. Repeat these steps in reverse to install the new one using medium strength thread locker (Loctite 243) on the two bolts.
 1. NOTE: M8 Torque Spec = 28 Nm, M6 Torque Spec = 12 Nm

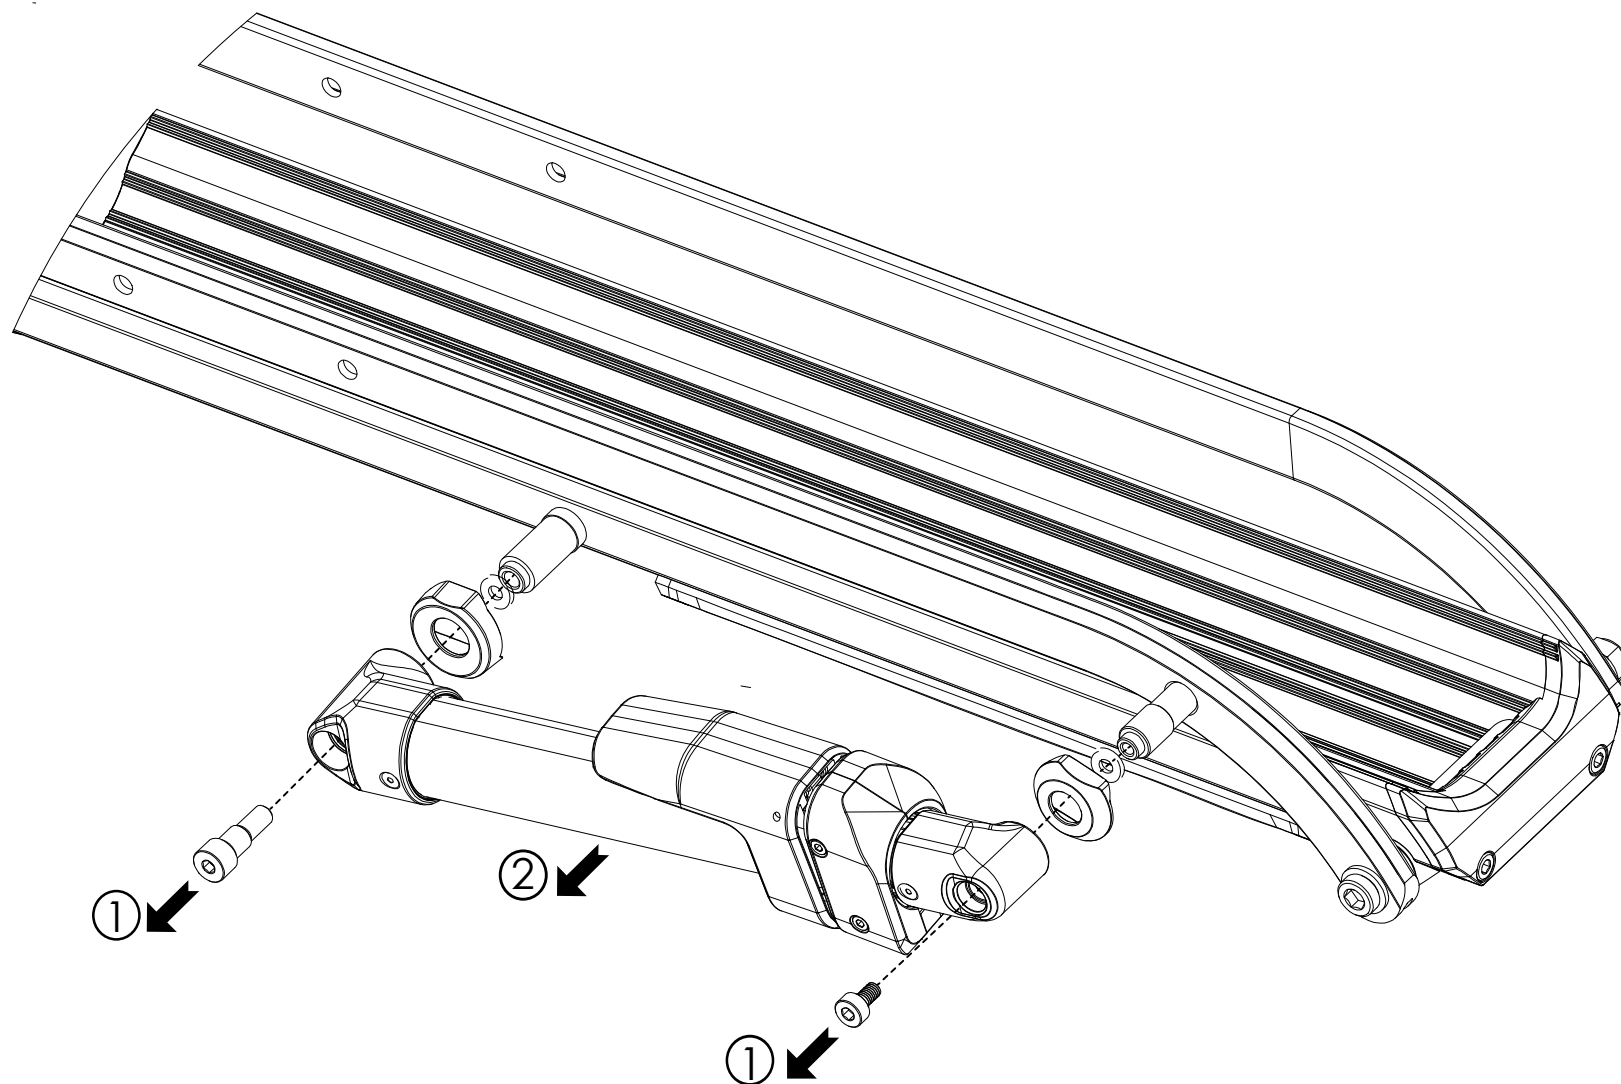

IN-0091

1-877-822-5828
info@kuatracks.com