



Tools Needed:
5mm Hex Key

küat®

- ① Rotate the rack into the stowed position. Using the 4mm Hex Key, remove the M6 foot pedal screw and washer. The old Foot Pedal can now be removed.

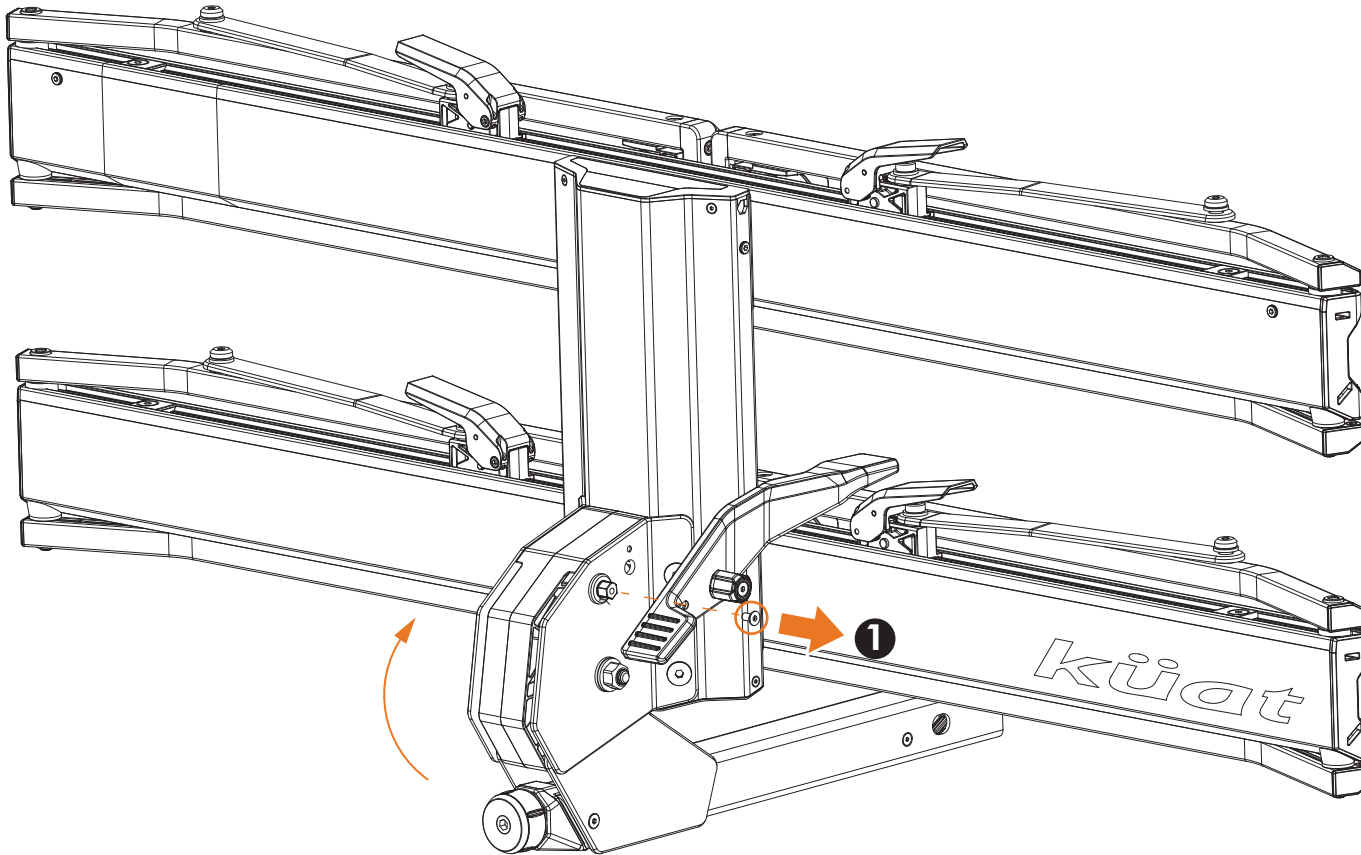

- ② Disengage the safety mechanism by twisting counter clockwise.

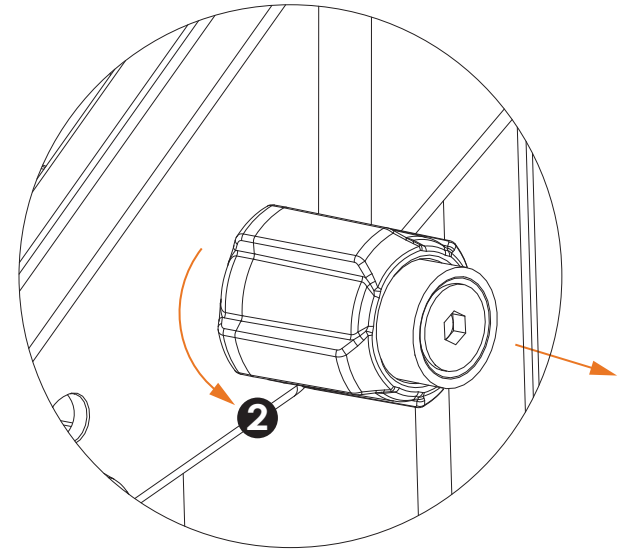

- ③ Install the new Foot Pedal taking note the clocking of the Foot Pedal. Using the 5mm Hex Key, torque the M6 countersunk screw to 10 Nm.