

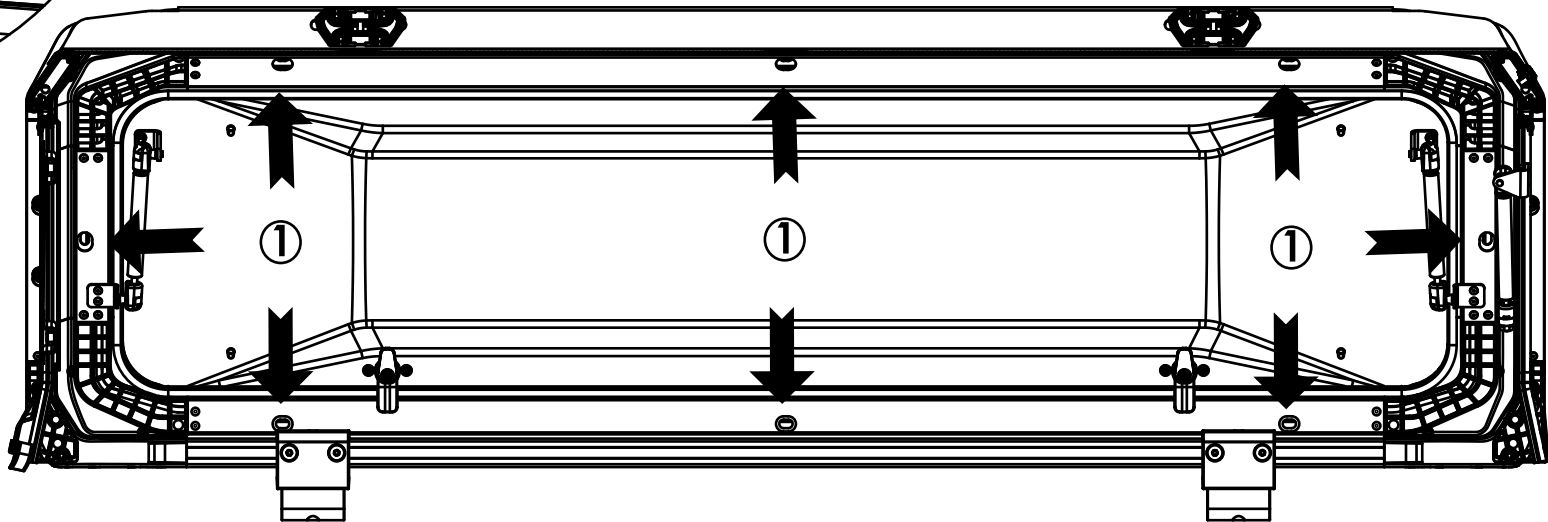
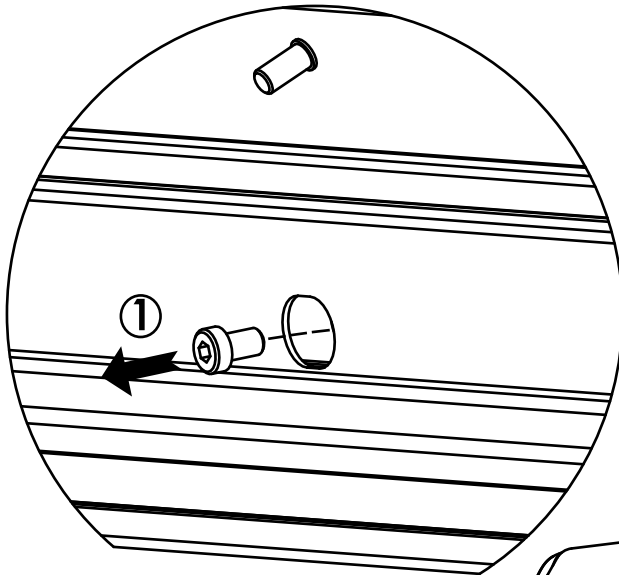
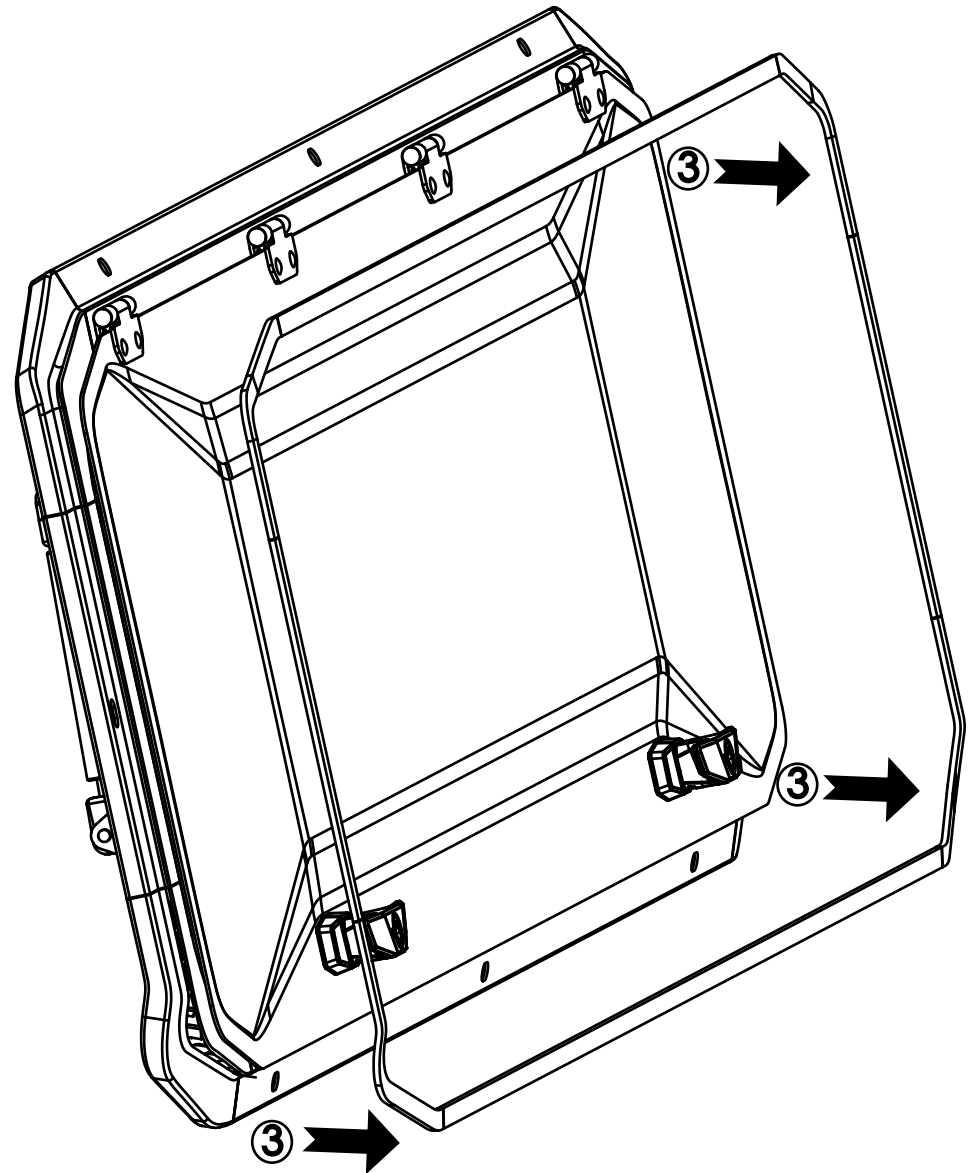


Tools Needed: 6 mm Hex Key, 3 mm Hex Key, Scissors, Scraper, Isopropyl Alcohol

1. Using the 6 mm Hex Key, remove the eight M8 Bolts.
2. Remove the Side Panel from the rack.
3. Remove the old Weather Stripping using the Scraper and Isopropyl Alcohol to provide a clean surface.
4. Cut the new Weather Stripping to length using the Scissors. Peel the adhesive backing and stick the new Weather Stripping to the Side Panel.
5. Follow Steps 1 and 2 in reverse to reinstall the Side Panel. The 3 mm Hex Key can be used to adjust the Locking T-Nut locations if needed. Torque the T-Nut set screws to 5 Nm and M8 Bolts to 20 Nm.

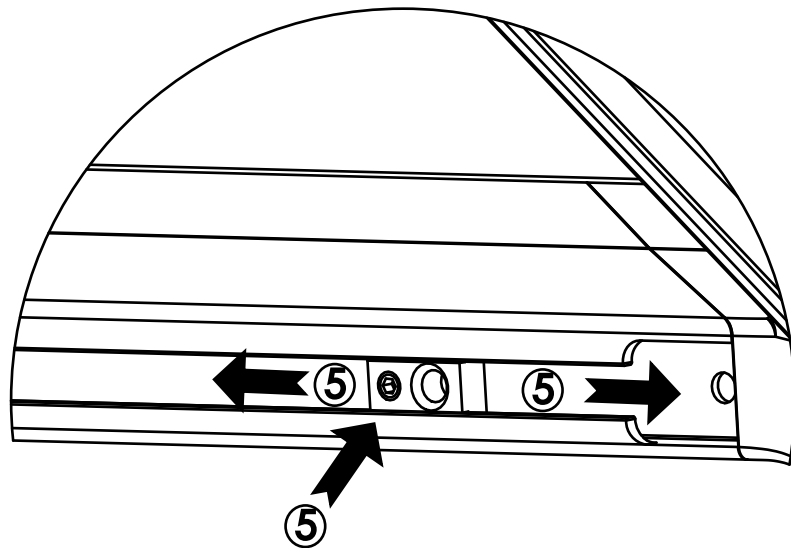

kuat[®]

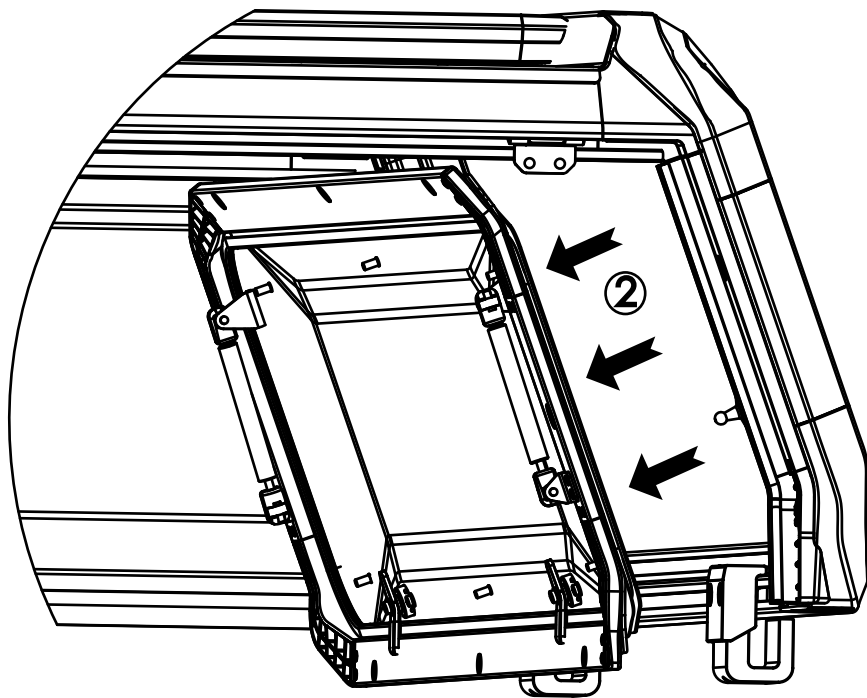

IN-0167.2

1-877-822-5828
info@kuatracks.com