



Tools Needed:
5mm Hex Key




kuat[®]


- ① Using the 5mm Hex Key, remove the two M6 bolts and washers from both Side Rail connections.

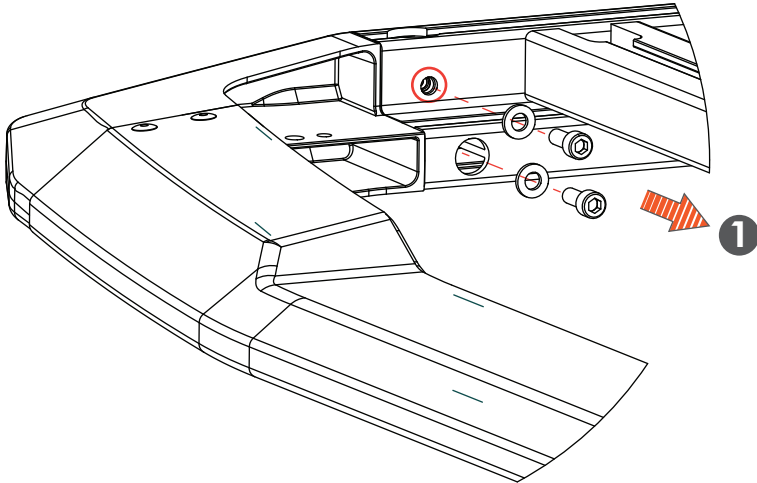

- ② Remove the Nose.

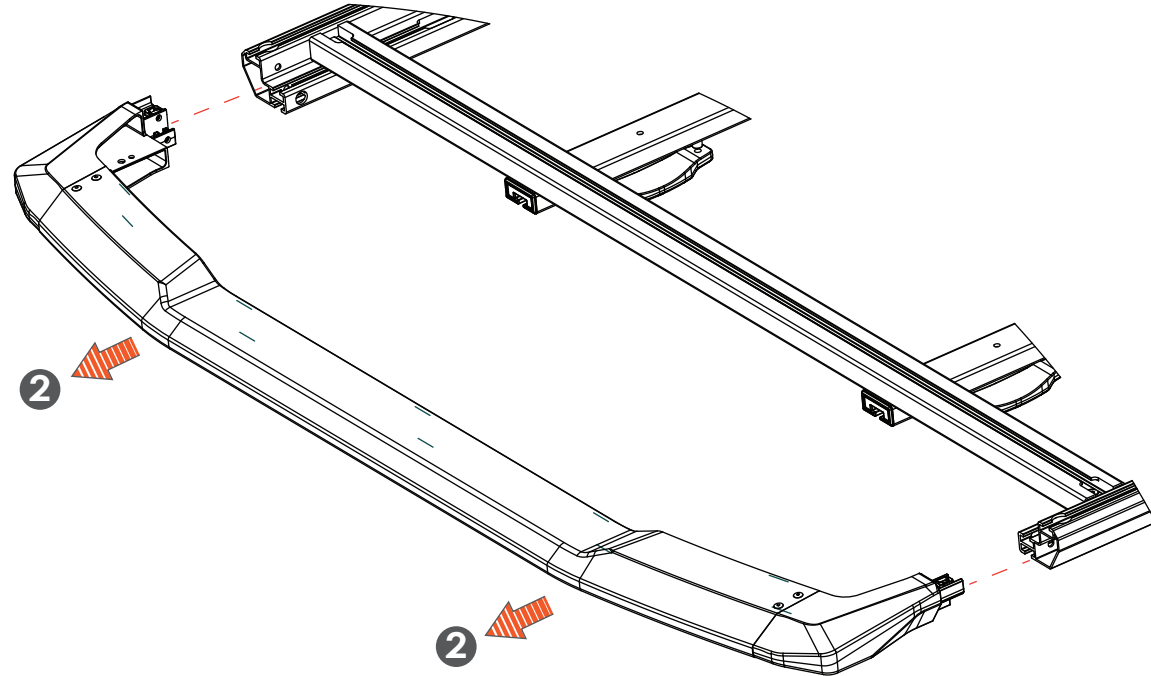

- ③ Install two new M6 square nuts into each corner of the new Nose.

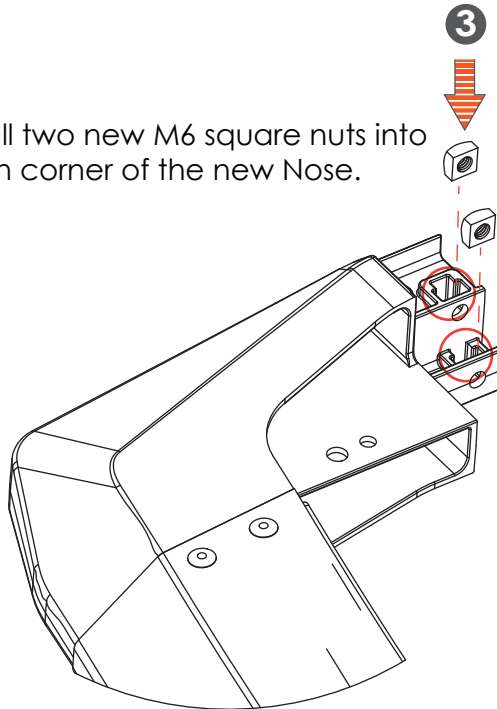

- ④ Install the new Nose by following steps 1 & 2 in reverse. Torque the M6 bolts to 12Nm.

