


Tools Needed:

T25 Torx Key, Flat Head Screwdriver




kuat[®]


- ① Using the T25 Torx Key, remove the five torx screws from the Nose Backing Cover.

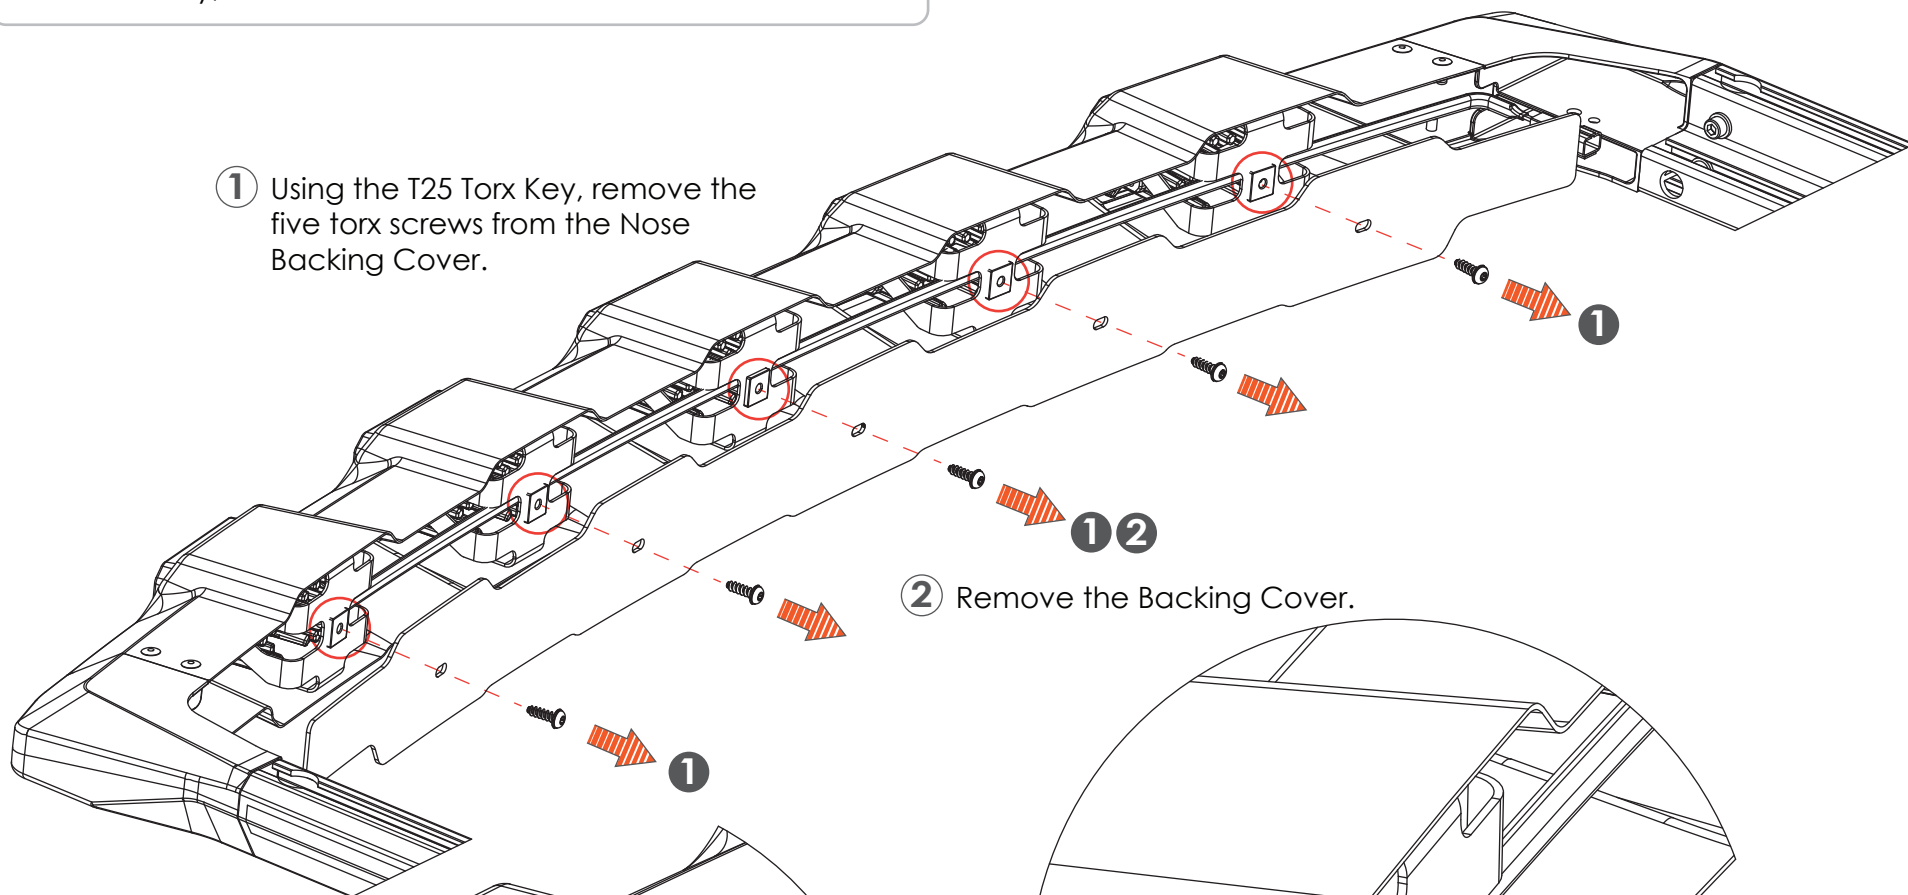

- ② Remove the Backing Cover.

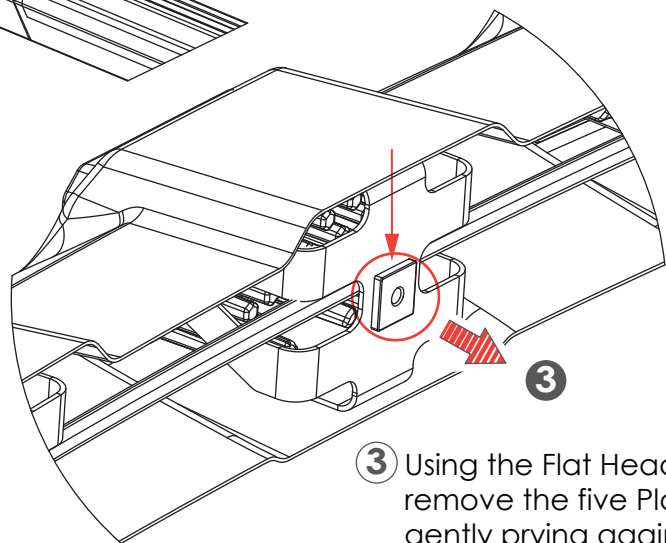

- ③ Using the Flat Head Screwdriver remove the five Plastic Nut Inserts by gently prying against the light housing.

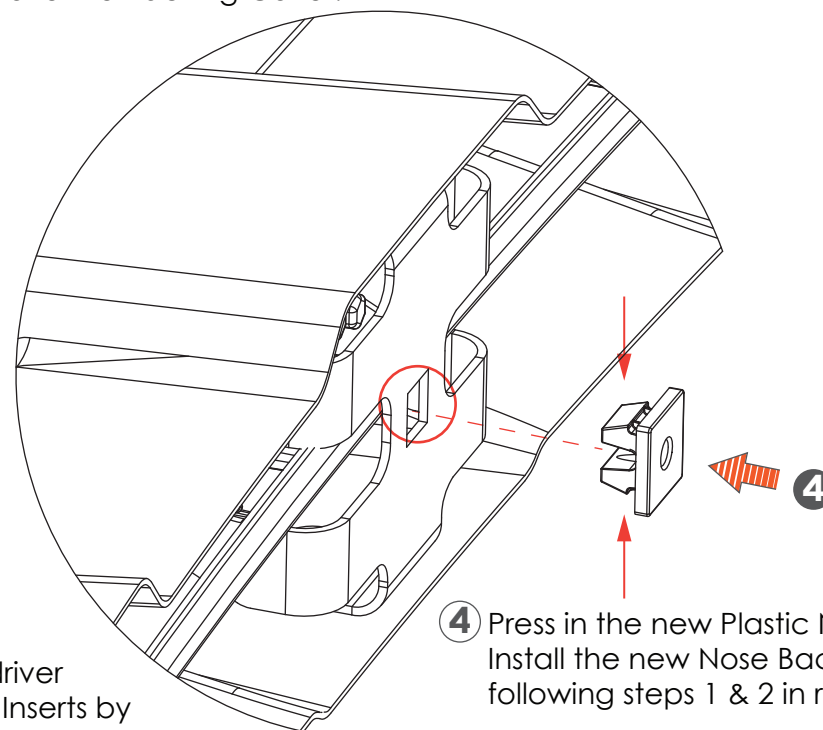

- ④ Press in the new Plastic Nut Inserts. Install the new Nose Backing Cover by following steps 1 & 2 in reverse.