


**Tools Needed:**

5mm Hex Key, 4mm Security Hex Key

**kuat**<sup>®</sup>

- ① Using the 4mm Security Hex Key, remove the rack from the vehicle. Flip the rack over.

- ② Using the 5mm Hex Key, remove the two M6 bolts attaching the old Universal Mount Extrusion to the crossbars.

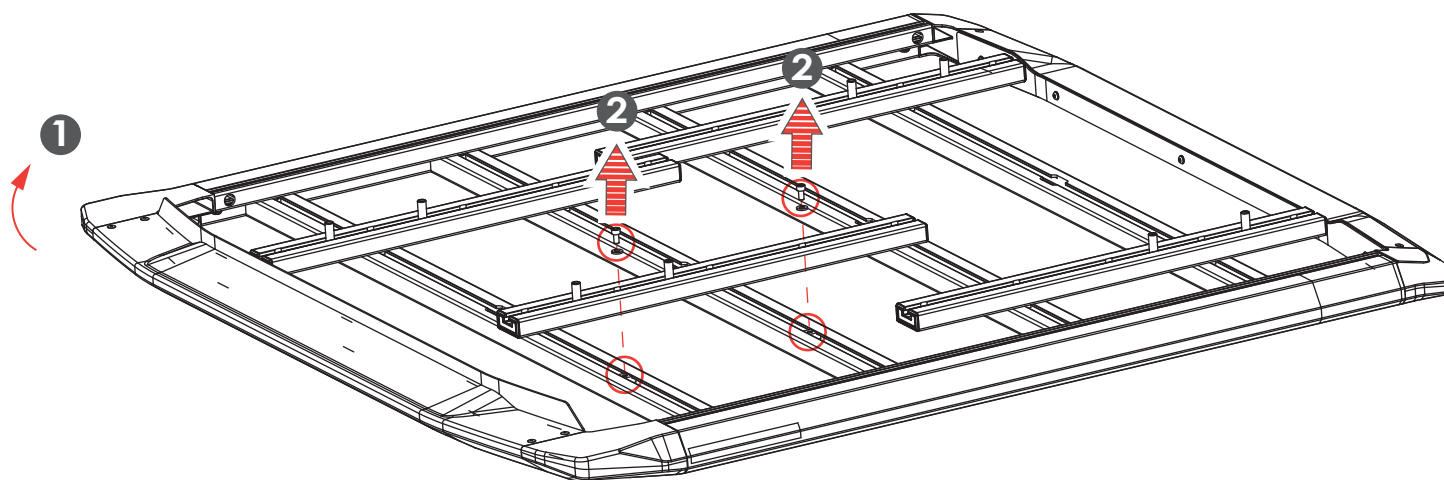

- ③ Replace the old crossbar T-Nuts with the provided new T-nuts.

- ④ Install the new Universal Mount Extrusion and rack by following steps 1-4 in reverse. Torque the M6 screws to 12 Nm.

