


Tools Needed:

6mm Hex Key, 5mm Hex Key

***kuat***[®]

- ① Using the 6mm Hex Key, remove the eight M8 screws that connect the rack to the vehicle direct mounts.

- ② Using the 5mm Hex Key, remove the eight M6 screws connecting the Direct Mounts to the vehicle.

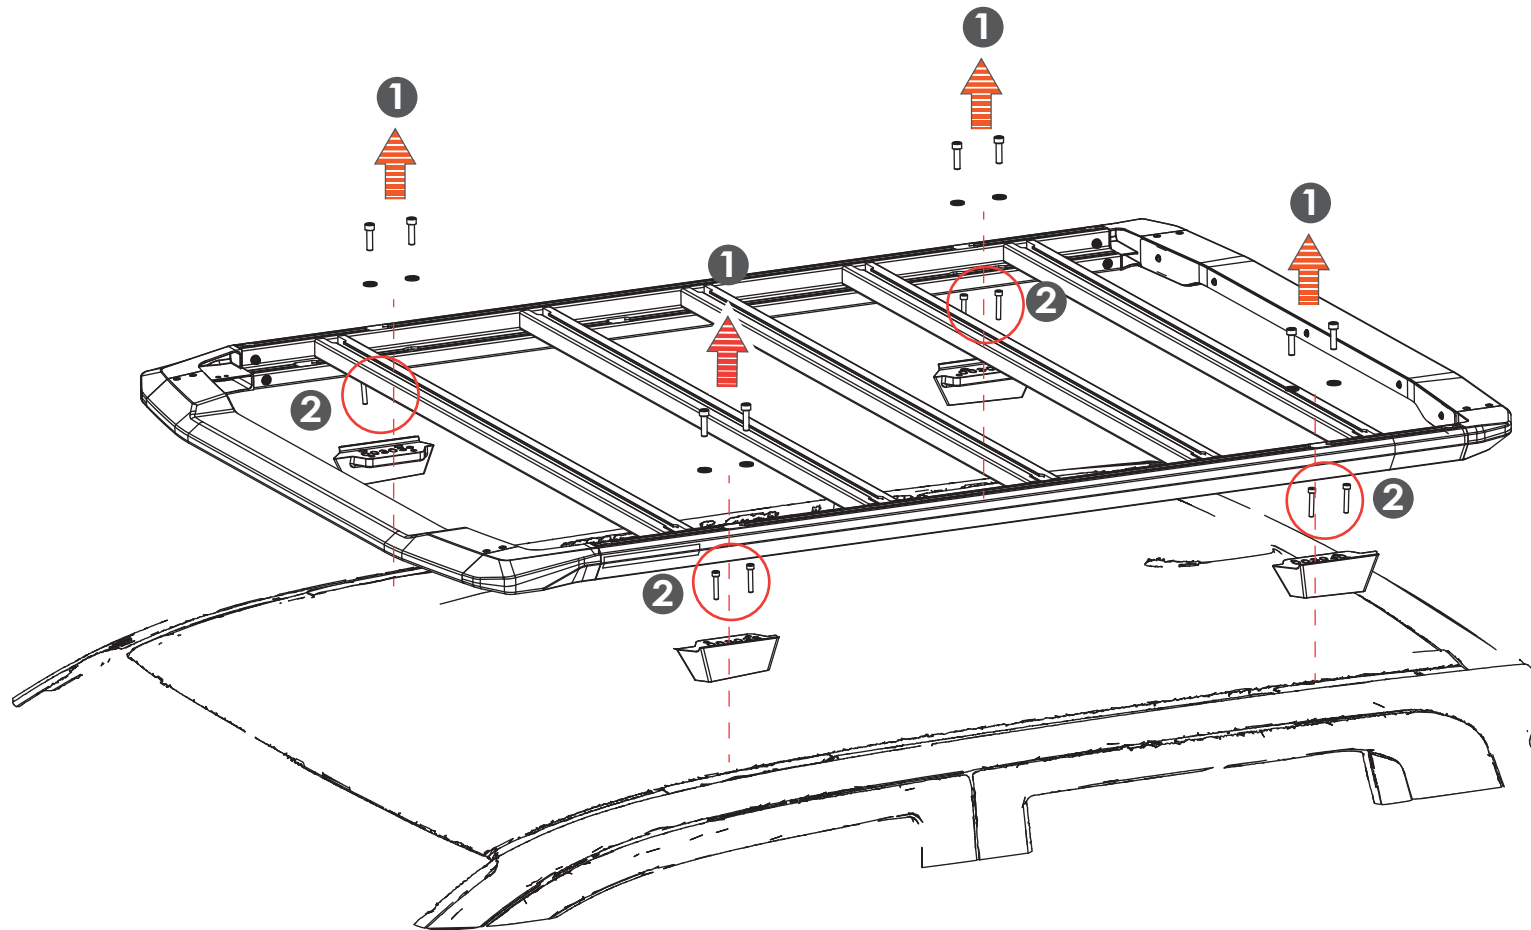

- ③ Install the new Direct mounts. Take note of the Mount positions. Torque the M6 screws to 15 Nm.

- ④ Reinstall the rack. Torque the M8 screws to 20 Nm.