



Tools Needed:
6mm Hex Key



kuat[®]

- ① Using the 6mm Hex Key, remove the ten M8 x 30mm screws that connect the rack to the vehicle direct mounts.

- ② Using the 6mm Hex Key, remove the eight M8 x 40mm screws connecting the Direct Mounts to the vehicle.

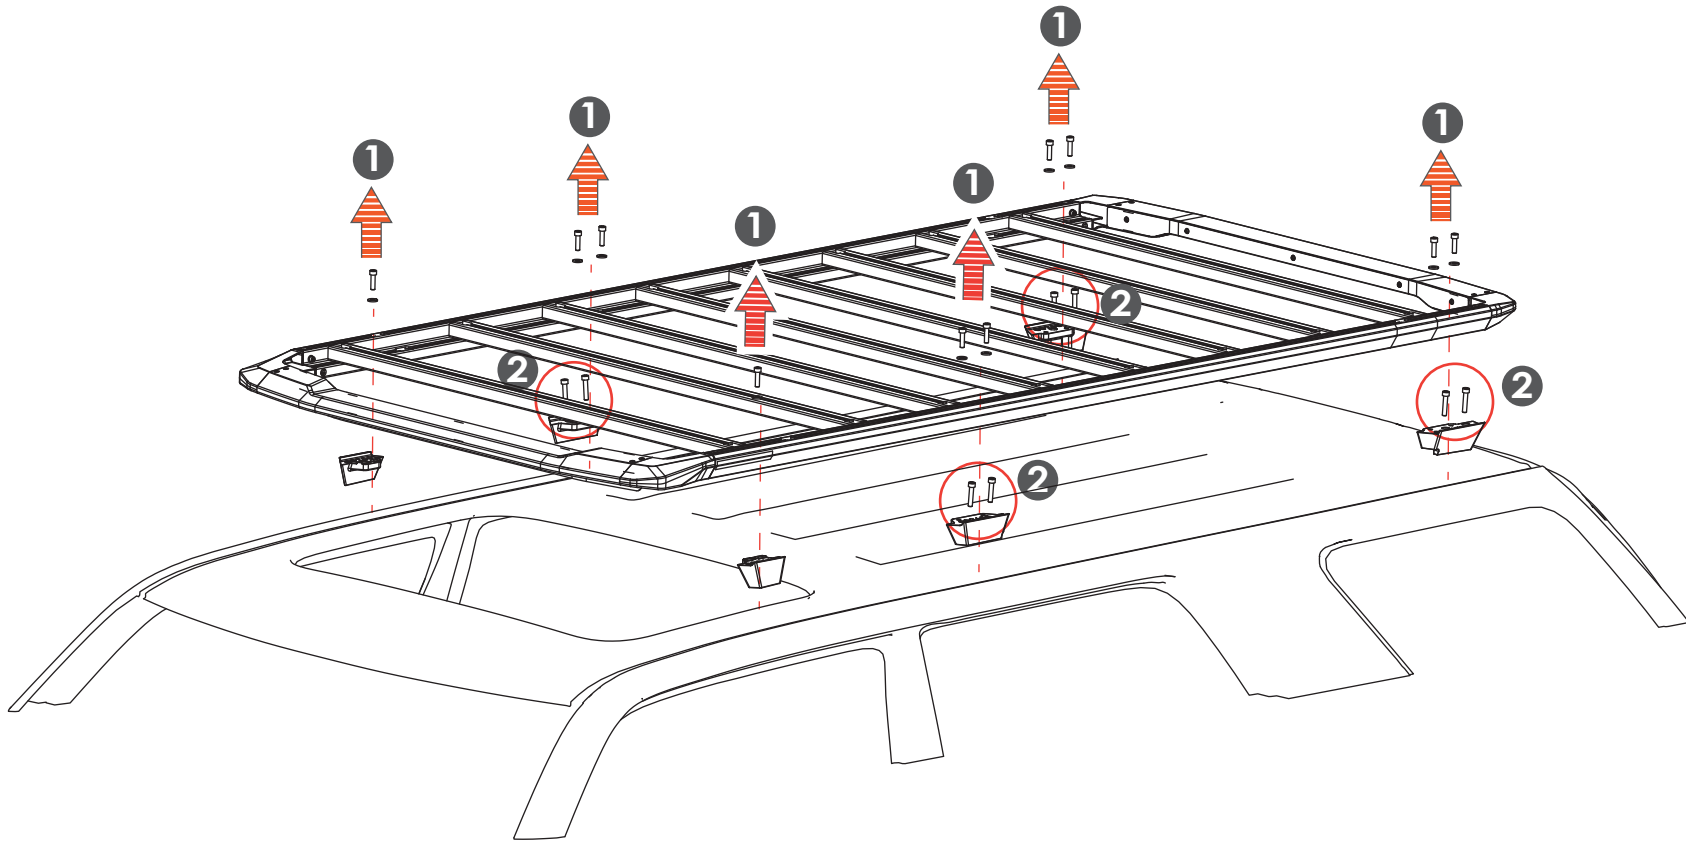

- ③ Install the new Direct mounts. Take note of the Mount positions. Torque the M8 screws to 20 Nm.

- ④ Reinstall the rack. Torque the M8 screws to 20 Nm.