


Tools Needed:

T25 Torx Key, Flathead Screwdriver

**kuaat**[®]

- ① Using the T25 Key, remove the five screws from the Tail Backer.

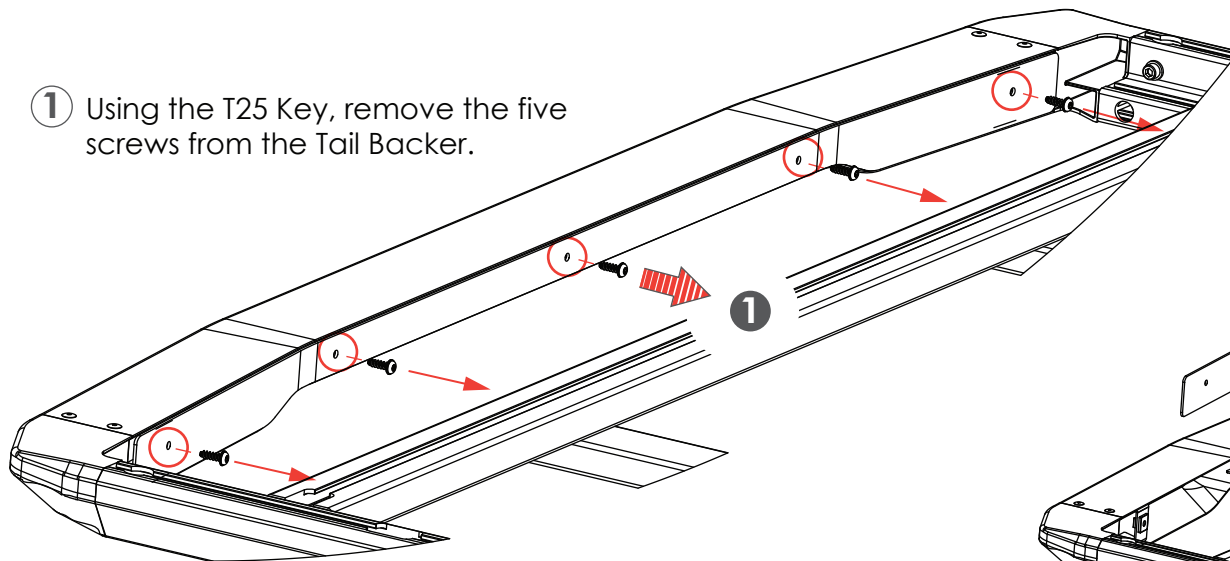


②





②



- ② Remove the Tail Backer.

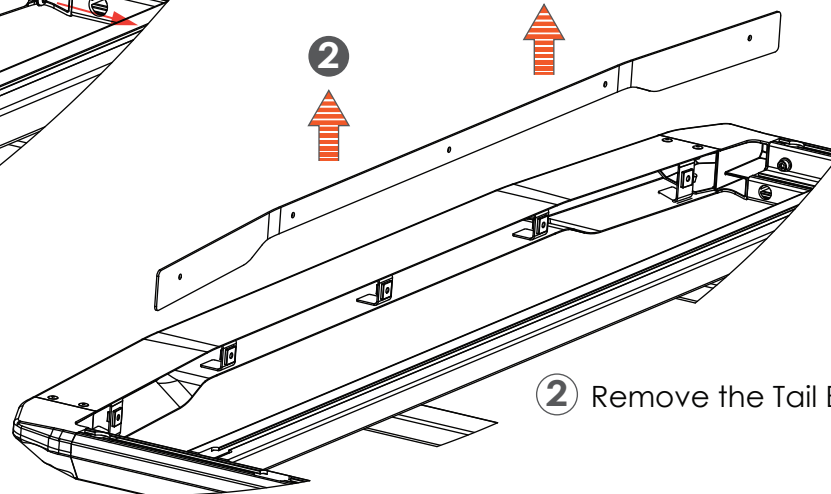

- ③ Using the Flathead Screwdriver, remove the Plastic Nut inserts with a gentle prying motion.

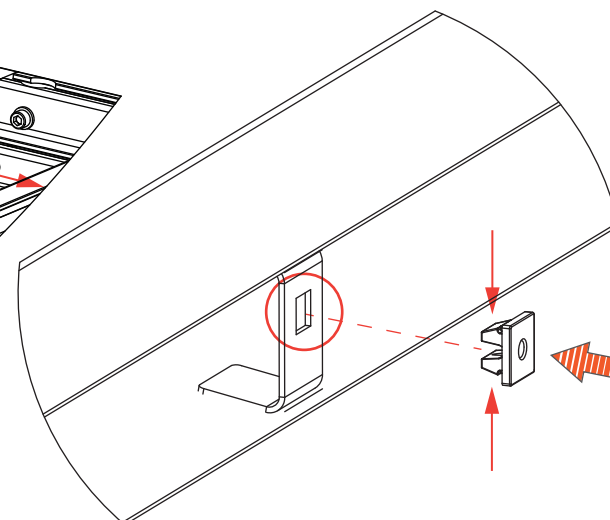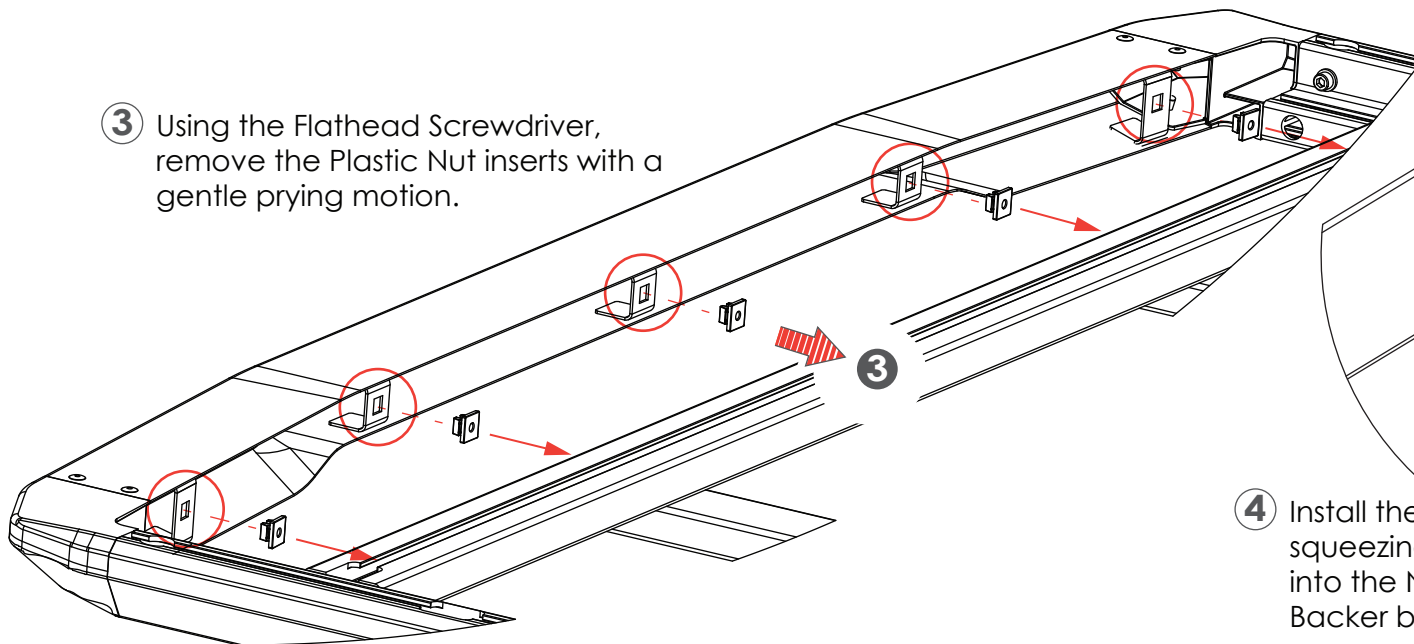

- ④ Install the new Plastic Nut inserts by squeezing the two tabs and pressing into the Nose brackets. Install the new Backer by following steps 1 & 2 in reverse.