


Tools Needed:
4mm Security Hex Key




kuat[®]

- ① Using the 4mm Security Hex Key, remove the M6 Security Screws and Universal Mount.

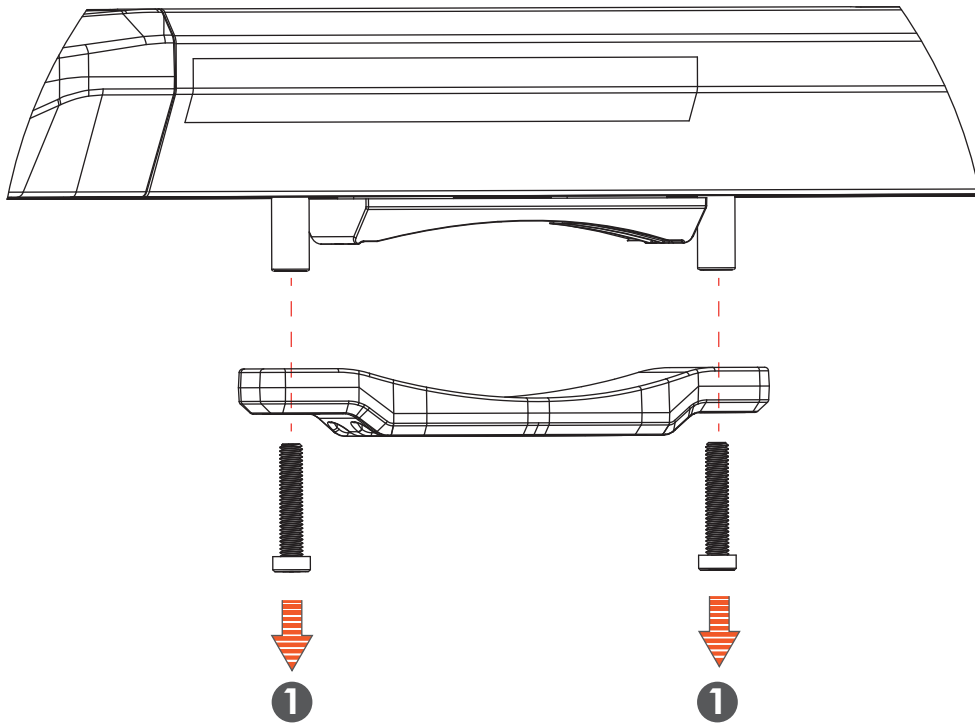

- ② Remove the Crossbar Spacer and T-Nuts by sliding them out of the extrusion.

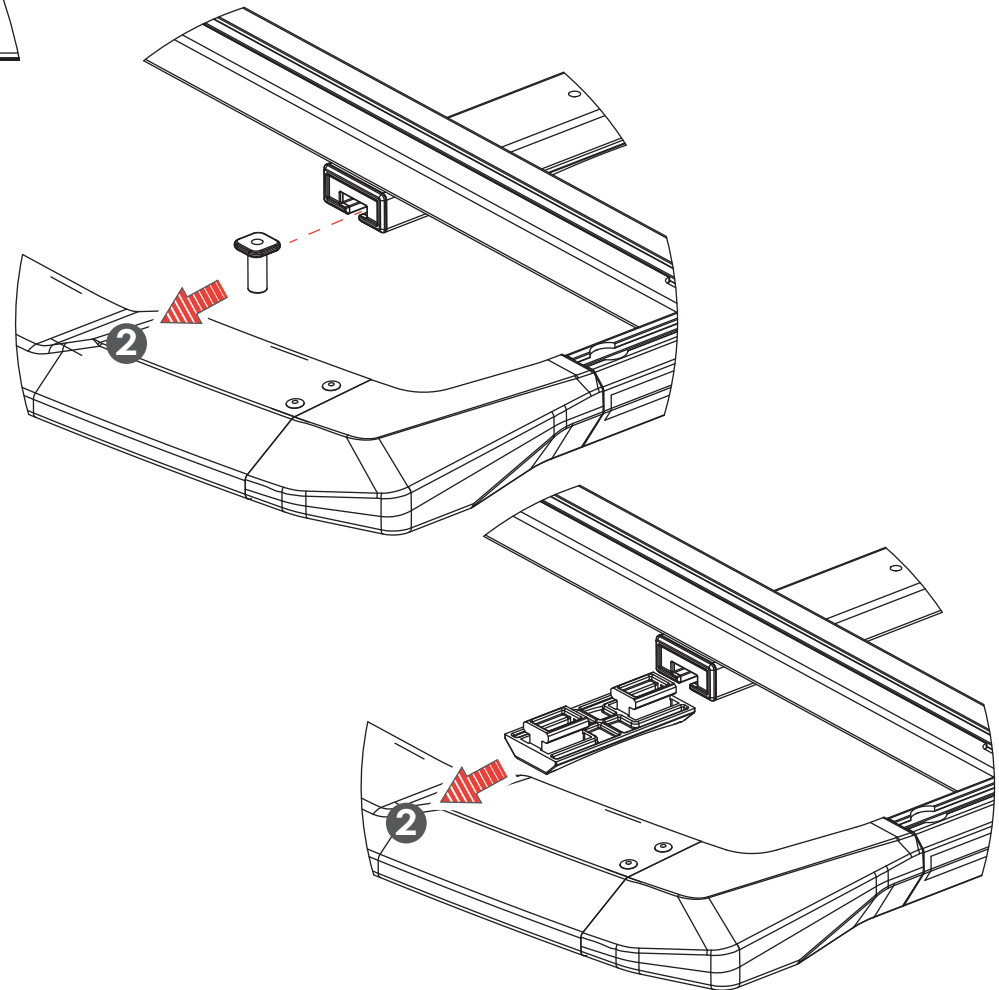

- ③ Reinstall the Spacer, T-Nuts, and Universal Mount by following steps 1 & 2 in reverse. Torque the M6 screws to 7 Nm.