


Tools Needed:

3mm Hex Key, 4mm Hex Key, 8mm Hex Key

kuat[®]

① Flip the rack upside down.

② Using the 3mm Hex Key, remove the M5 Countersunk Screw.

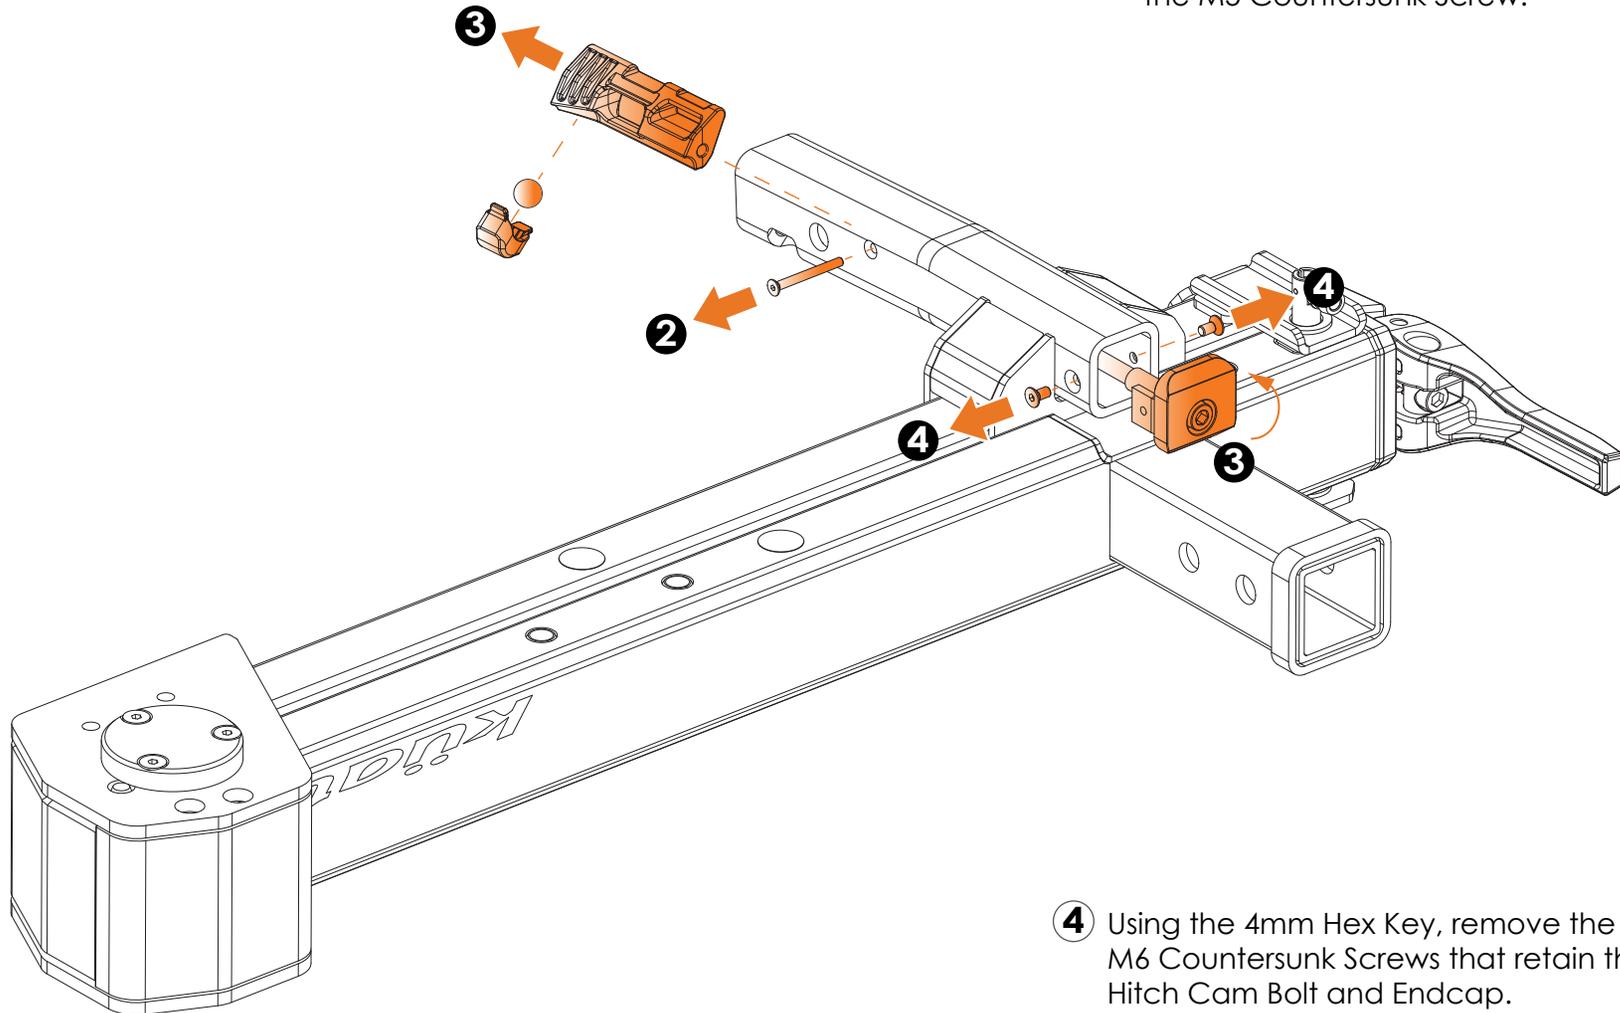

③ Using the 8mm Hex Key, loosen the Hitch Cam Bolt until the Hitch Cam, Cam Pad, and Stainless Ball can be removed.

④ Using the 4mm Hex Key, remove the two M6 Countersunk Screws that retain the Hitch Cam Bolt and Endcap.

⑤ The new Hitch Cam System can now be installed by following steps 2-4 in reverse. Torque the M5 screw to 5 Nm. Torque the M6 screws to 9 Nm.