


Tools Needed:


4mm Hex Key

küat®


① Swing the Pivot Shroud open and use the 4mm Hex Key to remove the two M6 Socket Screws. The Shroud can now be removed.

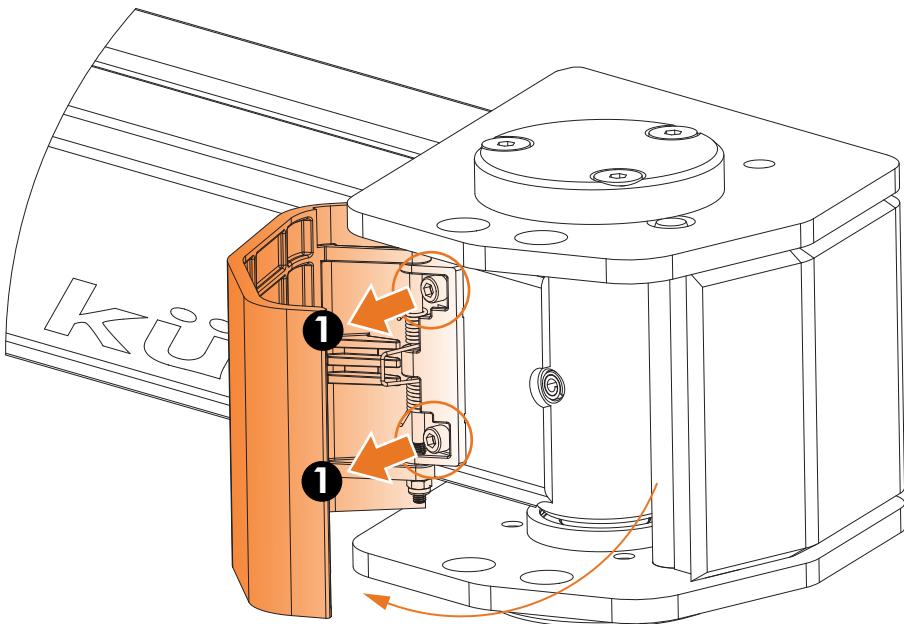

② Install the new Pivot Shroud; **do not remove** the cardboard installation tool until after the M6 Screws are threaded. Using the 4mm Hex Key, torque the M6 Screws to 9 Nm.

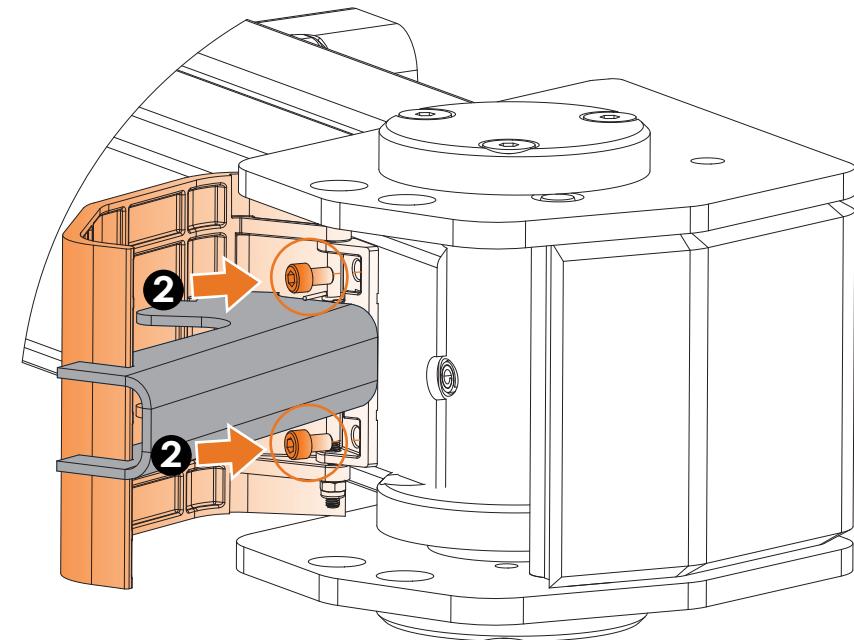

③ Remove the cardboard installation tool.

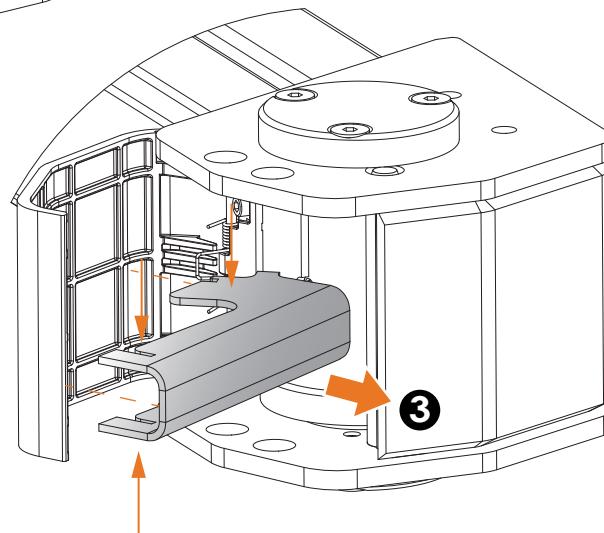

IN-0215

1-877-822-5828
info@kuatracks.com