


Tools Needed:
4mm Hex Key


kuat[®]

① Open the Varial.

② Lift up the latch securing the Universal Crossbar Mount to the vehicle crossbar.

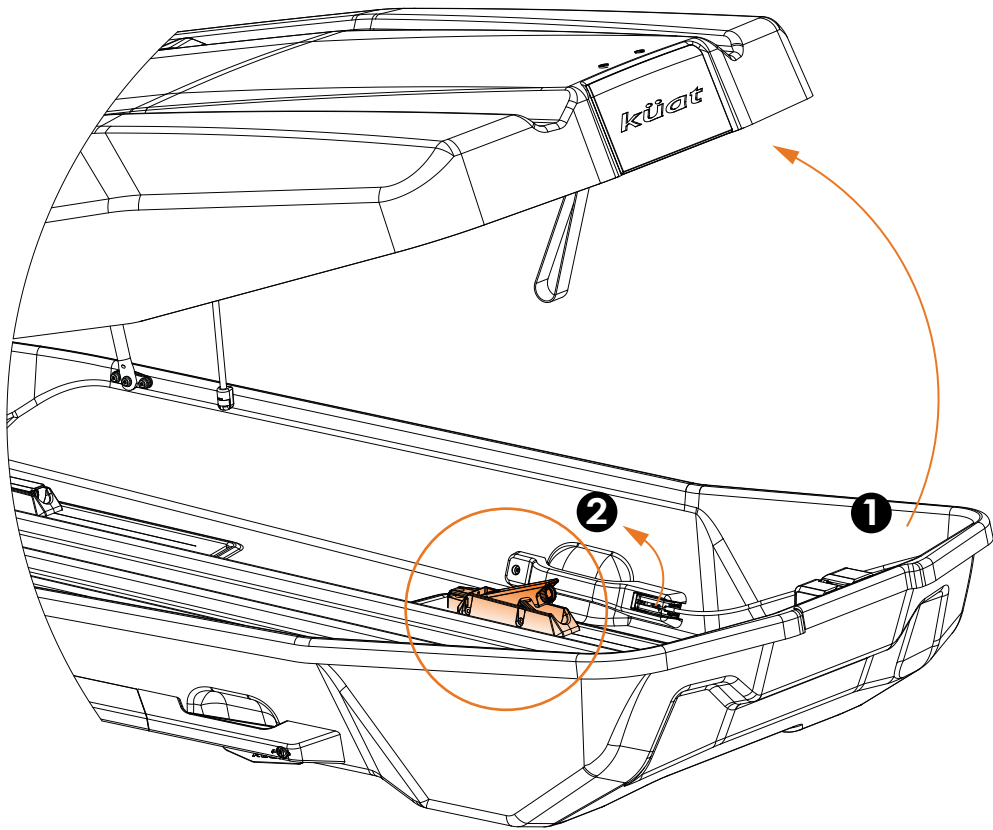

③ Using the 4mm Hex Key, remove the M6 Bolt that locates and attaches the Universal Crossbar Mount to the Varial.

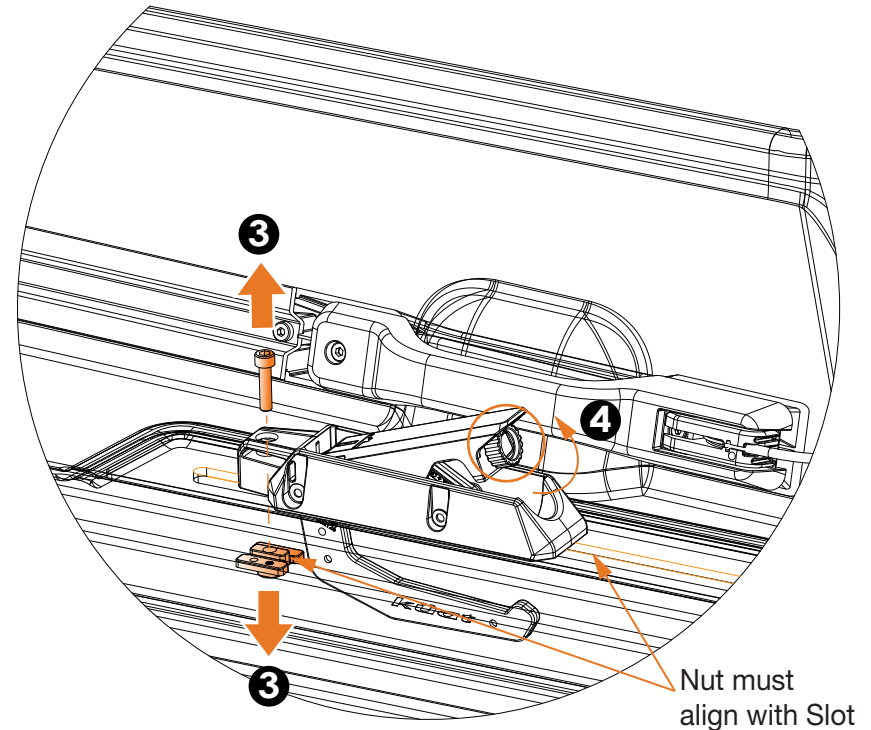

④ The Universal Crossbar Mount can now be removed from the Varial. The tension adjustment knob can be turned counterclockwise if needed to help in removal.

⑤ Install the new Universal Crossbar Mount by following steps 1-5 in reverse. Make sure to match the position and tension setting of the old Universal Crossbar Mount. Torque the M6 Bolt to 10 Nm.