
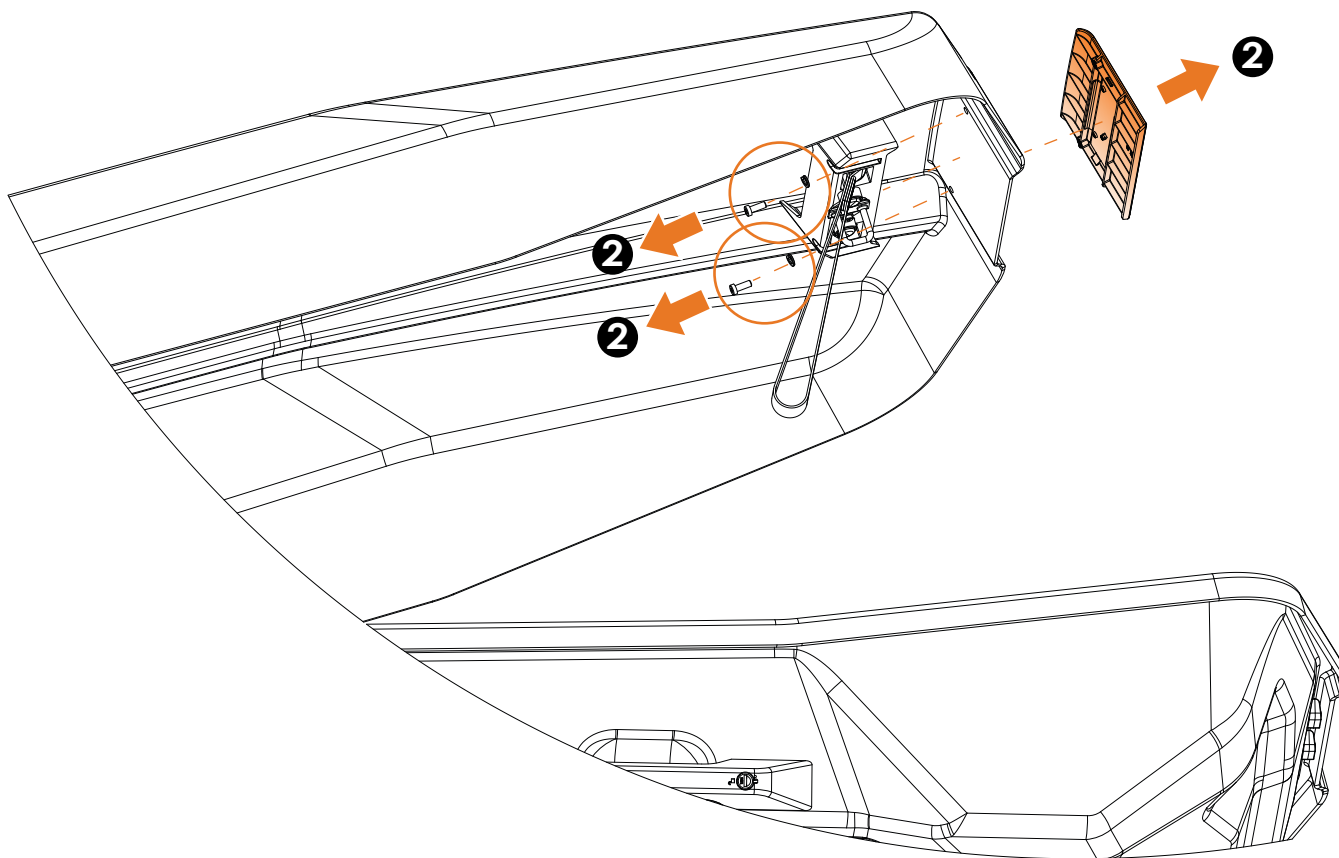


Tools Needed:
4mm Hex Key

kuat[®]

1 Open the Varial.

2 Using the 4mm Hex Key, remove the two M6 Bolts and Split Washers that attach the Rear Badge to the Upper Shell and Upper Rear Latch.

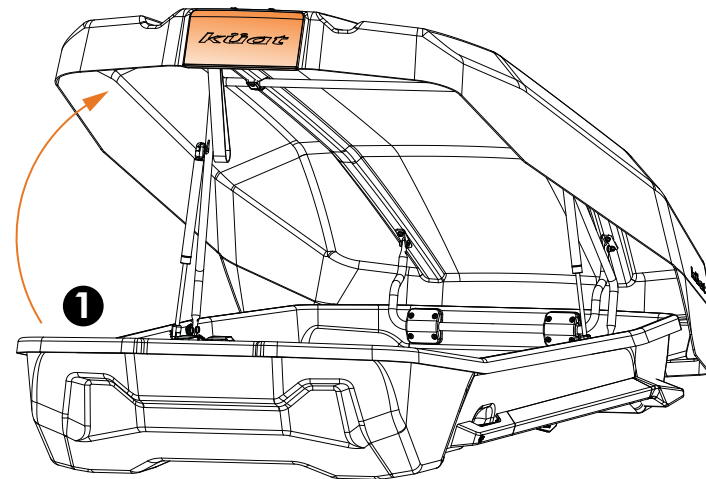

3 Install the new Rear Badge by following step 2 in reverse. Torque the M6 Bolts to 10 Nm.