
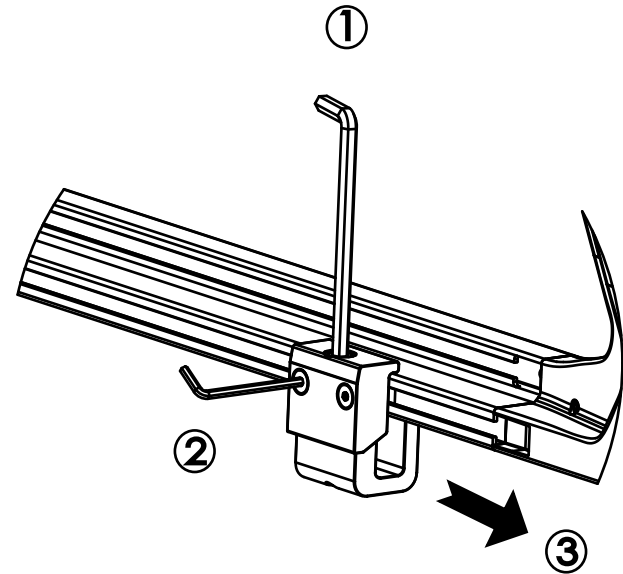


Tools Needed: 10mm Security Hex Key, 5mm Security Hex Key

1. Using the 10mm Security Hex Key, loosen the 12mm bolt.
2. Using the 5mm Security Hex Key, loosen two 8mm flat head bolts.
3. Slide the bed mount off of the rack.
4. Repeat these steps in reverse to install the new component.

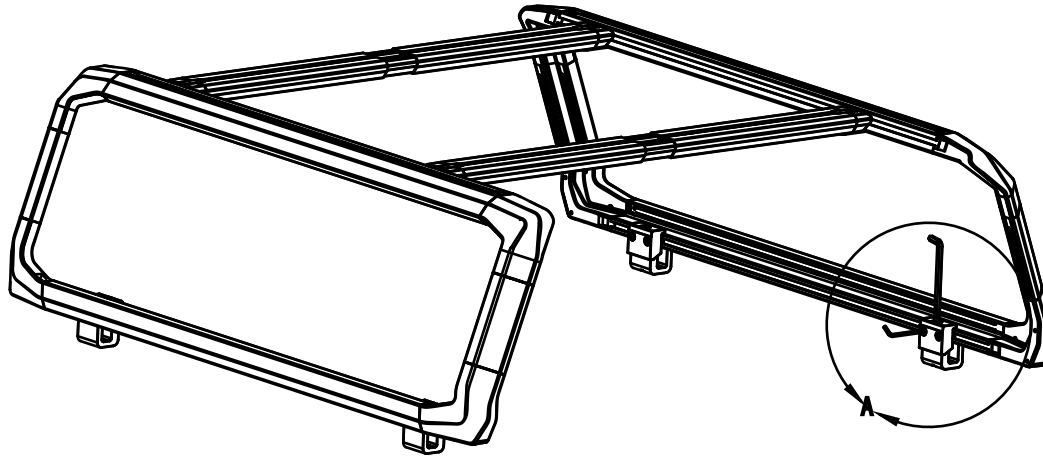

*3rd Gen Nissan Frontier Specific Instructions:

Tools Needed: 4mm Hex Key

- I. Using the 4mm Hex Key loosen the two M5 X 10mm bolts and remove the Spacer Block.
- II. Follow the instructions above.

