#### **DRYWALL TRIM - INSTALLATION INSTRUCTIONS**




IMPORTANT: Installation instructions are shown with Via Perimeter 3 and applies to all Via Perimeter sizes


### **NOTE:** Wire dimming conductors as Class 1




Reflector must be reinstalled with the screw and plastic washer that was originally supplied. If not, it can result in an electrical failure

Make sure to reconnect the wires to the LED boards correctly

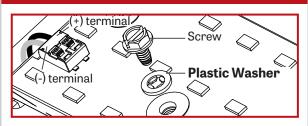


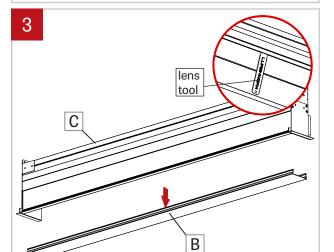


Remove lens (B) from the fixture (C) with the included lens tool.

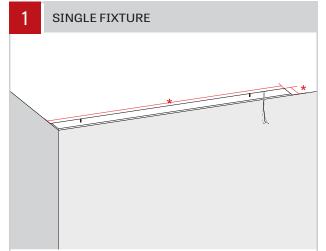


Prepare the area and mark the mounting point location where the fixture is going to be installed according to the dimensions [\*] in the client drawings.

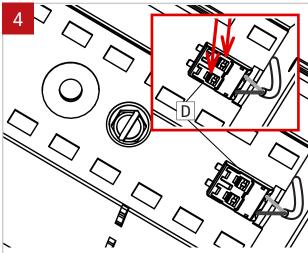


Disconnect LED molex connector (D) by taking a pointed object and pressing on the two tabs on the top.

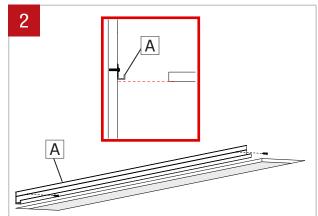

Locate the J-Bar (A) position using provided client drawing. Install wall bracket to wall. Align with structural stud or use drywall anchors when needed. For sleeve adjustment, please refer to end-sleeve installation sheet.

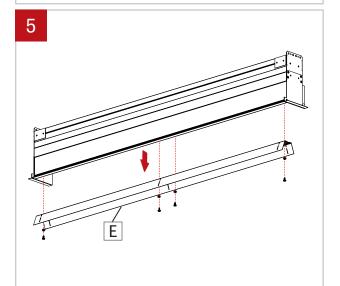

Unscrew and remove the cartridge (E) from the fixture. Cartridge may vary.

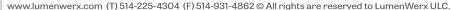

FILE NAME:VIA-3-5-PERIMETER-DRYWALL-TRIM-INST


November 16, 2019

Page: 1/5




#### **DRYWALL TRIM - INSTALLATION INSTRUCTIONS**




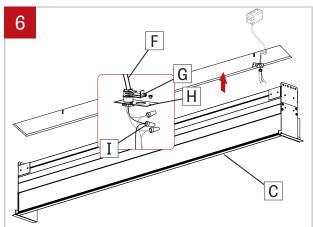


Install power cable (F) (by other) through the BX connector (G) (by other) and install onto the power plate (H) provided. Make electrical connections between power cable (F) and fixture cables using electrical marettes (I). Reinstall the power plate (H) to the fixture (C). Numbers of wires may vary.

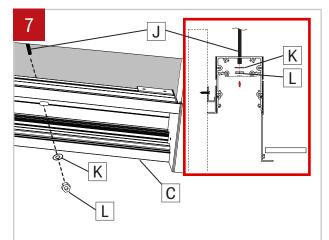

Insert fixture (C) into pre-cut hole in drywall, aligning threaded rods (J) with holes in top of fixture (C). Put washers (K) and tighten nuts (L) to secure the fixture (C).

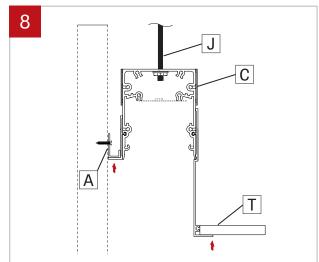


Adjust the fixture (C) to the threaded rods (J). On wall side, the fixture (C) must touch the J-Bar (A). On ceiling side, flange touch the tile (T).

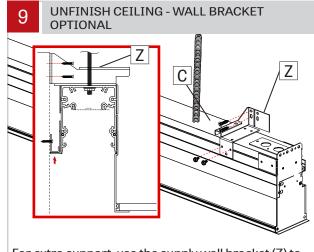


For  $\underline{extra}$  support, use the supply wall bracket (Z) to fix the fixture (C) to the wall.

- 1. Screw the bracket (Z) to the fixture (C).
- 2. Screw the fixture(C) with the bracket(Z) to the wall.

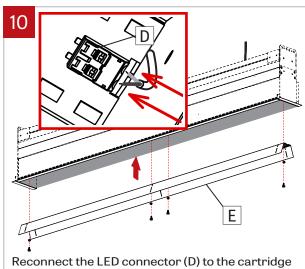


Reconnect the LED connector (D) to the cartridge (E). Reinstall the cartridge (E) by using a screw with plastic washer. Do not apply too much pressure.

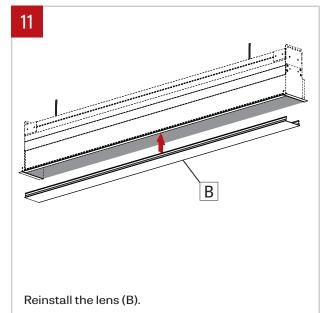




#### **DRYWALL TRIM - INSTALLATION INSTRUCTIONS**



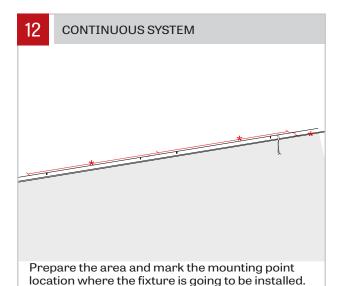


according to the dimensions [\*] in the client


drawings.

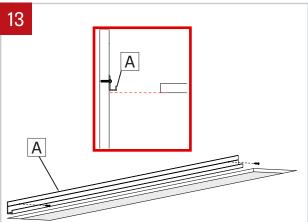


Locate J-Bar (A) position using provided client drawing. Install wall brackets to wall. Align with structural stud or use drywall anchors when needed. For sleeve adjustment, please refer to end-sleeve installation sheet.

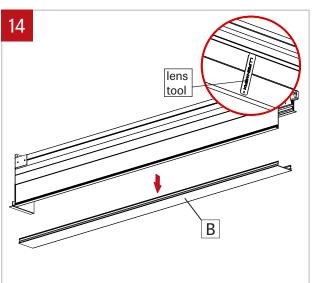

Remove lens (B) from all the fixtures in the run with the included lens tool.

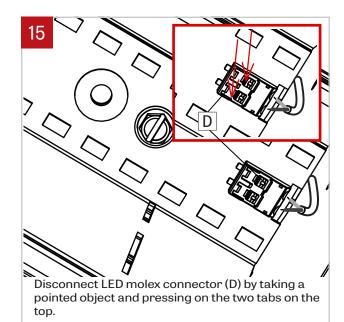




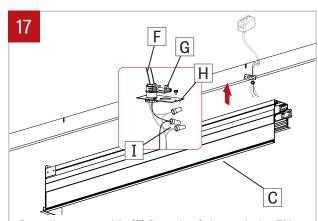


Install power cable (F) (by other) through the BX connector (G) (by other) and install onto the power plate (H) provided. Make electrical connections between power cable (F) and first fixture cables using electrical marettes (I). Reinstall the power plate (H) to the first fixture (C). Numbers of wires may vary

#### **DRYWALL TRIM - INSTALLATION INSTRUCTIONS**




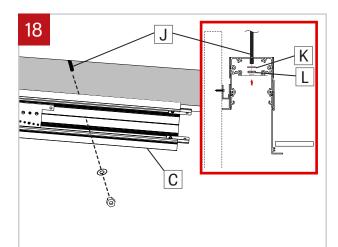

Insert the first fixture (C) into pre-cut hole in drywall, aligning threaded rods (J) with holes in top of fixture (C). Put washers (K) and tighten nuts (L) to secure the fixture (C).

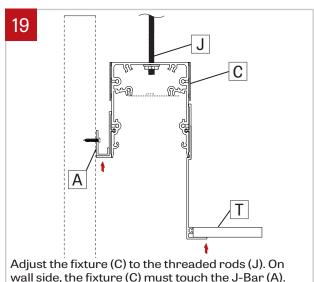


On ceiling side, flange need to touch tile (T).

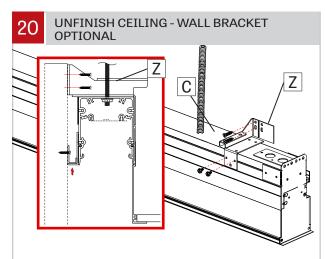


For <u>extra</u> support, use the supply wall bracket (Z) to fix the fixture (C) to the wall.


- 1. Screw the bracket (Z) to the fixture (C).
- 2. Screw the fixture(C) with the bracket(Z) to the wall.

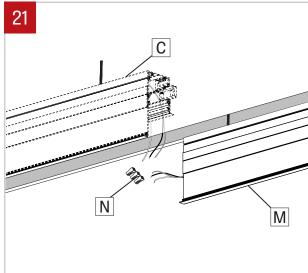

Make wires connection between (C) and (M) using quick connectors (N).

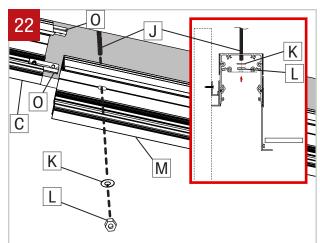

Insert the second fixture (M) into pre-cut hole in drywall, aligning threaded rods (J) with holes in top of fixture (M) and with the first fixture (C) with aligning brackets (O). Put washers (K) and tighten nuts (L) to secure the fixture (M).

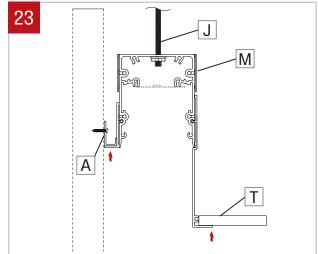


Adjust the second fixture (M) to the threaded rods (J). On wall side, the fixture (M) must touch the J-Bar (A). On ceiling side, flange need to touch the tile (T).




#### **DRYWALL TRIM - INSTALLATION INSTRUCTIONS**




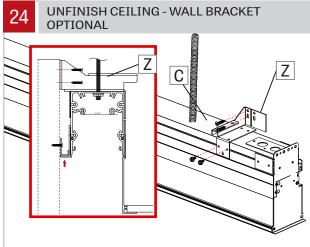

For <u>extra</u> support, use the supply wall bracket (Z) to fix the fixture (C) to the wall.

- 1. Screw the bracket (Z) to the fixture (C).
- 2. Screw the fixture(C) with the bracket(Z) to the wall.

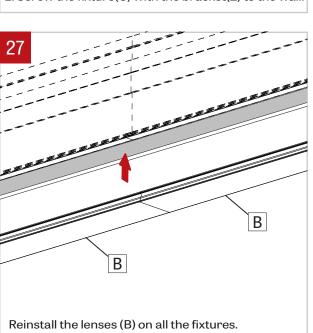

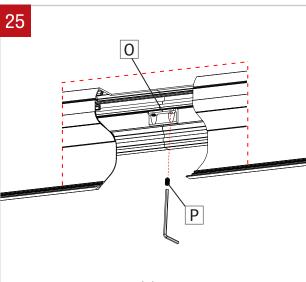

Tighten the set screws (P) on both joining brackets (O) using Allen Key to secure the fixtures together.

