




MODEL DUCATI MULTISTRADA 1200 **YEAR** 2010 - 2014
LINE SLIP ON **MUFFLER** SPEED EDGE

SCHEMATIC

ELENCO PARTI / PARTS LIST

#	QTÀ / QTY	DESCRIZIONE / DESCRIPTION	CODICE / CODE
1	1	DB killer / DB killer	50.DK.086.0
2	1	Vite M5 x 8 / Screw M5 x 8	50.73.459.1
3	1	Tappo in gomma / Rubber stopper	50.73.266.1
4	1	Silenziatore / Muffler	SPEED EDGE 250
5	1	Staffa in carbonio / Carbon fiber bracket	50.SS.814.1
6	1	Vite M8x40 / Screw M8x40	50.73.075.1
7	1	Rondella nera / Black washer	50.73.221.1
8	1	Staffa / Bracket	50.SS.845.0
9	2	Silentblock / Silentblock	50.73.380.1
10	2	Boccola / Bush	50.73.381.1
11	1	Dado M8 flangiato / Flanged nut M8	50.73.393.1
12	1	Tubo di raccordo / Link pipe	9773D027S2
13	1	Boccola / Bush	50.73.724.0
14	1	Tubo elimina Kat / Pipe no Kat	9773D027C1B
15	1	Tubo elimina Kat / Pipe no Kat	9773D027C1A
16	2	Vite M6 x 8 / Screw M6 x 8	50.72.026.1
17	1	Copertura in alluminio / Aluminium cover	50.CR.012.0
18	2	Dado rapido / Cage nut	50.66.009.1
19	1	Gommino paracolpi / Rubber buffer	50.72.010.1
20	1	Dado M6 autobloccante / M6 locknut	50.73.112.1
21	2	Rondella M6 / Washer M6	50.73.187.1
22	1	Vite M6x30 / Screw M6x30	50.73.471.1
23	2	DB killer / DB killer	50.DK.065.0
24	3	Molla media / Middle spring	50.73.359.1
25	4	Tubo per molla / Pipe for spring	50.73.210.1
26	2	Fascetta in nylon / Nylon clamp	50.73.361.1
27	1	Molla / Spring	50.73.142.1
28	1	Morsetti in alluminio / Aluminium clamps	50.73.139.1
29	1	Morsetti in alluminio / Aluminium clamps	50.73.138.1
30	2	Grani M3 / Grub screws M3	50.73.140.1
31	1	Molla lunga / Long spring	50.71.080.1

Catalytic Converter
Cod. ACC.033.A1
Optional for
D.027.LRX - D.027.LRB
Included in
D.027.KRX - D.027.KRB

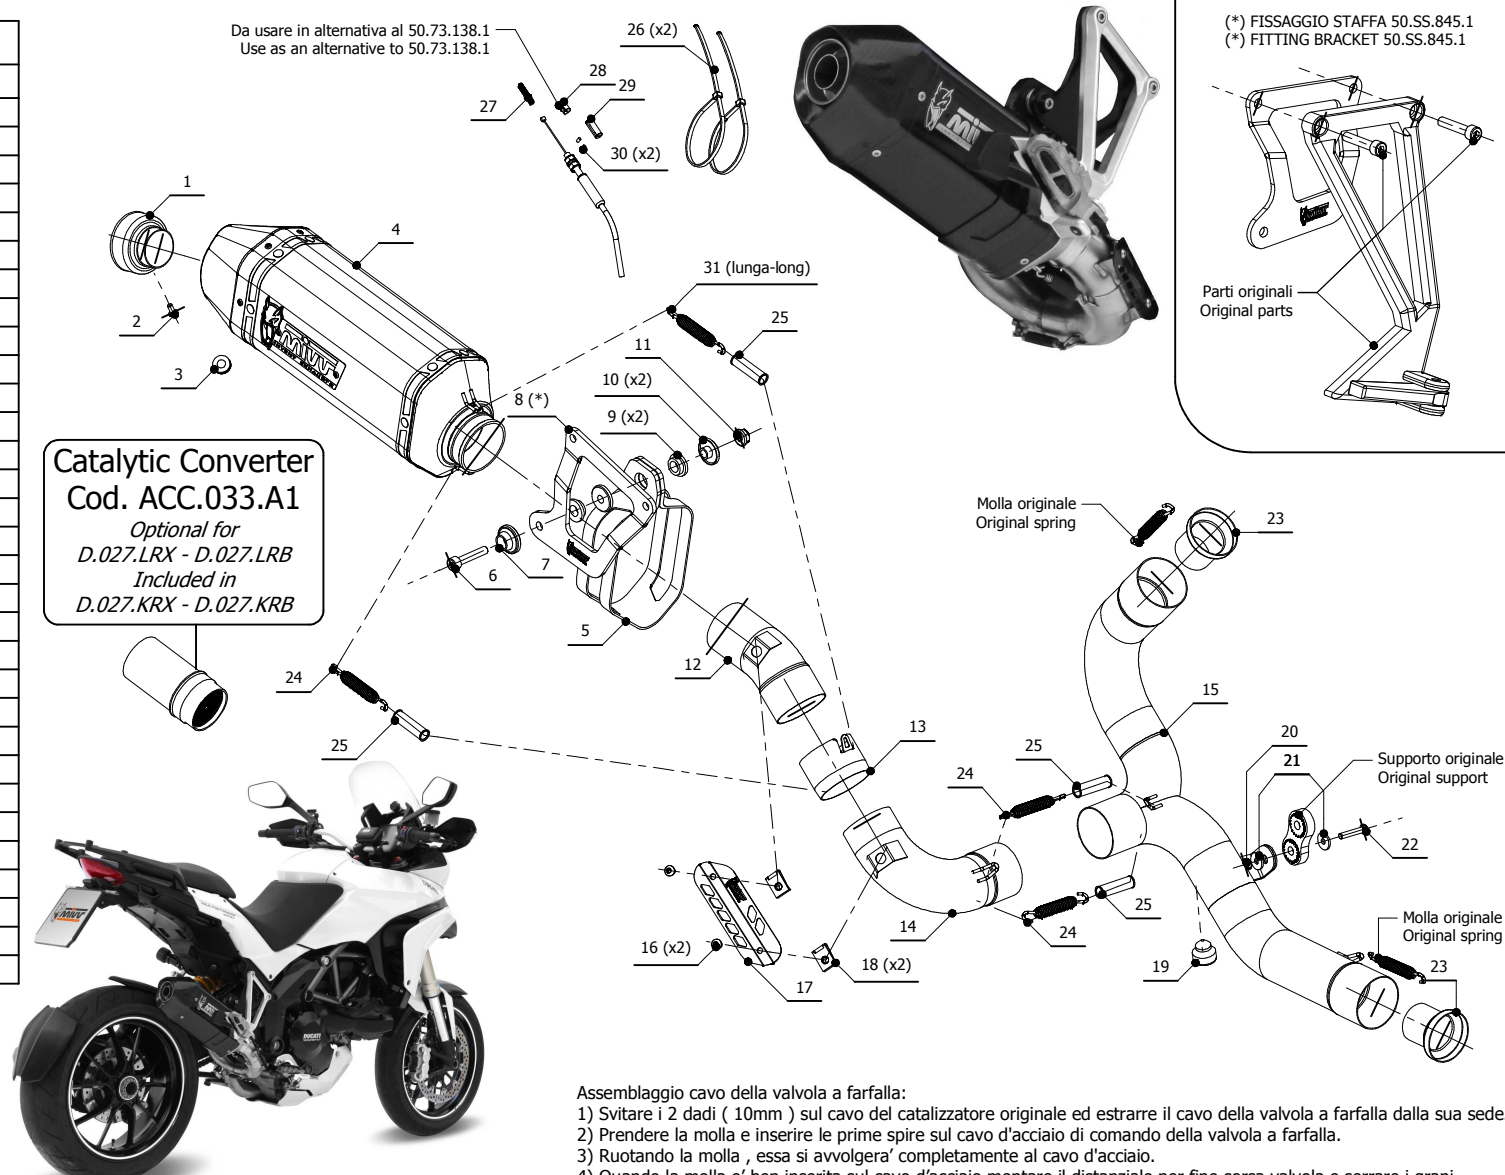

Assemblaggio cavo della valvola a farfalla:
 1) Svitare i 2 dadi (10mm) sul cavo del catalizzatore originale ed estrarre il cavo della valvola a farfalla dalla sua sede.
 2) Prendere la molla e inserire le prime spire sul cavo d'acciaio di comando della valvola a farfalla.
 3) Ruotando la molla , essa si avvolgera' completamente al cavo d'acciaio.
 4) Quando la molla e' ben inserita sul cavo d'acciaio montare il distanziale per fine corsa valvola e serrare i grani.
 5) Fissare il cavo sul telaio con una fascetta.

Throttle cable assembly:
 1) Unscrew the 2 nuts (10 mm) on the cable of the original catalyst, and remove the throttle cable from its seat.
 2) Take the spring and enter the first coil on the steel cable throttle valve control.
 3) Turning the spring, it will completely wrap the steel cable.
 4) When the spring is correctly mounted on the steel cable, assemble the aluminium clamp and tighten the grub screws.
 5) Secure the cable with a clamp on the frame.

APPLICAZIONI / APPLICATIONS

CODICE / CODE	TUBO / PIPE	SILENZIATORE / MUFFLER	FASCETTA / CLAMP	NOTE
D.027.LRX D.027.LRB	INOX / ST. STEEL	INOX (COPPE CARBONIO) / ST. STEEL (CARBON CAPS) STEEL BLACK	CARBONIO / CARBON FIBER	CATALYTIC CONVERTER NOT INCLUDED
D.027.KRX D.027.KRB	INOX / ST. STEEL	INOX (COPPE CARBONIO) / ST. STEEL (CARBON CAPS) STEEL BLACK	CARBONIO / CARBON FIBER	CATALYTIC CONVERTER INCLUDED