



# INSTALLATION

## FORK BRACE WITH DUST COVERS FOR GL1800 7339

### PARTS INCLUDED

- 1 GL1800 Fork Brace Assembly
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

### THANK YOU FOR CHOOSING KÜRYAKYN!

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**WARNING!** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**CAUTION!** This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

### TOOLS SUGGESTED

Set of Hex Wrenches

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

### PROCEDURE

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

**STEP 2** Remove the four screws securing the front fender to the fork. Note: the lower bolt is slightly longer. Ensure the longer bolt is later reinstalled in the lower location. PIC 1

**STEP 3** Remove the stock chrome fork cover. Remove the two front screws and dislodge the plastic dart located on the backside of the center of the stock cover (PIC 2). The stock fork cover will not be reused.

**STEP 4** Remove both ends from the new Fork Brace by removing the socket head cap screws from the end. Note the fork brace is marked "R" and "L". Make certain these marks are on the correct side (RH-throttle side, LH-clutch side) during installation. The dust skirts will be located on the front of the brace when installed.

**STEP 5** Remove one of the inner clamp halves from the center portion of the Fork Brace. This allows proper clearance for fitment between the forks. Note: the indent in the new Fork Brace should be towards the backside of the forks.

**CUSTOMER SERVICE**  
877.370.3604 (toll free)

**INSTALLATION QUESTIONS**  
techsupport@kuryakyn.com  
or call 715.247.2983

### LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
  - The product must be properly installed, maintained and operated under normal conditions.
- Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Küryakyn and a customer.
- Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Küryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Küryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.



kuryakyn.com

**STEP 6** Once the center portion is positioned between the forks, reinstall the inner clamp half and leave it loose.

**STEP 7** Loosely fasten the outer clamps/dust skirts to the fork brace.

**STEP 8** Tighten the outer clamps/dust skirts first, working from the outside to the center. Tighten the center bridge of the fork brace so there is an even sized gap on each side.

**STEP 9** Reattach the front fender to the bike. Ensure the longer bolt is utilized in the bottom hole.

**STEP 10** Tighten all fasteners

**STEP 1** Cycle your forks up and down a few times to test for obstructions with the new fork brace. If you experience a clearance or binding issue, make adjustments. Tighten all fasteners after adjusting.


**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

**Küryakyn**<sup>®</sup>


PIC. 1



PIC. 2

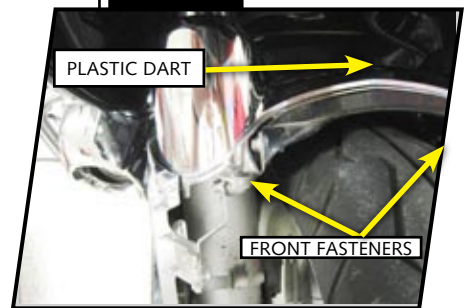

PIC. 3

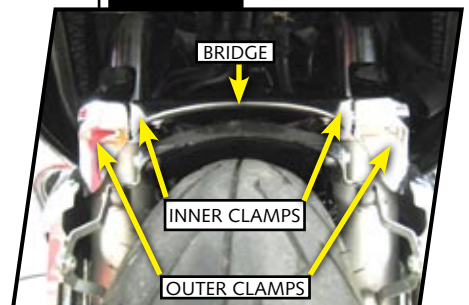

PAGE

**2**