



## ZOMBIE™ MIRRORS

## 1450

**FITS: UNIVERSAL APPLICATIONS**

### PARTS INCLUDED

- 2 Skull Mirrors Pre Assembled
- 1 Hardware Kit Including:
  - 2 5/16-18 x 1-1/2" SHCS Fastener
  - 2 5/16-18 x 2" SHCS Fastener
  - 2 5/16" Split Lock Washer
  - 2 5/16" Internal Tooth Lock Washer
  - 2 Double Ended Threaded Stud
  - 1 1/8" Allen Wrench
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

### THANK YOU FOR CHOOSING KÜRYAKYN!

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**



**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

**NOTE** You may choose to use medium strength thread lock on the supplied fasteners prior to installation.

**NOTE** The included 1/8" Allen Wrench is only used in Part #'s: 1428, 1430, 1437 & 1438 to adjust the two fasteners which control the swivel ball tension.

**NOTE** To adjust the tension on the mirror pivot ball joint first loosen the set screw shown in PIC.1 then tighten or loosen the exposed two fasteners by the mounting stem shown in PIC.2. The two screws should be tightened evenly.

-cont.-

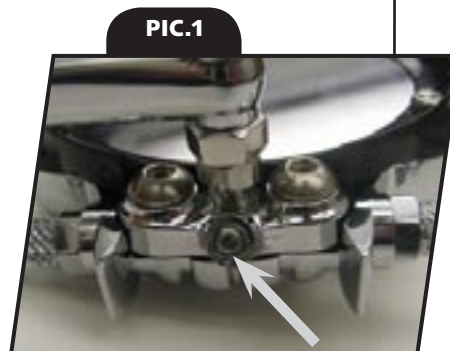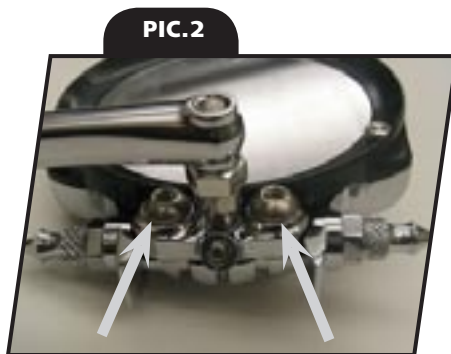

1450-15HD-1207

### CUSTOMER SERVICE

877.370.3604 (toll free)

### INSTALLATION QUESTIONS

techsupport@kuryakyn.com  
or call 715.247.2983

### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



**ATTENTION!** It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

**Kuryakyn**

## PROCEDURE FOR PERCH MOUNT TURN SIGNALS

**STEP 1** Remove stock mirrors. Pay close attention to how the stock turn signal ball joint assembly comes apart as this will aid in re-assembly.

**STEP 2** Insert a supplied Double End Threaded Stud through the mirror-mounting hole of the perch with longest portion of threads through the perch. Tighten the set screw at the bottom of the mirror stem against the stud.

**NOTE** Ensure that the setscrew in the mirror stem does not prevent the stud from being fully installed. See [PIC.3](#).

**STEP 3** Place a supplied 5/16" Internal Tooth Lock Washer on the upward facing threads of the Double End Threaded Stud. Thread the mirror stem tightly onto the stud. Use an open-end wrench to hold the flange of the stud while the mirror is tightened and positioned.

**STEP 4** Reinstall the turn signals in the reverse manner as they were removed with a supplied 5/16" Split Lock Washer between the perch and the turn signal assembly. Be careful not to strip the threads on the ball receptacle.

**STEP 5** Tighten the setscrew to help prevent the stem from moving out of position. See [PIC.3](#).

**STEP 6** Position the mirror for best rearward visibility.

**ATTENTION!** It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

## PROCEDURE FOR NON-PERCH MOUNT TURN SIGNALS

**STEP 1** Remove stock mirrors.

**STEP 2** Choose the longest Allen bolt from the hardware kit that will provide maximum thread engagement into the mirror stem without bottoming out, either the 5/16"-18 x 1-1/2" or the 5/16"-18 x 2" Socket Head Cap Screw. Insert the Socket Head Cap Screw of choice from the bottom of the perch upward with a supplied 5/16" Split Lock Washer installed between the head of the fastener and the perch.

**NOTE** Ensure that the setscrew in the mirror stem does not prevent the stud from being fully installed. See [PIC.3](#).

**STEP 3** Place a supplied 5/16" Internal Tooth Lock Washer over the threads of the Socket Head Cap Screw on the topside of the perch. Thread the Socket Head Cap Screw into the mirror stem then position and tighten. Tighten the setscrew to help prevent the stem from moving out of position. See [PIC.3](#).

**STEP 4** Position the mirror for best rearward visibility.

**ATTENTION!** It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

**PIC.3**



*Ride On!*

**PAGE**  
**2**

**ZOMBIE™ MIRRORS INSTALLATION**