



INSTALLATION

DRIVER BACKREST FOR ROAD STAR 1554

FITS: ALL '99 AND UP ROAD STAR 1600/1700 (EX. WARRIOR)

PARTS INCLUDED

- 1 Driver Backrest Tube Assembly
- 1 Mounting Bracket
- 1 Backrest Pad/Bag Assembly
- 1 Hardware Kit Including:
 - 1 M8 x 1.25 x 16 mm Button Head Cap Screw (BHCS)
 - 1 M8 x 1.25 x 14 mm Button Head Cap Screw (BHCS)
 - 1 3/8-16 x 1.75" Shoulder Head Cap Screw (SHCS)
 - 1 3/8-16 locking nut
 - 3 M6 x 1.0 x 25MM Hex Head Flange Screw (HHFS)
 - 3 M6 Flat Washer
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of hex wrenches, combination wrenches or socket set and ratchet

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

CAUTION! This product is designed for passenger comfort only; it is not intended to be used as a supplemental security support. Never exceed the maximum loading capacity of your motorcycle.

STEP 1 Park the motorcycle on a hard, level surface; turn off the ignition.

STEP 2 Remove the driver and passenger seats. Refer to your owner's manual for more information.

-cont.-

CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY
Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



STEP 3 Remove the rear seat bracket by removing the three fasteners securing it to the fender.

CAUTION! To avoid damage to the motorcycle, protect painted surfaces with low tac tape.

STEP 4 Place the seat bracket over the backrest tube assembly and align the holes in the seat bracket and the backrest tube assembly.

STEP 5 Insert an included M6 x 1.0 x 25mm screw through the front hole in the seat bracket and backrest tube assembly. Place the flat washer over the protruding end of the fastener.

STEP 6 Carefully position the seat bracket/driver backrest assembly over the front hole and begin to thread the fastener into the hole.

STEP 7 Insert a flat washer between the backrest tube assembly and the fender (as shown in PIC.1); begin to thread in another M6 fastener. Repeat the process for the other side. Leave the fasteners loose for the time being.

STEP 8 Making sure the brass bushings are in place as shown in PIC.2, install the backseat-mounting bracket to the backrest tube assembly using the 3/8-16 x 1.75" bolt and the 3/8-16 locking nut. Place the bracket with the finished chrome facing towards the rear of the motorcycle (see PIC.3) tighten the nut and bolt for resistance.

STEP 9 Place the backrest/bag assembly onto the mounting bracket and secure at the desired height using the M8 x 1.25 x 14mm BHSC screw (shown in PIC.4.)

STEP 10 Place the M8 x 1.25 x 16 mm BHCS screw in the backside of the mounting bracket (seen in PIC.5.) This is used for fine adjustments and angle of the backrest.

STEP 11 Re-install the driver's seat. Carefully adjust the forward/backward position of the assembly and mark the desired location by placing tape on the backrest tube assembly as seen in PIC.6.

STEP 12 Remove the driver's seat and the backrest assembly, then remove the protective tape.


STEP 13 Re-install the backrest assembly (refer to STEP 4 through STEP 7) to the marked location and tighten the fasteners enough to allow for adjustment of the backrest assembly.

STEP 14 Carefully slide the backrest assembly all the way forward and re-install the passenger seat placing the front of it into the tube assembly at an angle as shown in PIC.7. Before securing the passenger seat, move the backrest assembly to the marked location and fully tighten the fasteners. Then re-install the driver's seat.

-cont.-

Küryakyn

PIC.1

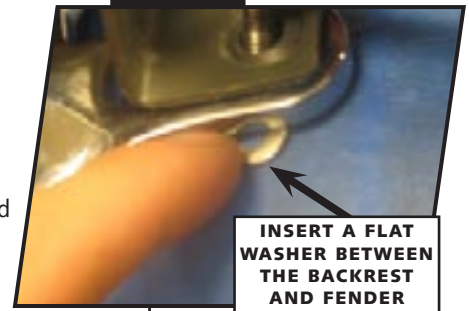

PIC.2



PIC.3



PIC.4



PIC.5



PIC.6



PIC.7



PAGE
2

DRIVER BACKREST INSTALLATION

CAUTION! Special care must be taken when re-installing the passenger seat to prevent the seat from being torn, because there is little clearance between the seat, the mounting bracket and the backrest assembly tube.


ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

STEP 15 Backrest pivot tension can be adjusted by loosening and retightening the bolt that is located inside the pad/bag assembly.

WARNING! IMPROPER INSTALLATION OR USE OF THIS PRODUCT COULD RESULT IN SERIOUS INJURY OR DEATH.

CAUTION! Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.

Ride On!

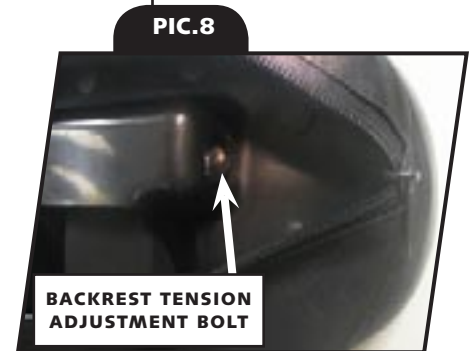

PAGE

3