

# INSTALLATION

## SWITCHBLADE PEGS

4446

FITS MANY MODELS BUT REQUIRES MODEL-SPECIFIC ADAPTERS, SOLD SEPARATELY

### **PARTS INCLUDED**

- 1 Left Switchblade Peg Assembly
- 1 Right Switchblade Peg Assembly
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

### THANK YOU FOR CHOOSING KÜRYAKYN!

### **PLEASE NOTE**

It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Küryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

### **TOOLS SUGGESTED**

Allen wrenches, combination wrenches.

**CAUTION!** Prevent potentially serious injuries! Be sure all fasteners are secure before riding.


### **PROCEDURE**

**STEP 1** Remove the existing footpeg; install the appropriate model-specific adapter (sold separately).

**STEP 2** Loosely fasten the left and right Switchblade Pegs to the footpeg mount on the motorcycle.

**STEP 3** Adjust the angle of the footpeg on the male mount then secure with the footpeg fastener.

-cont.-

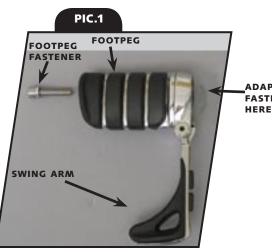



PIC.3

PIC.2



### **CUSTOMER SERVICE**

877.370.3604 (toll free)

### **INSTALLATION QUESTIONS**

techsupport@kuryakyn.com or call 715.247.2983

### **LIMITED WARRANTY**

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

 Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).

• The product must be properly installed, maintained and operated under normal conditions.

• Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.

 Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breech of contract or duty between Küryakyn and a customer.

> · Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.

· Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Küryakyn products containing L.E.D.s. will be warranted for defects in materials and workmanship for 3 years from the date of purchase.

Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### **ABOUT OUR CATALOG**

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today–select the "CATALOGS" icon. Each Küryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Küryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA All Rights reserved



**STEP 4** Check the angle for comfort; re-adjust if necessary. Repeat for the opposite side.

**STEP 5** Adjust the detent spring tension. If the swing arm feels loose, adjust the detent spring tension using the set screw on the underside of the swing arm. See <u>PIC.4</u>.

Küryakyn


**STEP 6** Replace the curb feelers. When the curb feelers become worn, replace them with Küryakyn P/N 4447. Be sure to use red Locktite on the threads to secure the fitting.


**STEP 7** Replace the rubber pads. When the rubber pads become worn, replace them with Küryakyn P/N 4448. Remove the footpegs from the motorcycle, then remove the fasteners securing the rubber pads, see <u>PIC.6</u>. Install the new pads and secure with the fasteners. The rubber pads on the swing arms are glued in place.

# SET SCREW FOR ADJUSTING DETENT SPRING TENSION

PIC.4

# Ride On!

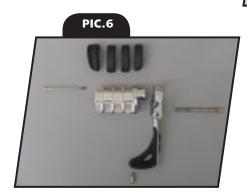

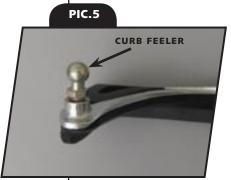

PAGE 2

**SWITCHBLADE PEGS** 

**INSTALLATION**