

## **MOUNTING INSTRUCTIONS**



### 2321-0122 Mounting Kit, Batwing Cruiser Fairing, Honda VTX1800 Exposed Forks

### **A** WARNING

Read and follow these directions carefully.

During installation, make sure that the fairing and hardware do not interfere with any cables or wiring when the forks are turned all the way in either direction. Also make sure, through the full range of adjustment, that the fairing and hardware do not hit the tank.

This is a detachable fairing, <u>ALWAYS</u> make sure the Locking Mechanism is Fully Engaged after installing the fairing! The improper installation of this kit and related components could result in serious injury or death.

Additional tools required, that are not included in this kit. 7/16" or 11mm wrench.

- 1. Cover gas tank and front fender with towels to avoid damage during installation.
- 2. Install the two mounting plates onto the fairing, using the acorn nuts and washers supplied with the fairing (Fig-1).
- 3. Loosely install the four Fork Clamps on the forks, approximately 2" apart. (see figure 2)
- 4. Start with Fork Clamp Bushing adjusted to rear of slot (see

#### **WARNING**

If the adjustable clamps are installed backwards, it will result in serious gas tank damage. Always check for proper gas tank clearance before tightening hardware. (see Figure 2)

figure 4) Then adjust as needed and check for clearance. (See warning above.)

- 5. Slip the fairing mounting plates and fairing onto the fork clamps, (see figure 3 and 5) and secure the left and right side locking mechanism
- 6. Adjust the height, angle and alignment of the fairing and tighten ALL bolts.

Note: This is a detachable fairing, <u>ALWAYS</u> make sure the Locking Mechanism is Fully Engaged after installing the fairing! (see figure 5)


#### IMPORTANT CARE AND CLEANING INSTRUCTIONS


Memphis Shades Fairings and Lowers are made of Lucite® acrylic, and will last for years with proper care. Clean your fairing with plenty of soapy water — mild dishwashing liquid is best — and a soft cotton cloth. Use your bare hand to feel and dislodge bugs, or cover with a wet soapy towel and let it soak. Don't use paper towels and don't scrape with anything. Small scratches can be removed with NOVUS # 2.

<u>NEVER</u> use any glass cleaning products, petroleum based chemicals, or cleaning agents with ammonia, bleach or any other harsh chemicals. This includes (but not limited to) RainX, brake fluid, acetone, paint thinner, benzene and gasoline. "If it hurts your nose, it will hurt the plastic."

# Glass cleansing agents will cause severe damage to your fairing, and will void your warranty.

<u>NOTE:</u> At certain times of the day the Sunlight can reflect off the curvature of a fairing and cause extreme heat build-up on motorcycle instruments and instrument panel. Take care when parking. Park facing the sun, place an opaque object over the instruments or adjust the fairing to avoid reflections.

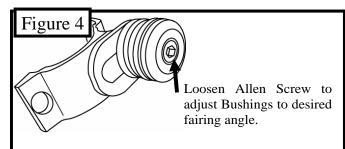

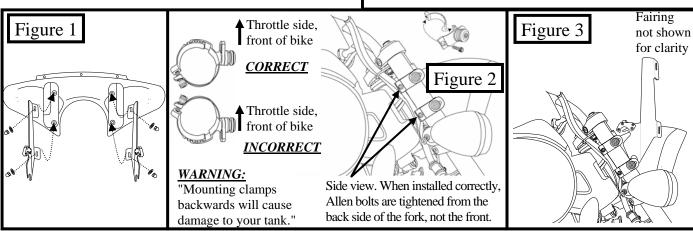




## **MOUNTING INSTRUCTIONS**



### 2321-0122 Mounting Kit, Batwing Cruiser Fairing, Honda VTX1800 Exposed Forks

PART#	DESCRIPTION	QTY.
K1904	MOUNTING INSTRUCTIONS/PARTS LIST	1
M1274	CLUTCH SIDE PLATE	1
M1275	THROTTLE SIDE PLATE	1
R323	BUSHING ASSEMBLY (2 PART)	4
R324	#207 EPDM 0-RING	4
R318	1" SOCKET SHOULDER WASHER	4
M306	1/4" - 20 X 5/8" SOCKET HEAD CAP SCREW	8
R329	SLOT NUT	4
M369	STAINLESS STEEL WASHER	4

PART#	DESCRIPTION	QTY.
M534	LARGE ADJUSTABLE FORK CLAMP HALF	4
M310	3/16" SHORT ARM ALLEN WRENCH	1
M313	3/16" ALLEN WRENCH COVER	1
M520	INNER ADJUSTABLE HALF	4
M303	1/4—20 X 3/4 SOCKET HEAD CAP SCREW	4

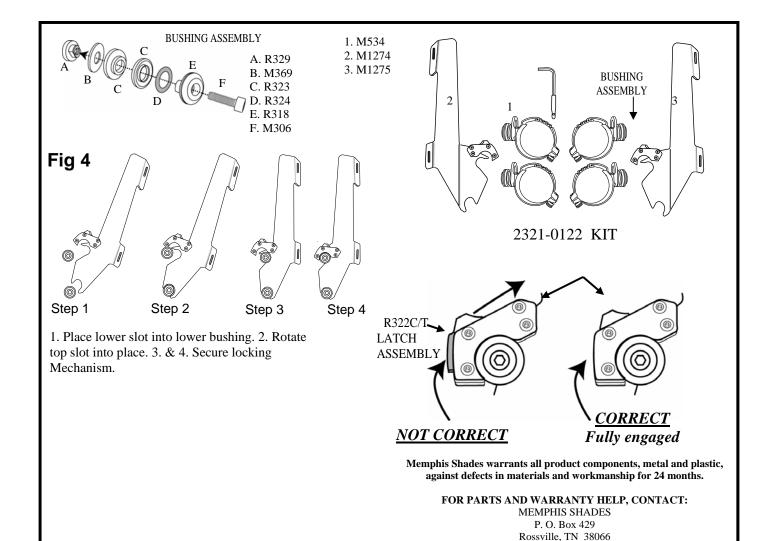

(901) 853-0293 Visit us on the web at www.memphisshades.com or you can also reach us at customerservice@memphisshades.com