



Part No. 2321-0228

MEB8932

REVISION 0

Trigger Lock Mounting Kit MS Sportshield Black

Aluminum parts are electrocoated (E-coated)
for durability and weather resistance.

Before assembly, read Warnings inside



WARNING


1. During installation, make sure that the windshield and hardware do not interfere with any cables or wiring when the forks are turned all the way in either direction. Also make sure , through the full range of adjustment, that the windshield and hardware do not hit the gas tank.
2. This is a detachable windshield, ALWAYS make sure the locking mechanism is fully engaged after installing the windshield.
3. The improper installation of this kit and related components could result in serious injury or death.



CAUTION

1. Memphis Shades windshields are made from Lucite® acrylic, and will last for years with proper care. Clean your windshield with plenty of soapy water (mild dish-washing liquid is best) and a soft cotton cloth. Use your bare hands to feel and dislodge bugs, or cover with a wet, soapy towel and let it soak. Don't use paper towels and scrape with anything. Small scratches can be removed with NOVUS #2.
2. Never use any glass cleaning products, petroleum based chemicals, or cleaning agents with ammonia, bleach or any other harsh chemicals. This includes (but not limited to) RainX, brake fluid, acetone, paint thinner, benzene and gasoline. "If it hurts your nose, it will hurt the plastic."
3. Glass cleansing agents will cause severe damage to your windshield, and will void your warranty. For care and cleaning we recommend using **Memphis Shades All Kleer**, a unique cleaner/polish, bug remover and rain repellant that leaves a super slick surface that makes the next cleaning even easier.
4. At certain times of the day the Sunlight can reflect off the curvature of a windshield and cause extreme heat build-up on motorcycle instruments and instrument panel. Take care when parking. Park facing the sun, place an opaque object over the instruments or adjust the windshield to avoid reflections.

1. Kit Contents

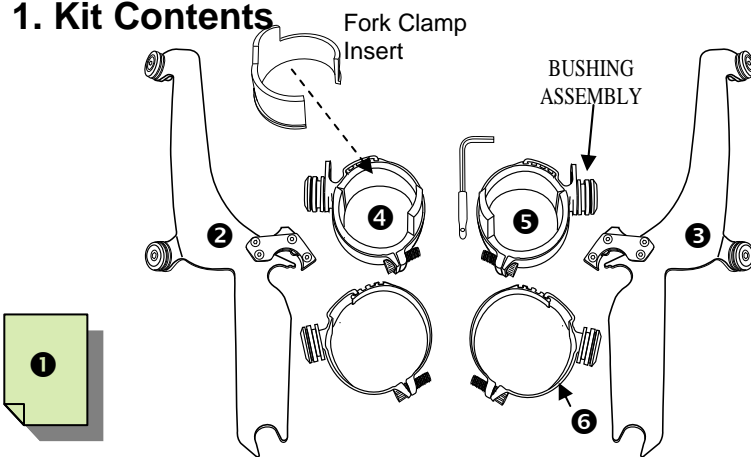

Ref	Code	Description	Qty
❶	I8932B	Mounting Instructions	1
❷	M1187EB	Clutch side mounting plate assembly	1
❸	M1186EB	Throttle side mounting plate assembly	1
❹	S1171EC	Clutch side, upper fork clamp assembly	1
❺	S1172EC	Throttle side, upper fork clamp assembly	1
❻	S1173EC	Lower fork clamp assembly	2

2. Mounting Instructions

No additional tools required for this kit.

1. **Cover gas tank and front fender with a towel to avoid damage during installation.**

2. Install the windshield mounting plates onto the windshield, using the bolts that are pre-assembled on the mounting plates.

The Santoprene grommets should be inserted through the holes in the windshield so that the flat round part of the grommet lies flat on each side of the plastic. **Tabs point in towards the headlight.** (Fig 1)

3. There is an upper clamp and a lower clamp for each fork, (Fig 2a). The lower clamp has protective film on the inside and does not have the slotted bushing adjustment. The upper clamp has a flexible tapered Santoprene insert and does have the slotted bushing adjustment.

4. On the clutch side, install the lower clamp around the fork tin with the clamp in the largest setting as shown in figure 2-A. With the grooves in the polymer bushing facing directly forward, slide the clamp down until it rests on the lower triple tree and snug it in place.

Next, separate the tapered insert from the upper clamp and flex the insert around the upper part of the fork tin with the raised "stopper" portion up. Rotate the insert rearward until the raised "stopper" portion is underneath the upper triple tree, with the trailing edge of the "stopper" portion even with the edge of the upper triple tree

Continued overleaf.....

Memphis Shades warrants all product components, metal and plastic, against defects in materials and workmanship for 24 months.

For Parts and Warranty Help, Contact:

Memphis Shades, Inc.

P.O. Box 429

Rossville, TN 38066

(901) 853 0293

Visit us on the web at www.memphisshades.com or you can also reach us by email:

customerservice@memphisshades.com

Trigger Lock Mounting Kit
MS Sportshield
Black

2. Mounting Instructions, continued

Around the fork tin, slide the two parts of the upper clamp together in the smallest setting, and slip the clamp over the Santoprene insert, and align it with the lower clamp. (Fig 2b) Note: The cable guide may need to be bent slightly.

Repeat Step 4. on the throttle side.

5. Slip the windshield mounting plates and windshield onto the fork clamps, (Fig 3 and 4) and secure the left and right side locking mechanism

6. Adjust the height, angle and alignment of the windshield and tighten **ALL** bolts.

Note: This is a detachable windshield, ALWAYS make sure the Locking Mechanism is Fully Engaged after installing the windshield! (Fig 4)

Fig. 1

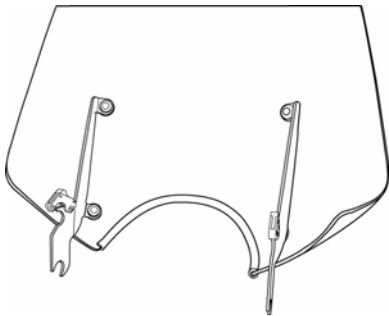


Fig. 2a

Adjustable upper clamp with tapered insert

Fixed lower clamp

Warning

Mounting clamps backwards will cause damage to you tank

Fig. 2b


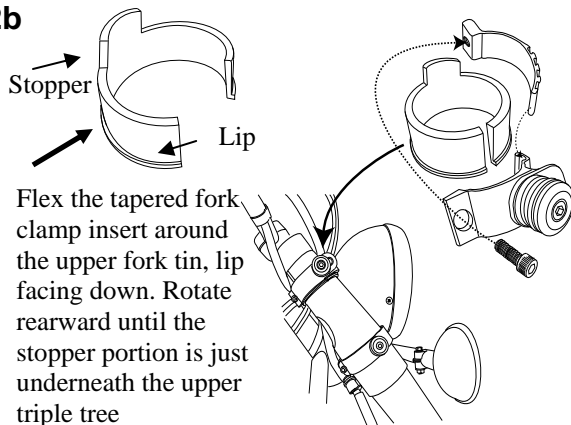


Fig. 4



1. Place lower slot into lower bushing.
2. Rotate top slot into place.
3. Secure locking Mechanism.
4. Loosen Allen Bolt to adjust angle, then re-tighten Allen Bolt.

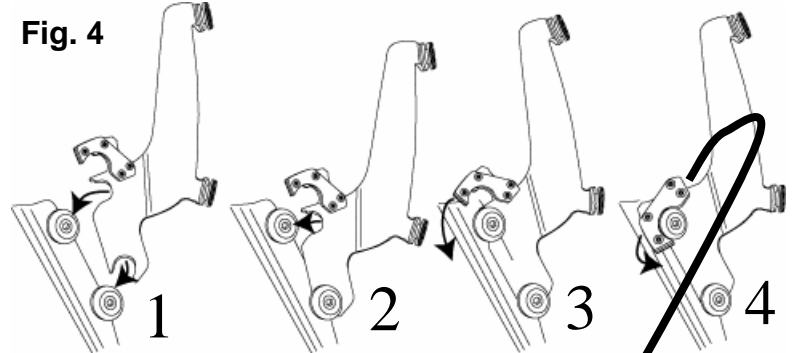