



# INSTALLATION

## DELUXE NECK COVERS

7866

FITS: '95-'07 TOURING MODELS (ROAD KINGS, DRESSERS, ROAD GLIDE, STREET GLIDE)

### PARTS INCLUDED

- 1 Left Neck Cover
- 1 Right Neck Cover
- 2 Neck Cover Clamp
- 2 Down Tube Cover
- 1 Hardware Kit, including:
  - 4 #8-32 x 1/2 Socket Head Cap Screw (SHCS)
  - 2 5/16-18 x 1-1/4 Button Socket Cap Screw (BSCS)
  - 2 5/16 Flat Washers
  - 1 10-24 x 2-1/2 Socket Head Cap Screw (SHCS)
  - 4 3/4 x 1-1/2 x .1 Black Foam
  - 4 3/8 x 1-1/2 x .1 Black Foam
  - 2 Alcohol Pad
- 1 Cable Tie
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

### THANK YOU FOR CHOOSING KÜRYAKYN!

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/ OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**WARNING!** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**CAUTION!** This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

### TOOLS SUGGESTED

Set of hex wrenches, diagonal pliers, screwdriver, socket set and ratchet.

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

### PROCEDURE

**STEP 1** Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

**-cont.-**

**CUSTOMER SERVICE**  
877.370.3604 (toll free)

### INSTALLATION QUESTIONS

techsupport@kuryakyn.com  
or call 715.247.2983

### LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

• Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).

• The product must be properly installed, maintained and operated under normal conditions.

• Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.

• Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Küryakyn and a customer.

• Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.

• Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Küryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.

• Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Küryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Küryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA All Rights reserved.



**STEP 2** Remove both of the stock fasteners securing the front of the fuel tank; they will not be reused. See [PIC.1](#).

**NOTE** Installation is shown on a 2007 FLHX; while representative of typical procedure, there may be minor differences when installed on other models.

**NOTE** Avoid damage to motorcycle. Protect painted surfaces with soft cloth or blanket.

**STEP 3** Remove both of the rubber fuel tank trim pieces (if equipped); they will not be reused. See [PIC.1](#).

**STEP 4** Remove the wire harness clamp on the right side of the steering neck. See [PIC.1](#).

**STEP 5** Cut and remove the cable tie on the right side down tube. See [PIC.2](#).

**STEP 6** Remove the stock reflectors and set aside; they will not be re-used.

**STEP 7** Clean the inside of the down tube covers and clamps with the included alcohol pad.

**ATTENTION!** The adhesive foam may not correctly bond if applied at temperatures less than 50°F. Do not attempt the installation of the adhesive foam in temperatures less than 50°F.

**STEP 8** Rub the paper backing on the adhesive foam to activate the adhesive before applying.

**STEP 9** Remove the adhesive backing; position the adhesive foam as shown in [PIC.3](#).

**STEP 10** Press in place for one (1) minute to ensure proper adhesion.

**STEP 11** Repeat STEP 7 through STEP 10 for the other down tube cover and clamp.

**STEP 12** Snap the lower down tube covers into place; position them just below the weld on the down tube.

**STEP 13** Hold a neck cover in place and secure with the included 5/16-18 x 1-1/4 (BSCS) and washer; leave the 5/16-18 x 1-1/4 (BSCS) loose for now. Repeat this step for the other side.



**NOTE** **ROAD GLIDE ONLY** – The top 3/8-16 x 3-1/2 hex head fastener securing the fairing mount bracket to the steering neck must be removed and then reinstalled in the opposite direction to allow clearance for the left side neck cover. See [PIC.4](#).

**ATTENTION!** Secure all wiring away from any moving parts, pinch points or extreme heat. Kuryakyn WILL NOT warranty any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

**STEP 14** Secure the tops of the neck covers with the included 10-24 x 2-1/2 (SHCS); leave the fastener loose for now.

**STEP 15** Install the lower down tube clamps and secure them with the four included #8-32 x 1/2 (SHCS); leave the fasteners loose for now.

**Kuryakyn®**

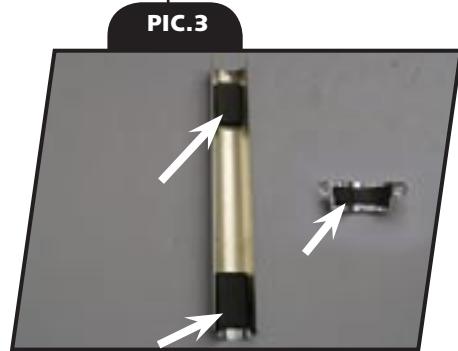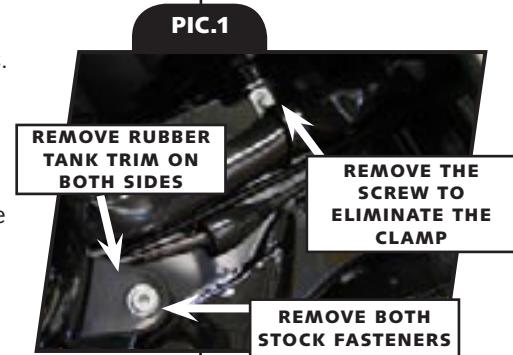

**PAGE**  
**2**

**-cont.-**

**DELUXE NECK COVERS**

**INSTALLATION**

**STEP 16** Tighten the fasteners. Begin by applying downward pressure to the top of the neck covers; tighten the 5/16-18 BSCS first, then the 10-24 SHCS. Snug the clamp fasteners; do not over tighten them.

**Küryakyn®**

**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

**STEP 17** Install the supplied cable tie in place of the one removed in STEP 5.

**STEP 18** Ensure that no cables and/or wiring interfere with the proper operation of the motorcycle before riding.

*Ride On!*

**PAGE**  
**3**

**DELUXE NECK COVERS**

**INSTALLATION**