LIGHTED CURVED HORIZONTAL PLATE MOUNT-BLACK   3125

PARTS INCLUDED

1	Lighted Curved Horizontal Side Plate Mount Assembly—Black
1	Hardware Kit Containing:
	1 Chrome Bolt Cover
	1 5/16"-18 X 3/4" Socket Head Cap Screw
	3 1/4"-20 Chrome acorn Nuts
	3 1/4" Lock Washers
	3 1/4"-20 X 3/4" Flat Socket Cap Screws
	1 1/4"-20 X 1/2" Flat Socket Cap Screw
	1 1/4"-20 Square Nut
1	Wiring Kit Containing:
	4 4" Black Nylon Cable Ties
	1 Dielectric Grease Pack
	4 Female T-Tap Scotch Locks
	4 Male Scotch Lock Connectors
	1 1" X 3" Adhesive Foam Tape
1	Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING!   THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

CAUTION!   This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

TOOLS SUGGESTED

Set of Hex Wrenches, Combination Wrenches, Test Light, Wire crimping Tool

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1   Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

NOTE: The lighted side mount license plate holder is compatible with any model but you must order the correct splined mount to meet your specific needs (sold separately).

NOTE: The following installation instructions assume that you have already installed the appropriate splined adapter for your specific application.

NOTE: Pictures shown are of chrome parts. Installation of Black parts will be the same.

-cont.-

CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

ABOUT OUR CATALOG
For purchasing Küryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Küryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.
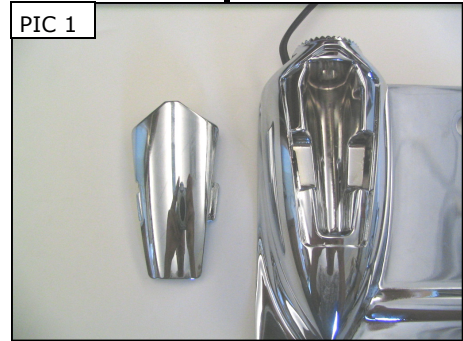
Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.
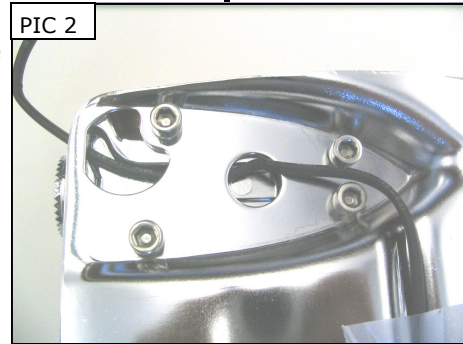
kuryakyn.com

WARNING! THE ADDITION OF A SIDE-MOUNTED LICENSE PLATE MAY AFFECT CORNERING CLEARANCE IN SOME SITUATIONS.

STEP 2 Remove your license plate and existing license plate frame if so equipped.

STEP 3 Install the Side Mount License Plate clamp to the bike according to the instructions included with the clamp.

STEP 4 Using the 5/16"-18 X 3/4" Socket Head Cap Screw, attach the side mount license holder to the mounting clamp. Adjust the angle of the plate as desired and tighten securely.

STEP 5 Install the snap-in Chrome Bolt Cover to the backing plate (PIC 1) by placing the long tab in the proper slot first and then pushing down on the latch tab.

STEP 6 Route the wiring from the license plate frame through the backing plate as shown in PIC 2 and 3. After routing through the backing plate, route the harness from the light to where it will attach to the wire harness on the bike.
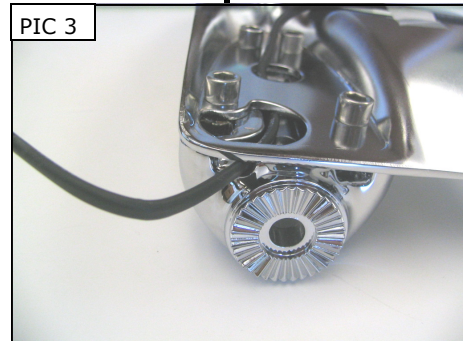
STEP 7 Locate the stock wiring harness for the license plate light.

STEP 8 Using a test light or the wire schematic for your motorcycle, determine the power and ground wires on the motorcycle harness for the license plate light. Install a Female T-Tap connector on each of these wires. PIC 4

CAUTION! Avoid potential electrical shock! Disconnect the battery before starting this procedure.

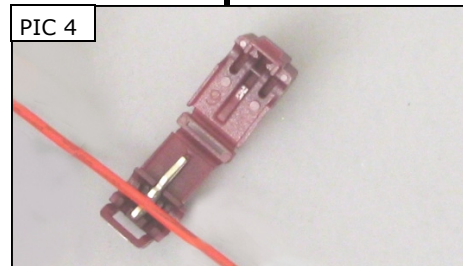**ATTENTION!** **Küryakyn recommends the use of dielectric grease on electrical connections.**

STEP 9 Locate the harness from the plate light that was routed in Step 6. Crimp a Male Connector on the **RED** wire from the plate light and plug it into the Female T-Tap on the Power wire from Step 8. PIC 5 Crimp a Male Connector on the **BLACK** wire from the plate light and plug it into the Female T-Tap on the Ground wire. PIC 5 Use the supplied Cable Ties to secure the wiring out of harms way.

ATTENTION! **Secure all wiring away from any moving parts, pinch points or extreme heat. Küryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.**

STEP 10 Turn on the bike lighting and check that the license plate light illuminates.

STEP 11 Install your license plate onto the back plate. Place the frame assembly over the license plate and secure to the back plate with the supplied fasteners.
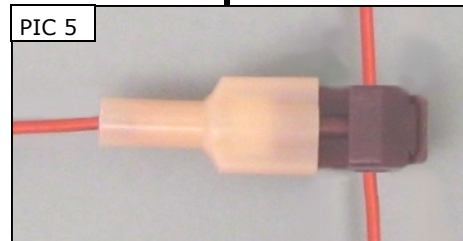
NOTE: **You may need to trim your plate with tin snips for wire harness clearance and a perfect fit in the frame.**

NOTE: **If the license plate rattles in the frame, install the supplied self-adhesive foam tape to the inside of the back plate then re-install the license plate. This should eliminate the rattle.**

STEP 12 Tighten all fasteners securely.

ATTENTION! **It is the installer's responsibility to ensure that all of the fasteners (including preassembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.**

Ride On!

PIC 1

PIC 2

PIC 3

PIC 4

PIC 5

PAGE
2

CURVED HORIZONTAL MOUNT INSTALLATION