



## Installation Instructions: Wrap-Around Passenger Backrest for 2014 King TourPak


**Step 1** Open King TourPak lid; locate and remove three hex nuts holding stock wrap-around unit in place.

**Step 2** Remove wrap-around unit from King TourPak lid.

**Step 3** Mustang wrap-around unit uses three holes only; the two outermost holes, and the upper center hole, using supplied hardware for a secure installation.

**Step 4** Remove all supplied hardware from the three mounting studs on the back of the Mustang wrap-around unit. Leaving the rubber bumpers in place.

**Step 5** Align the three mounting studs with the two outermost holes and the upper center hole in the tour-pak lid; push all three studs through the holes. Place one metal washer and one hex nut. Tighten all for a secure installation.

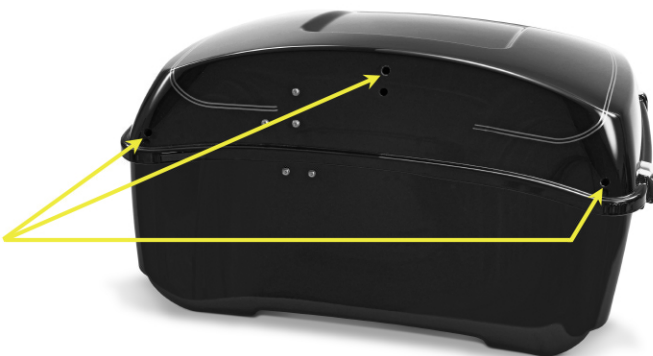

Back view of wrap-around



These steps are guidelines to help you install your new Mustang product. If you need further assistance please call us at 800-243-1392, Monday through Friday 9:00 - 5:30 Eastern or send an email to [questions@mustangseats.com](mailto:questions@mustangseats.com) or visit our website at [www.mustangseats.com](http://www.mustangseats.com).

For care and maintenance of our products, please go to our website under "Support".  
Ref: part #'s 76850, 76851, 76852, 76853, 76854, 76855