

STEP 1

Remove the seat and shrouds.

STEP 2

Remove the two radiator mounting bolts that hold the radiator to the frame. Remove the stock black plastic radiator protector from both sides.


STEP 3

Install spigot guard on the right radiator guard using the provided M5 x 12 Flat Head screws. Some bike models do not require spigot guard (i.e. 450 SX-F/XC-F.)



STEP 4

Install the radiator guard onto the radiator using the OEM fasteners to the frame. Do not tighten all the way. Next install the guard to the outside of the radiator using two of the included self-tapping fasteners. Once these are installed then tighten all mounting screws.

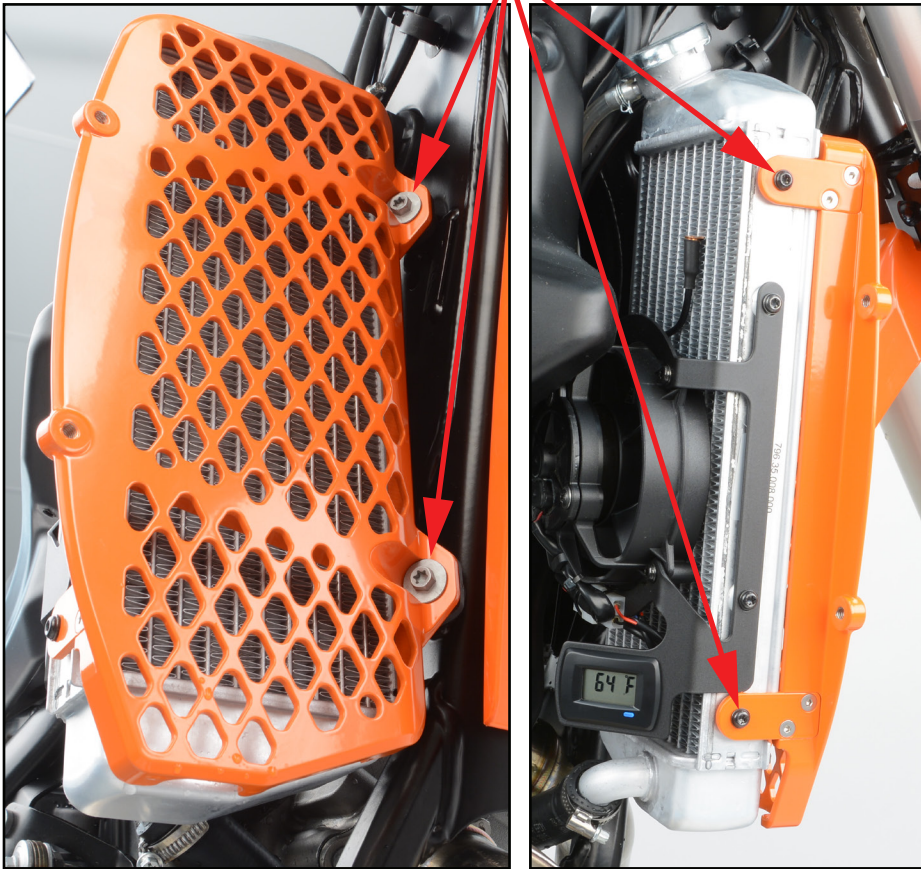

STEP 5

Install shrouds and seat back on bike. Make sure to bolt the shrouds to the guards using the OEM fasteners.

