




GET OFF TO AN EASY START.

BMW motorbike entry-level set – It has never been easier to get ready for motorbike service jobs. Now there is the STAHLWILLE entry-level set for BMW motorbikes. It is equipped with the most frequently used tools, so it covers the greatest possible range of applications with a modest number of tools.

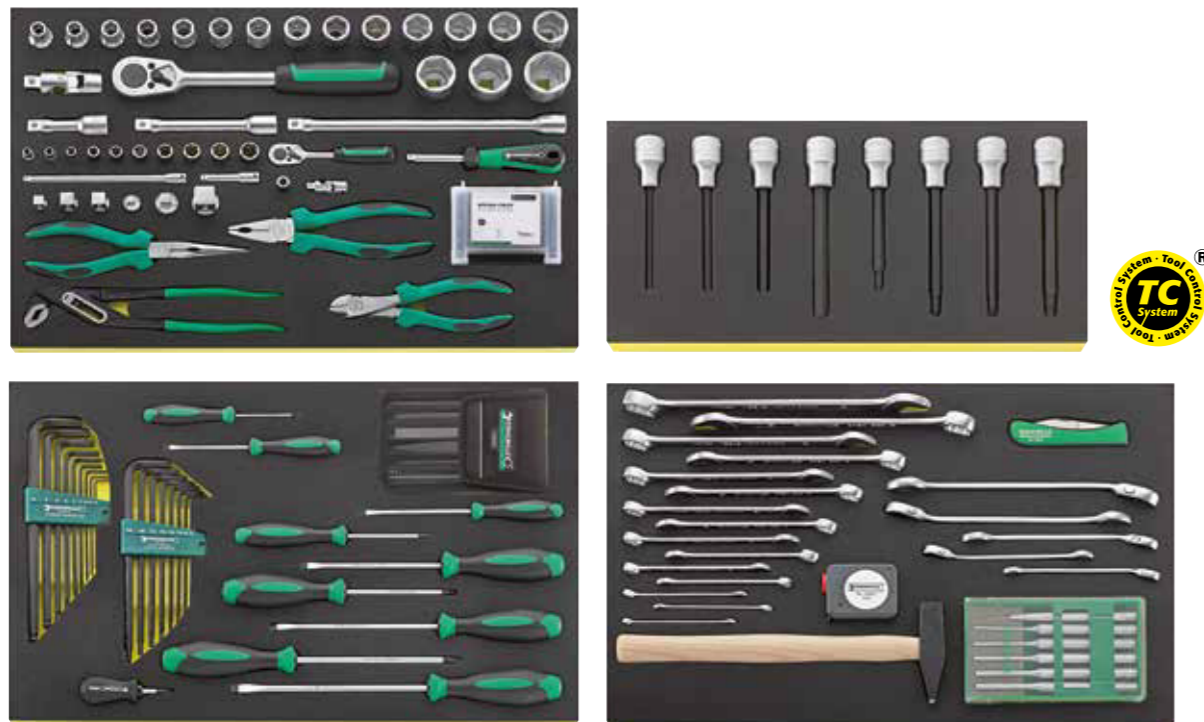

139 tools, in TCS inlays, 3x3/3, 1x1/3 inlays for 4 drawers (No 98VA for 2 drawers)



Robust. Not just the tools but also the Tool Trolley.
Tool Trolley 95VA – the perfect complement to the 2502 TCS.

2502 TCS BMW motorbike set | Code 97 83 06 07

	No 13	sizes 6; 7; 8; 10; 11; 12; 13; 14; 15; 16; 17; 18; 19; 22; 24 mm		No 513	3/8" ■ 1/2" ○
	No 17	sizes 8; 10; 13; 17; 19 mm		No 514	3/4" ■ 1/2" ○
	No 40	sizes 5; 5.5; 6; 7; 8; 9; 10; 11; 12; 13 mm		No 1204/21-1	4 x ⊕; 4 x ⊕; 9 x ⊕; 3 x ●
	No 400N	1/4" ■ 150 mm		No 4620	size 1 (0.6 x 3.5 x 75 mm) size 2 (0.8 x 4.0 x 100 mm) size 3 (1.0 x 5.5 x 125 mm) size 4 (1.2 x 6.5 x 150 mm) size 5 (1.6 x 8.0 x 175 mm)
	No 405/2	1/4" ■ ○ 54 mm		No 4628	size 1 (0.4 x 2.5 x 60 mm)
	No 405/6	1/4" ■ ○ 150 mm		No 4630	sizes 1; 2; 3
	No 407	1/4" ■ ○ 38 mm		No 4734	size 2
	No 409	3/8" ■ 1/4" ○		No 10767/9	sizes 1.5; 2; 2.5; 3; 4; 5; 6; 8; 10 mm
	No 410	1/2" ■ 1/4" ○		No 10771/8	sizes T9; T10; T15; T20; T25; T27; T30; T40
	No 412	1/4" ○ ○		No 65 01 5 180	
	No 415	1/4" ■		No 65 29 5 200	
	No 431	1/4" ■ 3/8" ○		No 65 51 6 240	
	No 432	1/2" ■ 3/8" ○		No 66 02 5 160	
	No 52	sizes 10; 11; 12; 13; 14; 15; 16; 17; 18; 19; 20; 21; 22; 24; 27; 30; 32 mm		No 105-8/6 K	No 105/120 x 10 mm No 108/150 x 2.5; 150 x 3; 150 x 4; 150 x 5; 150 x 6 mm
	No 1054	1/2" ○ sizes 8; 10 mm		No 10960	300 g
	No 2054	1/2" ○ sizes 5; 6 mm		No 12320	
	No 1054TX	1/2" ○ sizes T30; T50		No 12800	
	No 2054TX	1/2" ○ sizes T40; T45		No 12931 N	
	No 509/3	1/2" ■ ○ 75 mm			
	No 509/5	1/2" ■ ○ 130 mm			
	No 509/10	1/2" ■ ○ 255 mm			
	No 510	1/2" ■ ○ 71 mm			
	No 512	1/2" ■			