



TWDR Rev
1.0

Tweeter Installation Instructions

Find a suitable mounting location for your new tweeters. Commonly used locations would be near the top of the front doors, in the sail panel of the A-pillar, or on the dashboard near the driver and passenger side corners.

Next, choose the mounting style that you feel best suits your audio desires and vehicle design. If using the adhesive surface mount tape, clean the surface properly before installation. Please note, before drilling any holes for any installation, always check under and around the area to be used in order to insure there are no airbags, vehicle components, wiring, or any other part of the vehicle that could be damaged by drilling.


Run the wiring from the tweeters to the factory or aftermarket speaker wires.

Locate the positive and negative wires on the tweeters, then connect them to the appropriate factory or aftermarket speaker wire outputs.


Gold = Positive +

Silver = Negative -


Mounting Style #1

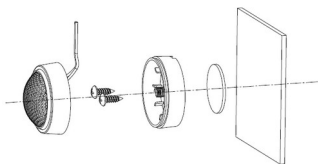

Mounting Style #2

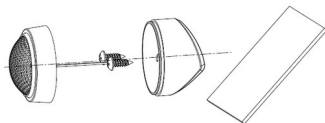

Mounting Style #3

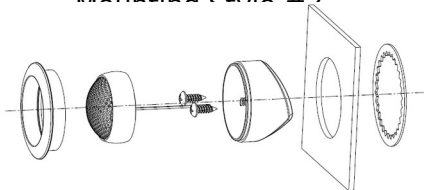

Having difficulties? We're here to help.

Contact our Tech Support line at:

386-257-1187 Or via email at: techsupport@metra-autosound.com