




WM-LOCKN

Line Output Converter W/Control

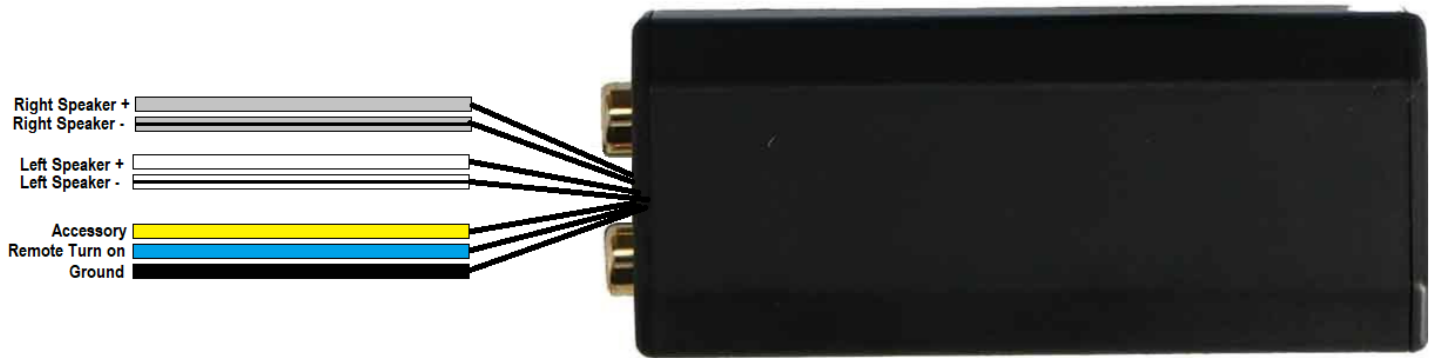

Installation: The WM-LOCKN should be installed on a stereo's speaker output wires or the output wires on an OEM amplifier of up to 30 watts per channel. These wires can be found behind the stereo in the dash, on the outside of an OEM amplifier, or on the input terminals on the OEM speakers.

GRAY = RIGHT Front (+) Input

GRAY/BLACK = RIGHT Front (-) Input

WHITE = LEFT Front (+) Input

WHITE/BLACK = LEFT Front (-) Input

YELLOW = (+) Accessory Turn on

BLUE = (+) Amplifier Signal Sense Turn on

BLACK = (-) Chassis Ground