


**yesterday  
effects®**

# jimi/jimmy

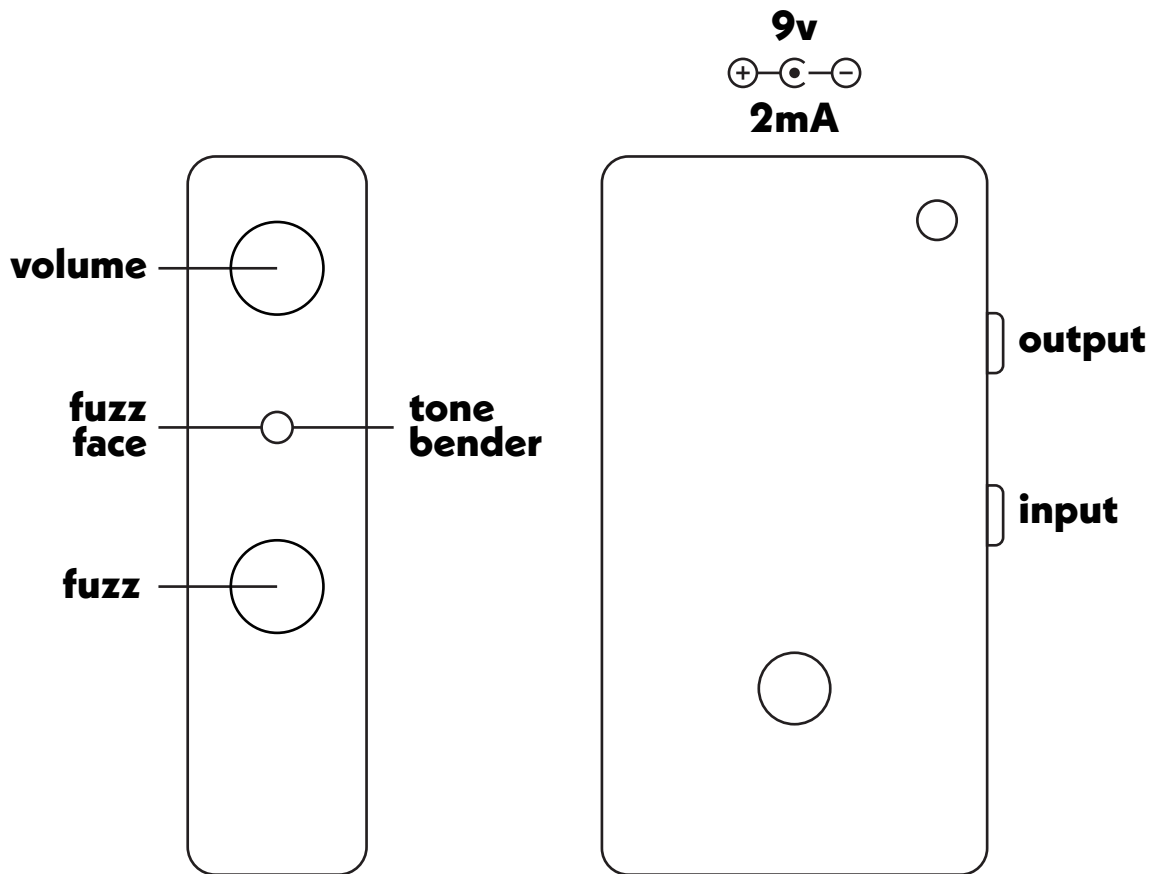

it is recommended that this pedal should be situated before any buffered effects in your signal chain. the closer this pedal can sit to your instrument the better. however, your ear is the ultimate authority on whether or not this placement sounds best.

run this pedal only at 9v using a standard center negative power supply.