



PROTECTIVE CAGE INSTALLATION INSTRUCTIONS

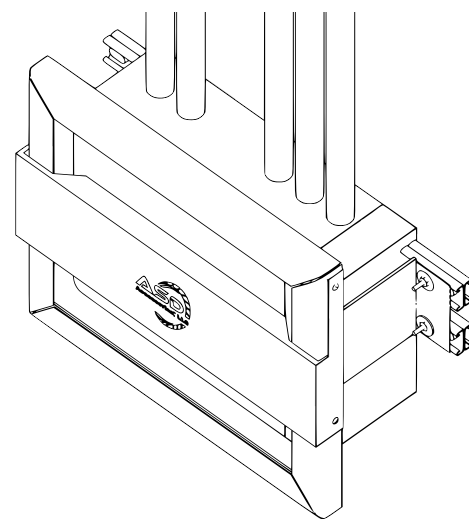

NOTE: PROTECTIVE CAGE SHIPS FULLY ASSEMBLED. MOUNTING CHANNEL AND HARDWARE IS NOT PROVIDED.

Step 01


PROTECTIVE CAGE REQUIRES A MINIMUM OF 20" OF TWO PARALLEL RUNS OF MOUNTING CHANNEL THAT ARE 3" CENTER TO CENTER.

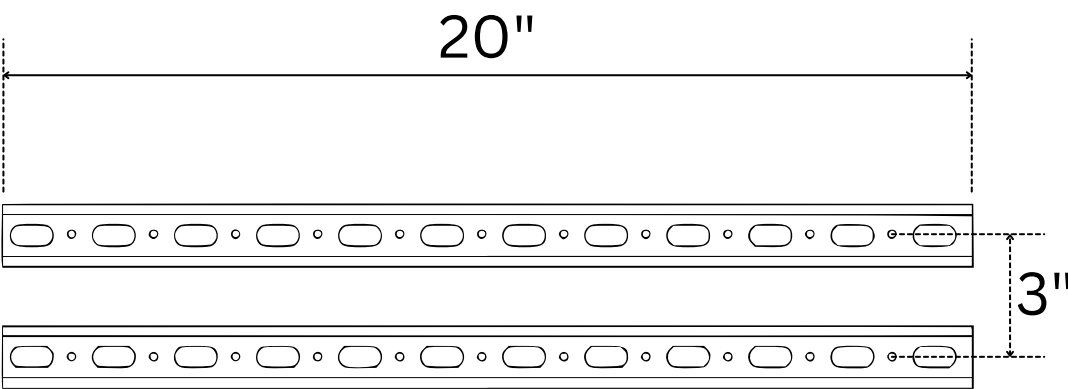

Front View

Step 02


EQUIPMENT BEING PROTECTED MUST BE INSTALLED BEFORE THE PROTECTIVE CAGE. PROTECTED EQUIPMENT IS INSTALLED BY OTHERS.

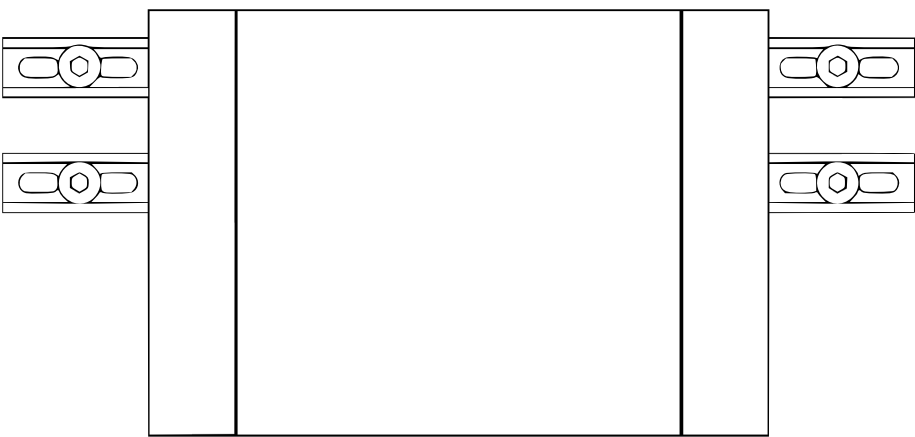

Front View


Step 03

MAKE SURE YOU HAVE (4) 1/4-20 BOLTS (BOLT LENGTH IS DEPENDENT ON MOUNTING CHANNEL DEPTH), (4) 1/4" WASHERS, AND 4 1/4-20 NUTS.

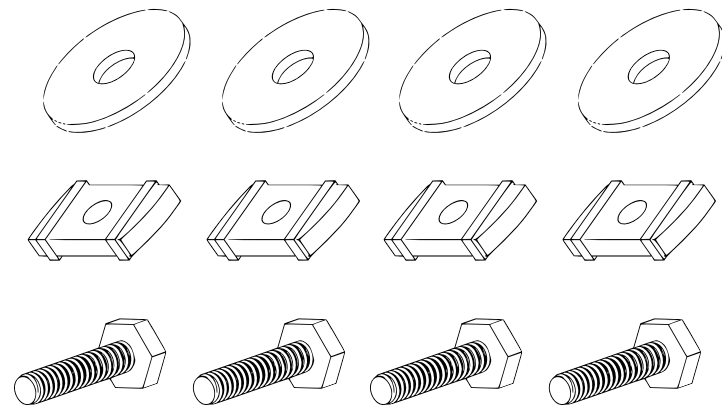

Step 04


IN EACH OF THE FOUR HOLES ON THE PROTECTIVE CAGE MOUNTING BASE, TAKE A WASHER AND PLACE ON 1/4-20 BOLT. TAKE BOLT WITH A WASHER AND PLACE ONE IN EACH OF THE FOUR MOUNTING BASE HOLES., TAKE 1/4-20 NUT THREAD ONTO 1/4 TO 1/4-20 BOLT. HAVE ONE THREAD SHOWING THROUGH THE NUT. RIBS OF NUT SHOULD FACE TOWARD THE BOTTOM SIDE OF THE MOUNTING BASE.

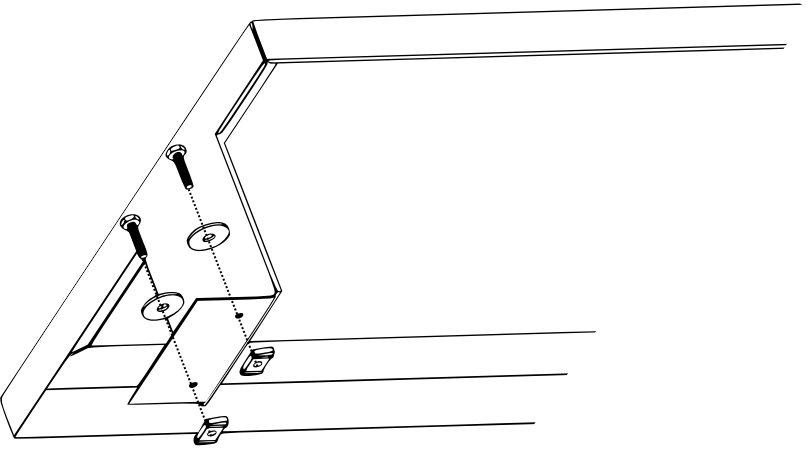

Angle View

Step 05

TAKE PROTECTIVE CAGE, ALIGN ALL FOUR NUTS WITH THE OPENING OF THE (2) 20" PARALEL RUNS OF MOUNTING CHANNEL THAT ARE SPACED 3" CENTER TO CENTER. ONCE ALL FOUR NUTS ARE INSIDE MOUNTING CHANEL, TIGHTEN BOLTS TO THE MOUNTING CHANEL MANUFACTURER'S RECOMMENDED TORQUE. (MANUFACTURER TO MANUFACTURER MAY HAVE DIFFERENT SPECIFICATIONS, IMPORTANT TO CHECK WITH THAT PRODUCTS SPECIFICATION SHEET).

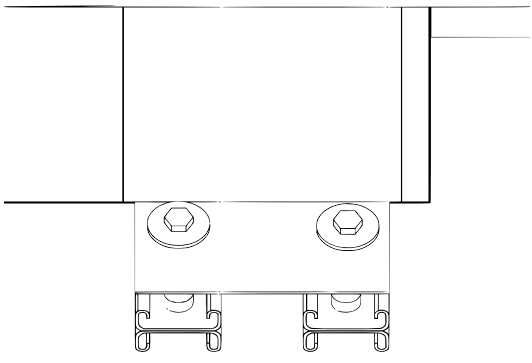

Close Up View

