


# Versare® Countertop Shield

## Assembly Instructions

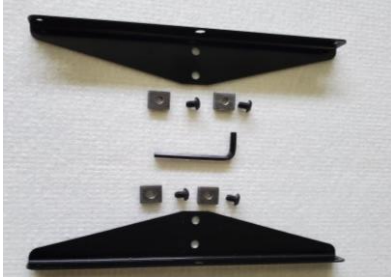

1. Remove hardware from bag, 2 screws and 2 square nuts are used for each foot.
  2. Loosely attach each screw by hand, through the side holes, onto the square nuts.
  3. The square nuts should be positioned on the inside angle of the feet.
  4. Align the foot with the post of the side frame and insert, matching the square nuts with the exterior channel.
  5. Position the foot assembly so the buttonhead of the two screws are on the outside of the Countertop Shield.
  6. Slightly tighten each screw with the included allen wrench, do not fully tighten.
  7. Repeat the above steps for the second foot.
  8. Once the second foot has been attached, set the Shield upright.
  9. Once you confirm that the Shield is standing straight and perpendicular, adjust as needed to achieve, then finish tightening all four screws.
- To achieve a semi-permanent mount, your Countertop Shield can be secured to the counter by way of:
    - Appropriate screws and /or anchors matched to the specific counter material. Attach hardware (not included) through the holes in each foot.
    - Using double-sided foam tape (not included) to achieve a secure positioning.