



Flood Fighting: How To Use Sandbags

U.S. ARMY CORPS OF ENGINEERS

BUILDING STRONG.

Sandbag Construction – The use of sandbags is a simple, but effective way to prevent or reduce flood water damage. Properly filled and placed sandbags can act as a barrier to divert moving water around, instead of through, buildings. Sandbag construction does not guarantee a water-tight seal, but is satisfactory for use in most situations. Sandbags are also used successfully to prevent overtopping of streams with levees, and for training current flows to specific areas.

Untied sandbags are recommended for most situations. Tied sandbags should be used only for special situations when pre-filling and stockpiling may be required, or for specific purposes such as filling holes, holding objects in position, or to form barriers backed by supportive planks. Tied sandbags are generally easier to handle and stockpile. However, sandbag filling operations can generally be best accomplished at or near the placement site, and tying of the bags might be a waste of valuable time and effort. If the bags are to be pre-filled at a distant location, due consideration must be given to transportation vehicles and placement site access.

The most commonly used bags are untreated burlap sacks available at feed or hardware stores. Empty bags can be stockpiled for emergency use, and will be serviceable for several years, if properly stored. Filled bags of earth material will deteriorate quickly. Commercial plastic sandbags, made from polypropylene, are also available from most bag suppliers. These will store for a long time with minimum care, but are not biodegradable. Thus, they have to be disposed of, or will remain around for a long time.

Do not use garbage bags, as they are too slick to stack. Avoid the use of feed or seed sacks, as they are too large to handle when filled even half full. If they must be used, keep the weight of filled bags down to what can be handled by one or two people (no more than 60 pounds). Where possible, use bags about 14-18" wide, and 30-36" deep.

A heavy bodied or sandy soil is most desirable for filling sandbags, but any usable material at or near the site has definite advantages. Coarse sand could leak out through the weave in the bag. To prevent this, double bag the material. Gravelly or rocky soils are generally poor choices because of their permeability.

Sandbag barriers can easily be constructed by two people, as most individuals have the physical capability to carry or drag a sandbag weighing approximately 30 pounds.


How to Fill a Sandbag – Filling sandbags is usually a two-person operation. Both people should be wearing gloves to protect their hands. One member of the team should place the empty bag between or slightly in front of widespread feet with arms extended. The throat of the bag is folded to form a collar, and held with the hands in a position that will enable the other team member to empty a rounded shovel full of material into the open end. The person holding the sack should be standing with knees slightly flexed, and head and face as far away from the shovel as possible.

The shoveler should carefully release the rounded shovel full of soil into the throat of the bag. Haste in this operation can result in undue spillage and added work. The use of safety goggles and gloves is desirable, and sometimes necessary.

Bags should be filled between one-third (1/3) to one-half (1/2) of their capacity. This keeps the bag from getting too heavy, and permits the bags to be stacked with a good seal.

For large scale operations, filling sandbags can be expedited by using bag-holding racks, metal funnels, and power loading equipment. However, the special equipment required is not always available during an emergency.



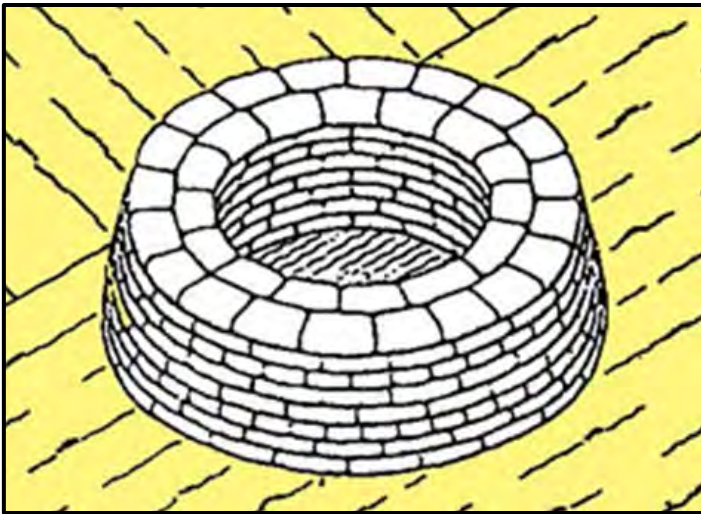


Ring the boil with sandbags, with the first bags back 1-2 feet from the boil. More, if the soil is unstable.

Build the first layer in a circle, 2-4 bags across, and then build up, bringing each layer in. If possible, keep the interior face straight.

Build the ring wall with the means for water to flow out, leaving a gap in the wall, or using pipes. Adjust the flows until the water slows, and becomes clear.

Monitor the ring wall constantly. Raise or lower the height of the wall as necessary, maintaining a slow, clear flow.

The height should be only enough to create enough head to slow flow so that no more material is displaced, and the water runs clear.

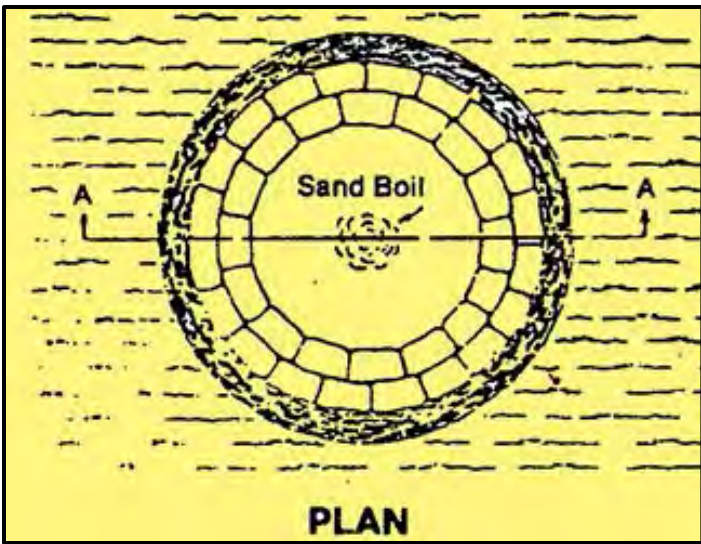

Notes:

Do not sack a boil which does not put out material.

The entire base should be cleared of debris and scarified.

Tie into the levee if the boil is near a toe.

Use loose earth between all of the sacks.

All joints must be staggered.

Be sure to clear the sand discharge.

Never attempt to completely stop the flow through a boil.

Corps of Engineers Sandbag Policy – Local governments, flood control districts, and other government agencies, are responsible for maintaining a supply of sandbags adequate to cover anticipated emergencies. The Walla Walla District maintains a limited sandbag stockpile to augment local jurisdictions during actual flood emergencies. The Corps will issue only to agencies or governments. Individual citizens requesting sandbags will be directed to their local government.

At the discretion of the District Commander, a portion of the District's stockpile may be loaned to meet a specific local flood emergency. Unused stocks must be returned to Walla Walla District as soon as the emergency is over. Consumed stocks must be replaced in kind, or paid for by the local interests, unless the District Commander has declared a flood emergency for that locality, in which case no reimbursement is necessary. This applies only to those jurisdictions within the Walla Walla District's area of operation, the Snake River basin.

To see if you are in our area of operations, or to request sandbags, contact the District Readiness Office, as noted below.

U.S. ARMY CORPS OF ENGINEERS – WALLA WALLA DISTRICT READINESS OFFICE

201 North Third Avenue; Walla Walla, WA 99362-1876

509-527-7146 business hours

1-509-380-4538 emergencies (include 1-509- when calling)

cenww-eoc@usace.army.mil ✕ www.nww.usace.army.mil

November 2015

This document is not copyrighted and can be reproduced as needed.