

POWERBLOCK®


POWERBLOCK POWERSTAND ASSEMBLY STEP ONE

ITEM NO.	DESCRIPTION	QTY.
1	POWERSTAND SPACER SUPPORT	1
2	POWERSTAND LEFT LEG	1
3	POWERSTAND RIGHT LEG	1
4	M10 - 1.5 mm X 50 mm BUTTON HEAD SCREW	4
5	M10 WASHER	8
6	M10 - 1.5 mm LOCK NUT	4

TOOLS NEEDED: ONE 17 mm WRENCH AND ONE 6 mm HEX ALLEN WRENCH.

1. ATTACH LEFT LEG (ITEM 2) TO SPACER SUPPORT (ITEM 1) WITH SUPPLIED HARDWARE.
ALIGN PEG ON SPACER SUPPORT WITH PEG HOLE ON LEG. DO NOT TIGHTEN HARDWARE.
2. ATTACH RIGHT LEG (ITEM 3) TO SPACER SUPPORT (ITEM 1) WITH SUPPLIED HARDWARE.

TIGHTEN ALL HARDWARE.

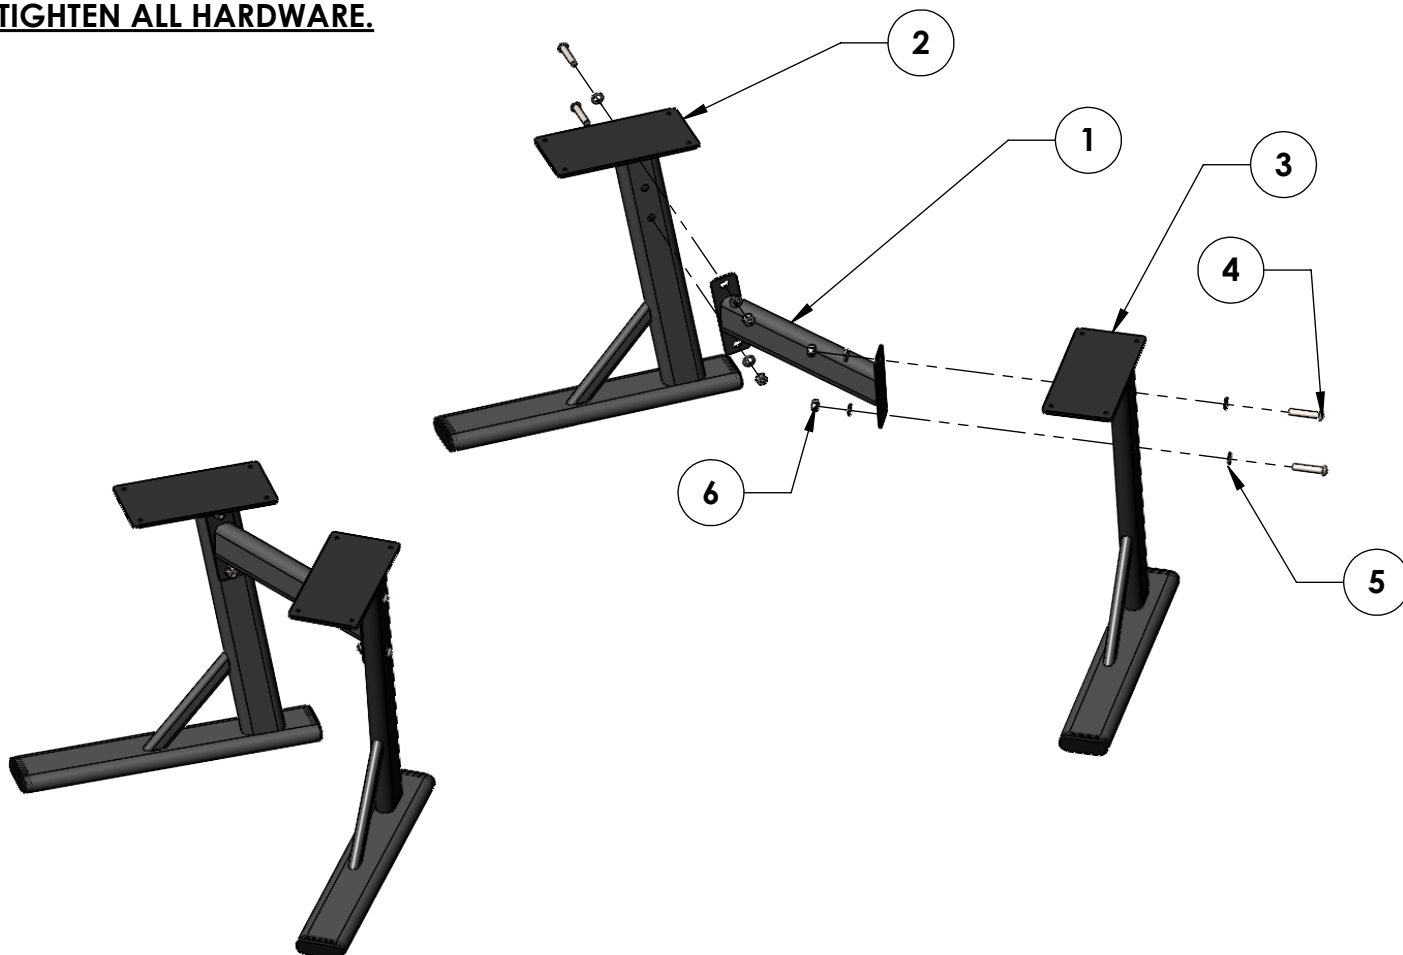

POWERBLOCK®

POWERBLOCK POWERSTAND ASSEMBLY STEP TWO

ITEM NO.	DESCRIPTION	QTY.
1	POWERSTAND LEG ASSEMBLY	1
2	POWERSTAND TOP	2
3	M5 - 0.8 mm LOCK NUT	8
4	POWERSTAND TRAY MAT	2

TOOLS NEEDED: ONE 8 mm WRENCH.

1. ATTACH BOTH TOPS (ITEM 2) TO LEG ASSEMBLY (ITEM 1) WITH SUPPLIED HARDWARE.
TIGHTEN HARDWARE.
2. APPLY TRAY MATS (ITEM 4) TO TOPS (ITEM 2).

TIGHTEN ALL HARDWARE.

FOR USE ON FIRM AND FLAT SURFACE ONLY.

