


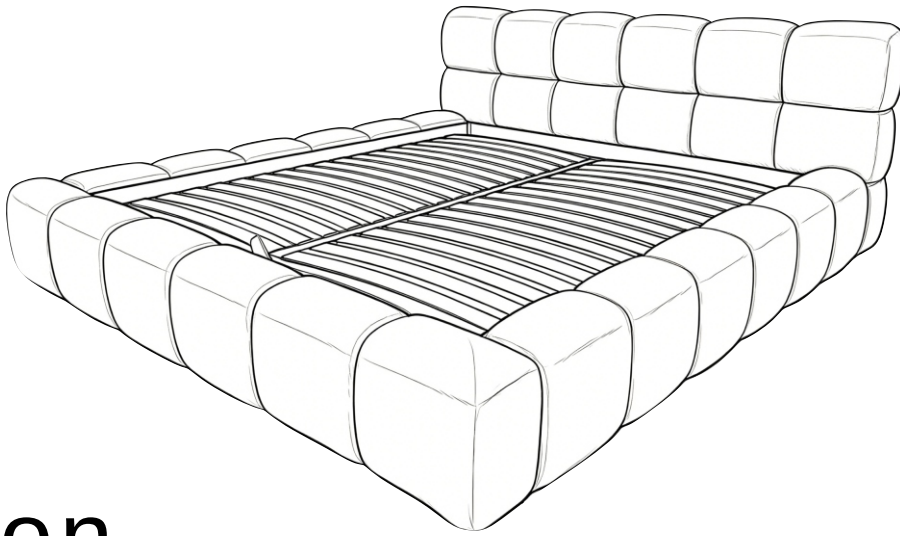


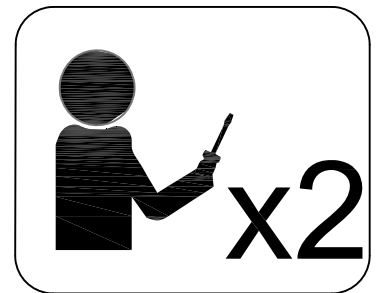


Cocoon

ASSEMBLY INSTRUCTIONS

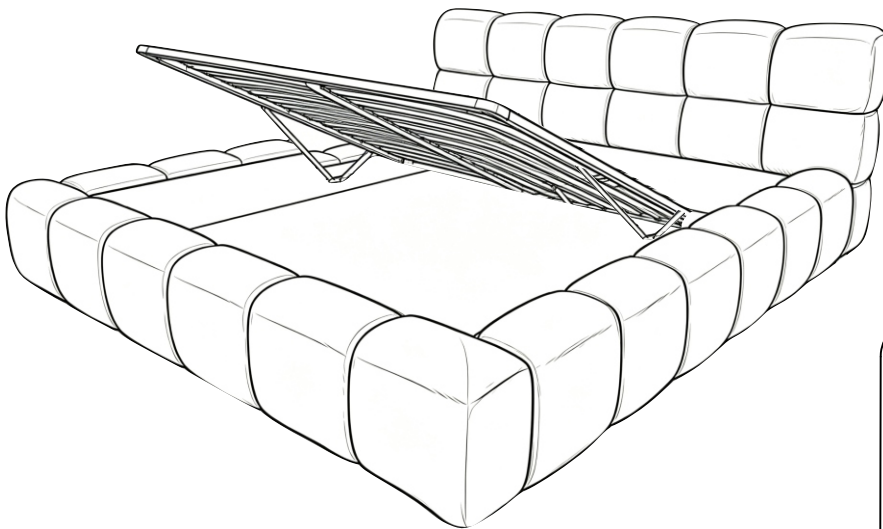


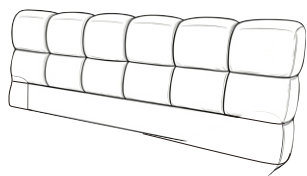


①x1

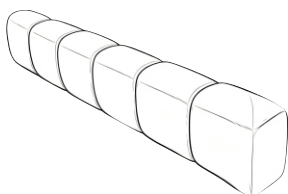


②x1

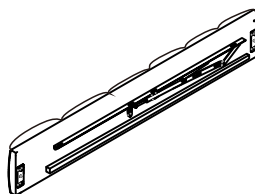


③x1

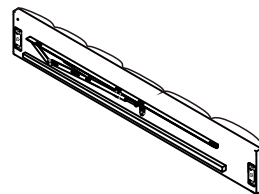


④x1

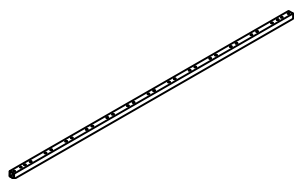


⑤x2

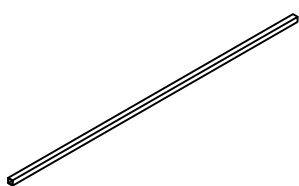

⑥x1

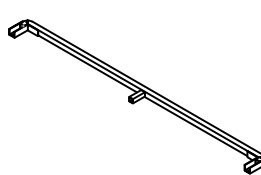

⑦x2

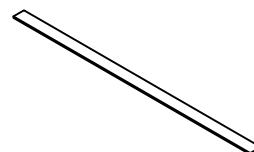


⑧x34




⑨x2




⑩x4



⑪x1

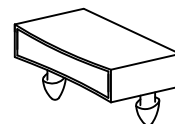


⑫x34



⑬x17



⑭x 4




⑮x2





⑯x1

Install all the relevant screws, but do not tighten them completely at the very beginning.
Tighten the screws fully one by one.

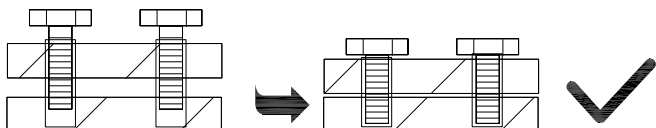


Don't tighten up the screw before you start next mounting during the installation.

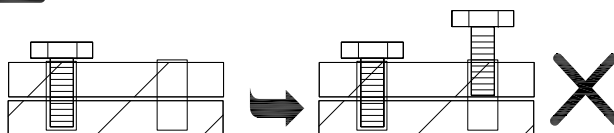


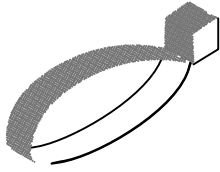


①7x1

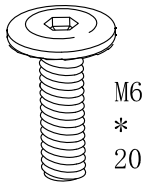

Ax10

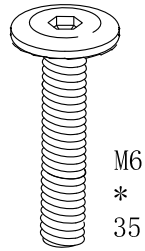


Bx8

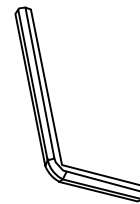


Cx1


Install all the relevant screws, but do not tighten them completely at the very beginning.
Tighten the screws fully one by one.

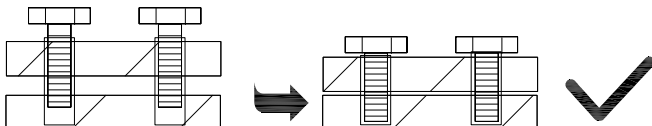


Don't tighten up the screw before you start next mounting during the installation.

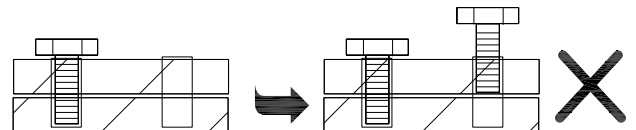


1

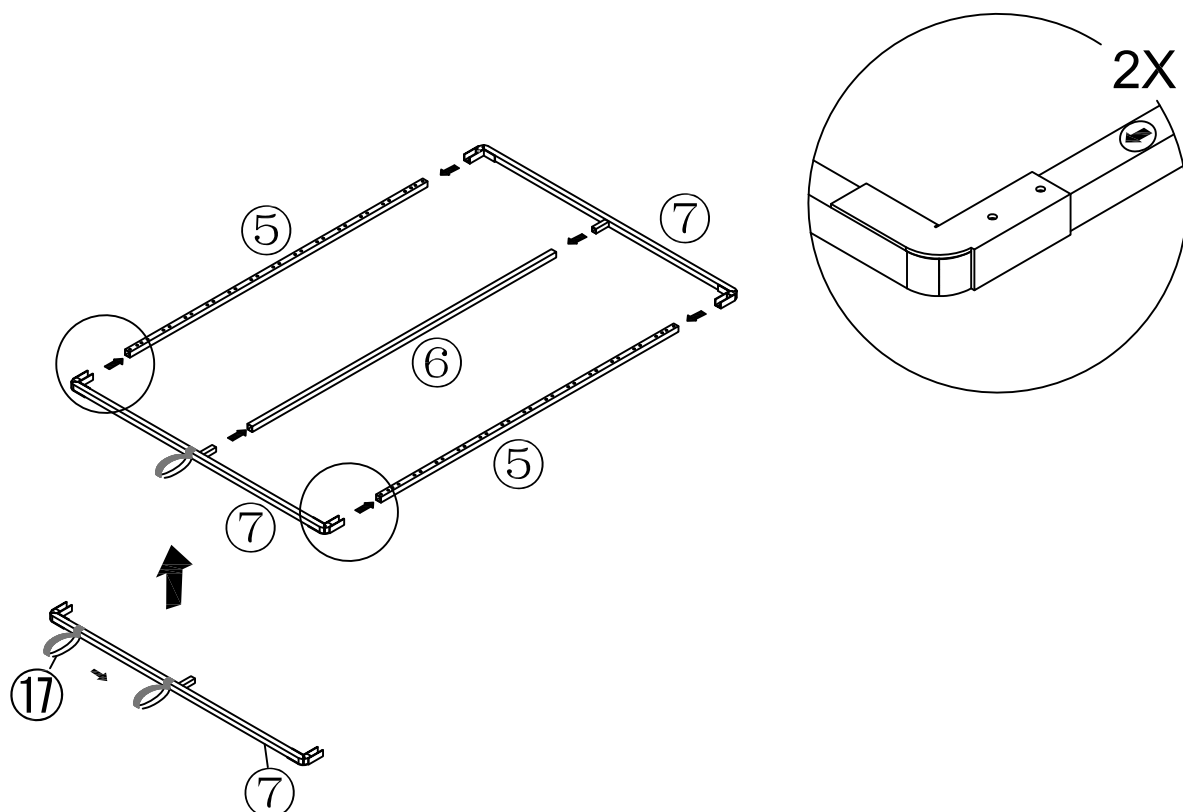


2

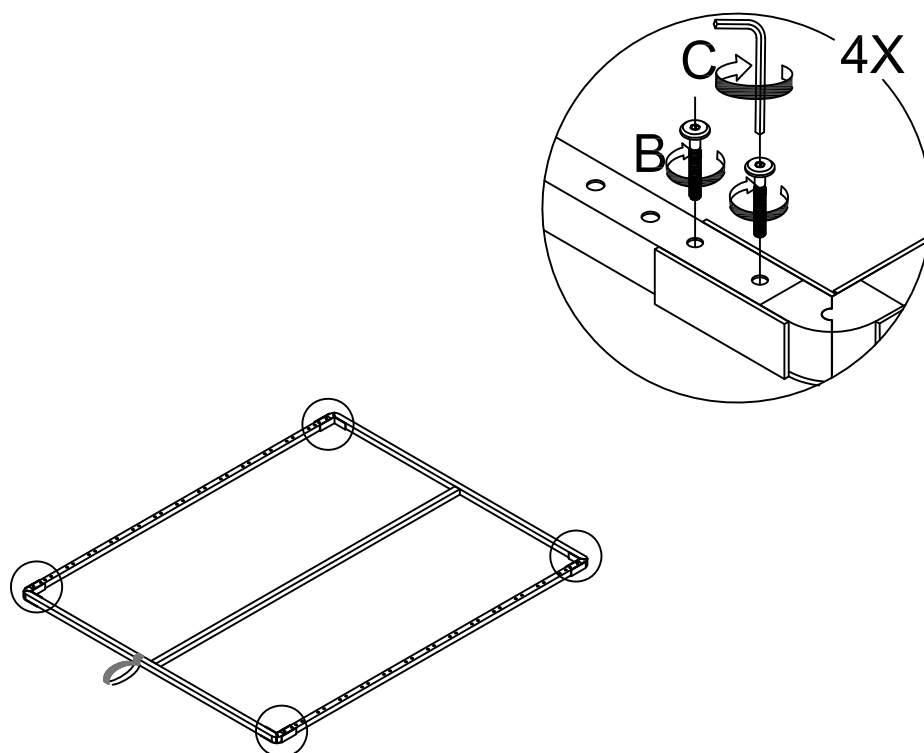


3

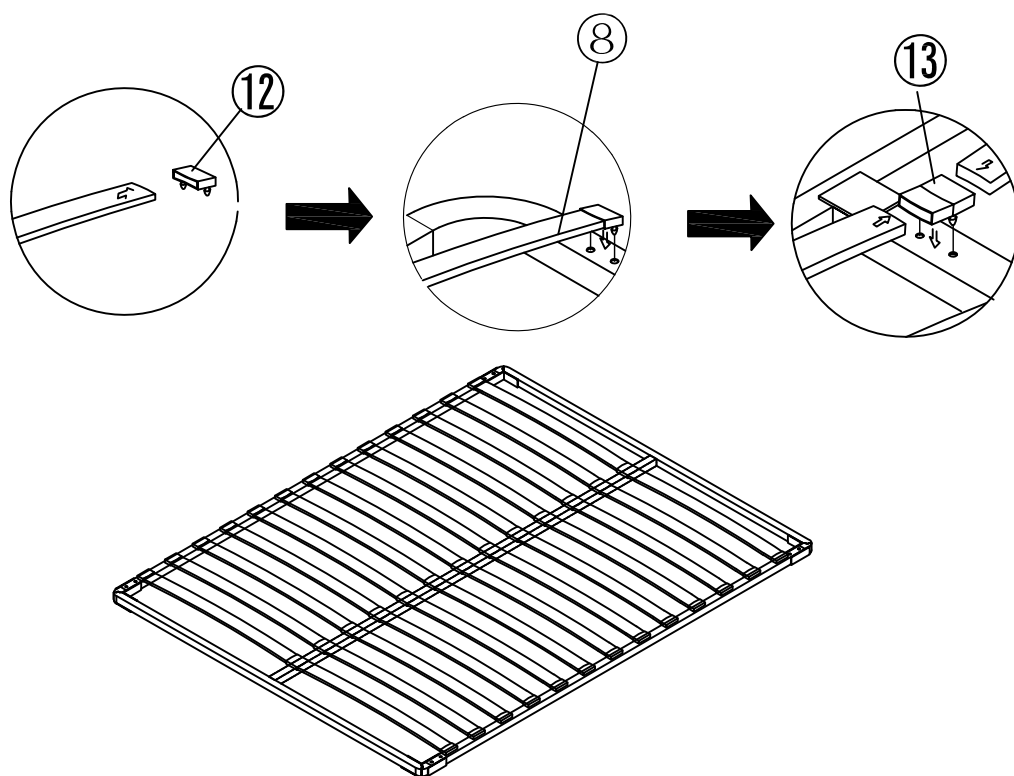


4

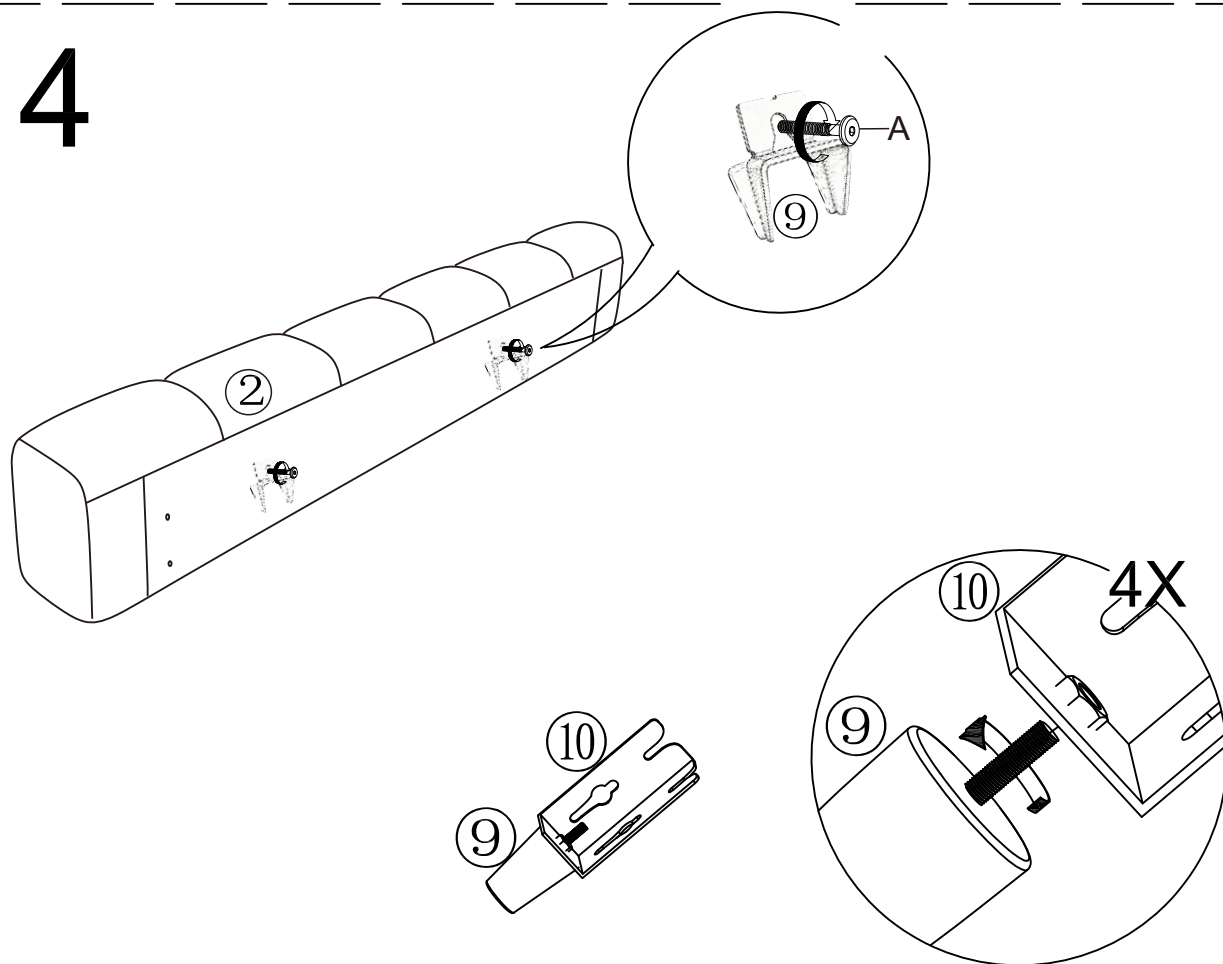


5

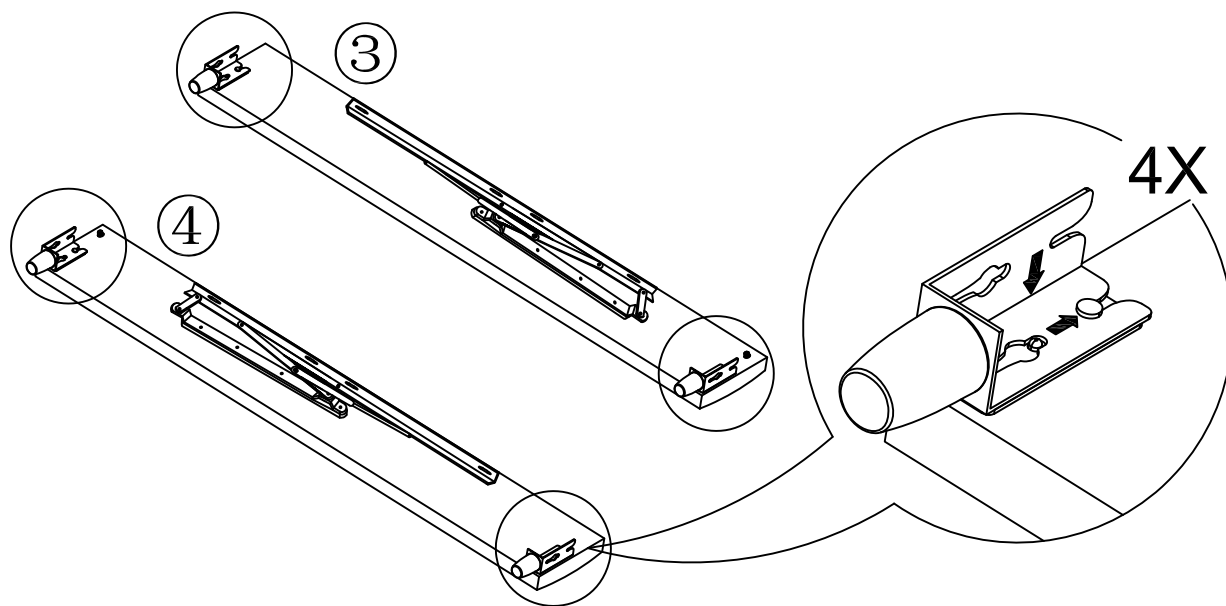


6

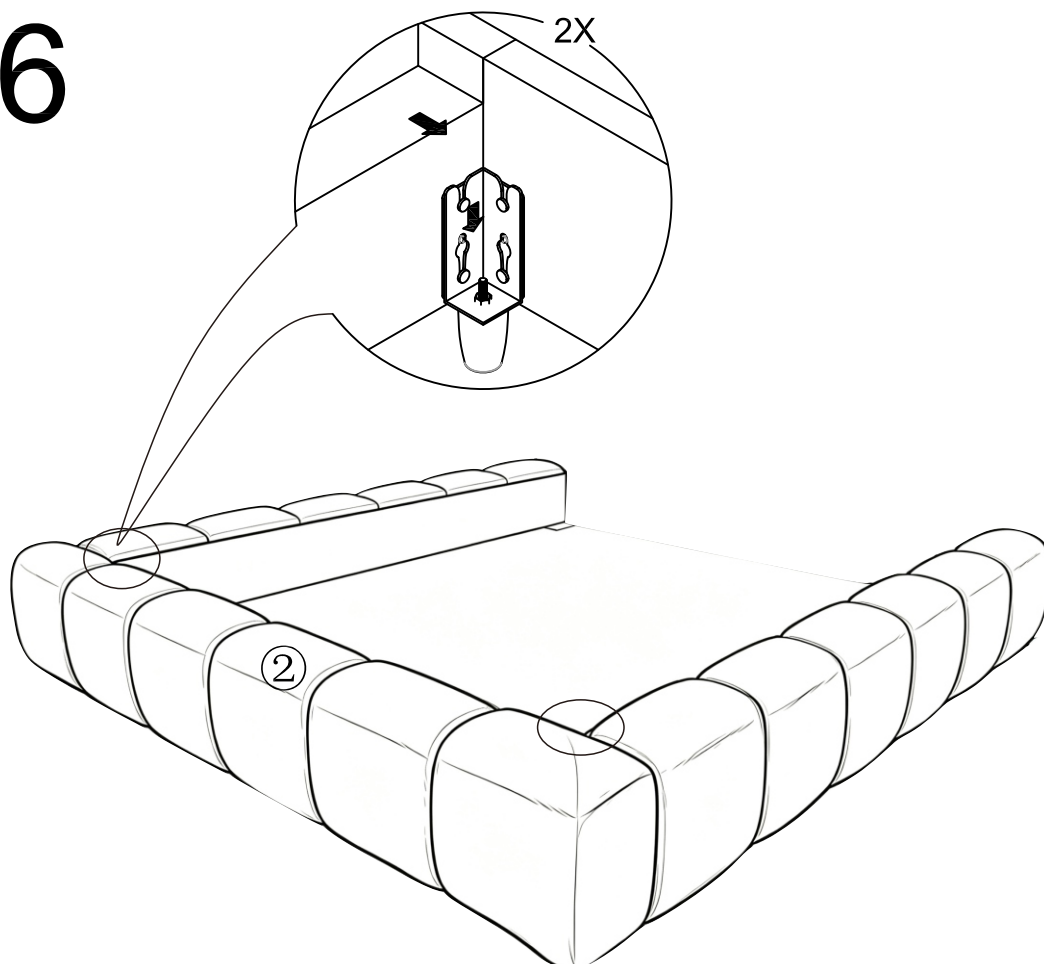


7

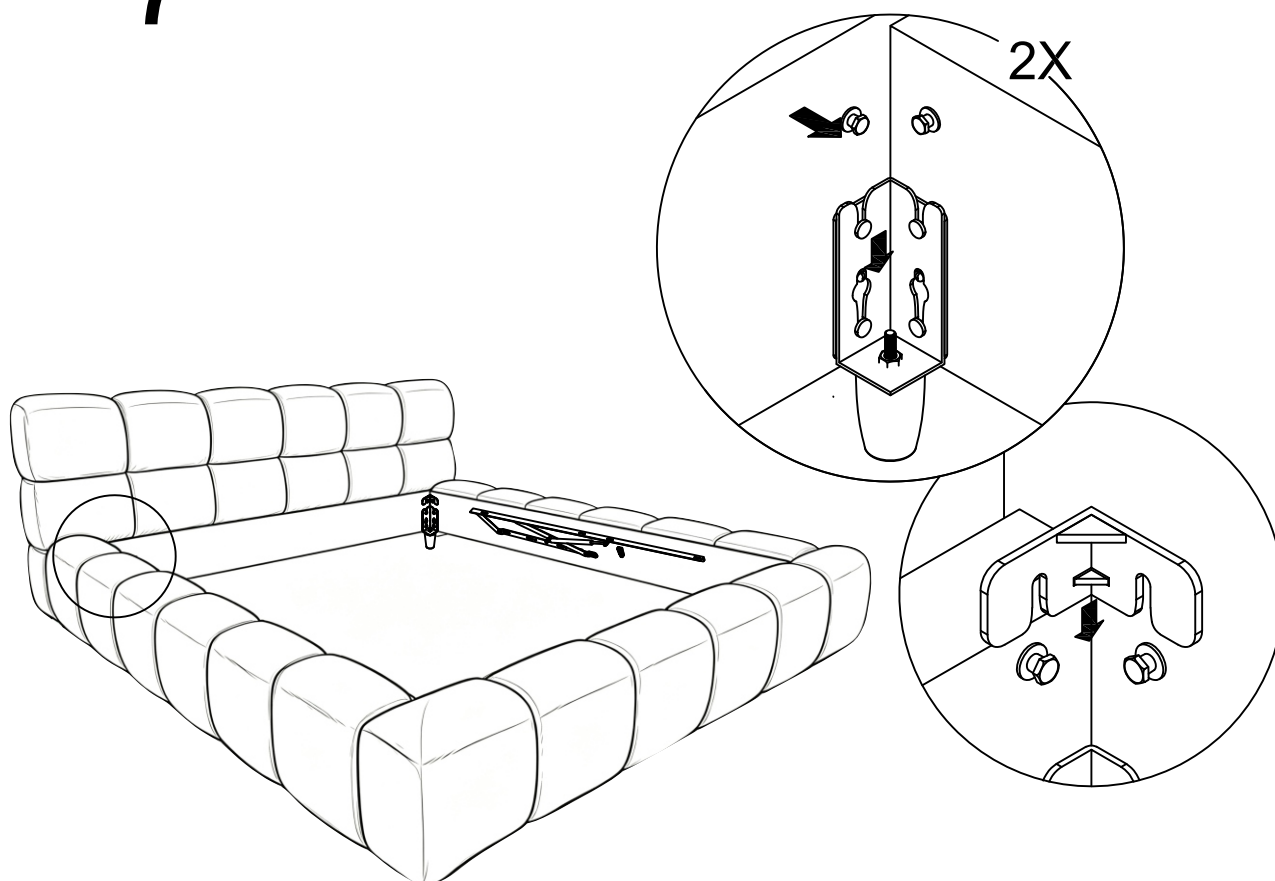


8

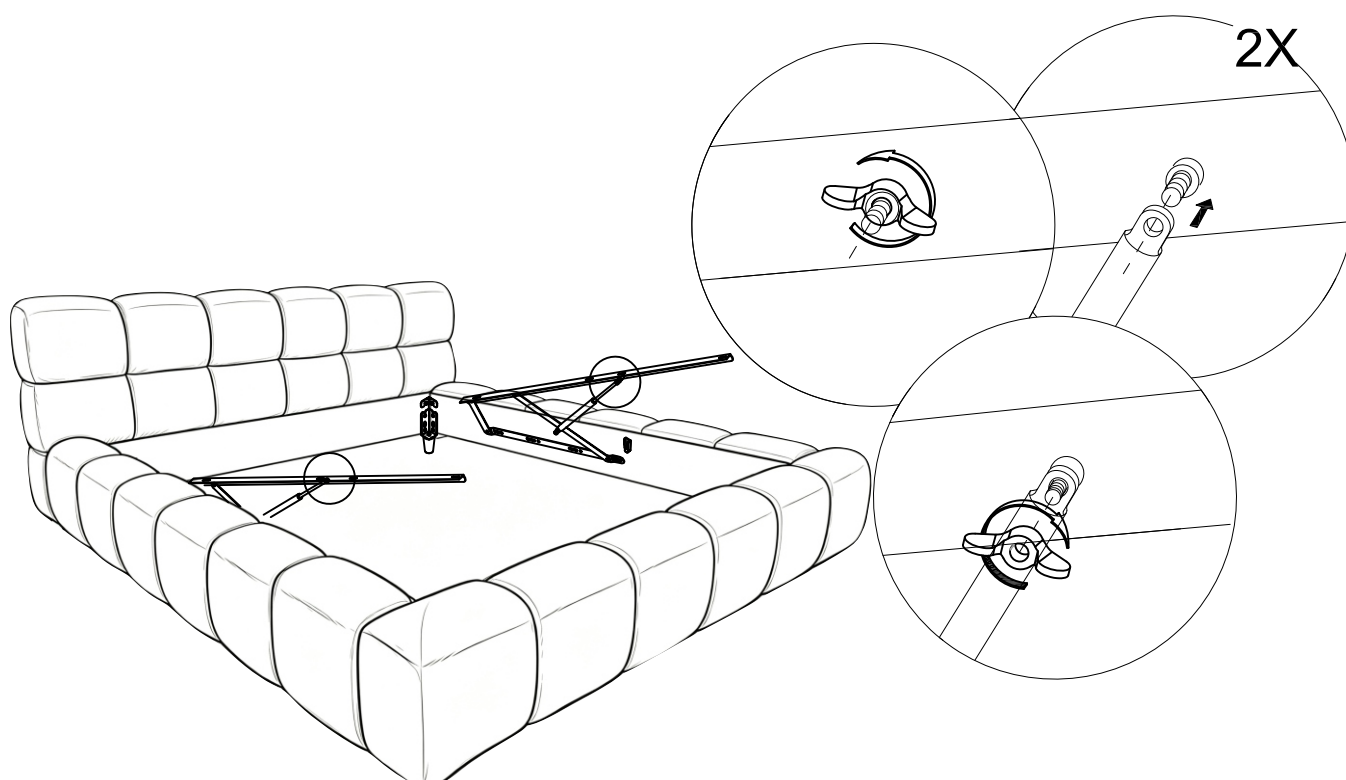


9

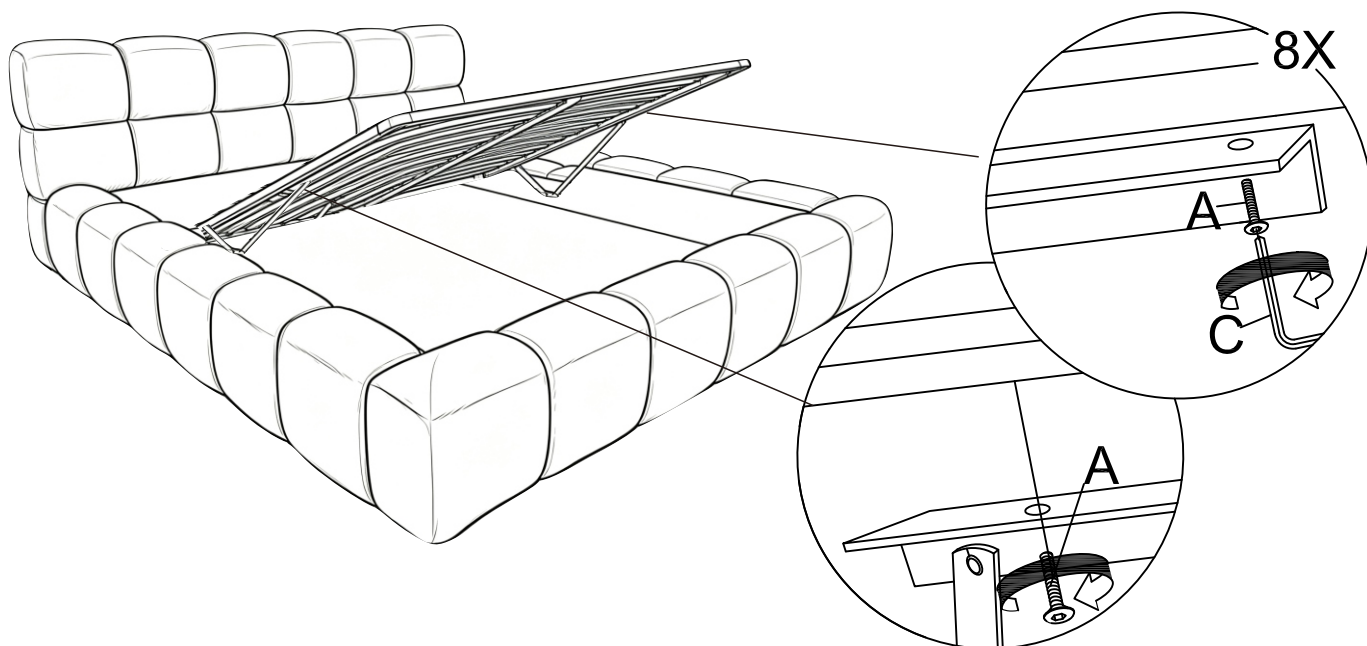

10

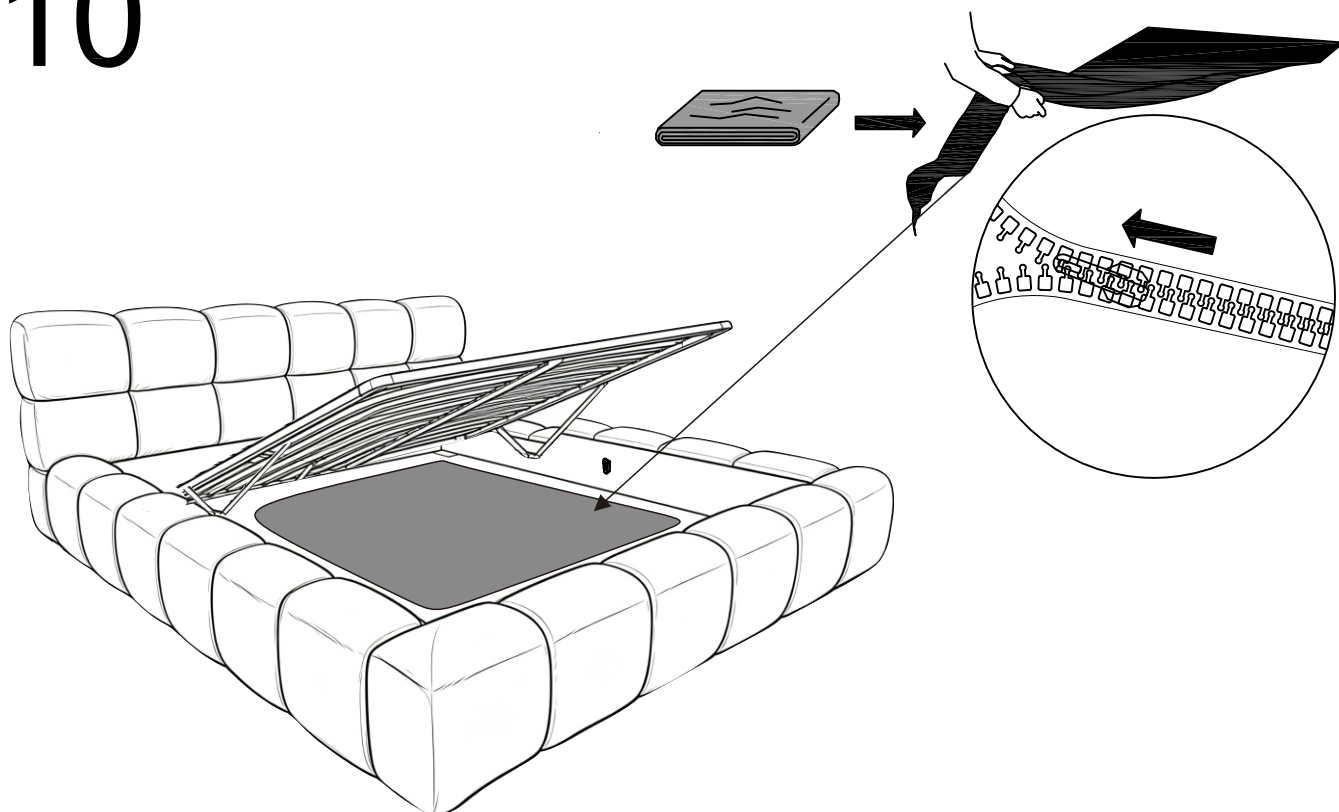

11

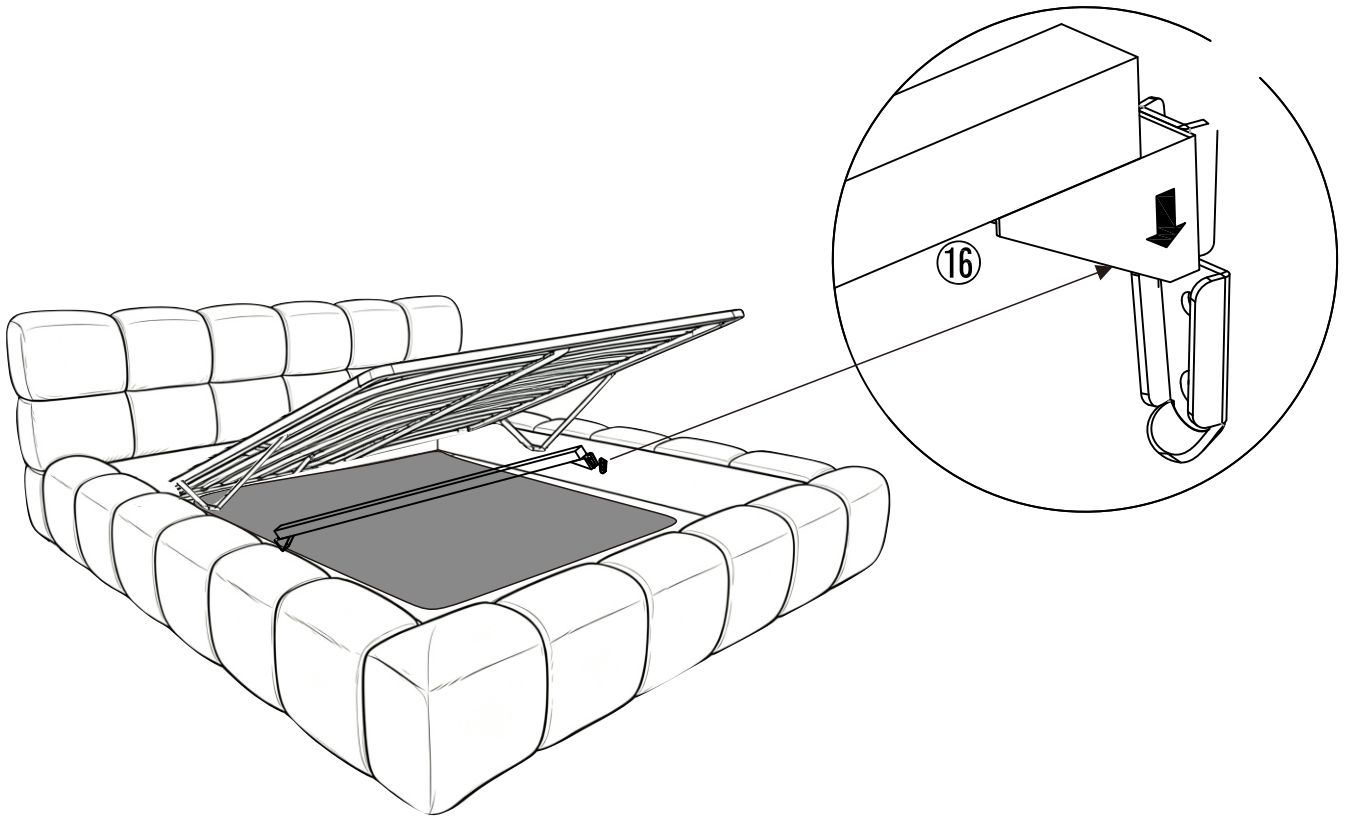

12

